



Numerical Control (CNC)

## **Specifications Manual (Hardware)**

### **M800V/M80V Series**

# Introduction

This manual describes the specifications of Mitsubishi Electric CNC.

Read this manual thoroughly and understand the product's functions and performance before use.

Supported models of this manual are as follows:

Supported models	Abbreviations in this manual
M800VW Series	M850VW, M830VW
M800VS Series	M850VS, M830VS
M80VW Series	M80VW
M80V Series	M80V TypeA, M80V TypeB

Abbreviations for model names used in this manual are as follows:

Abbreviations	Supported models
M800V, M800V Series	M800VW Series/M800VS Series
M80V, M80V Series	M80VW Series/M80V Series
M800V/M80V, M800V/M80V Series	M800VW Series/M800VS Series/M80VW Series/M80V Series
M8V, M8V Series	M800VW Series/M800VS Series/M80VW Series/M80V Series

To safely use this CNC unit, thoroughly study the "Precautions for Safety" before use.

Be sure to keep this manual on hand so that users can refer to it at any time.

Also refer to the manuals on "Manual List" as necessary.

## ■ Notes on reading this manual

(1) The characteristic values and numerical values without tolerances mentioned in this manual are representative values.

## ■ Details described in this manual

♦ In this manual, the following abbreviations might be used.

L system: Lathe system

M system: Machining center system

## Manual List

Manuals related to M800V/M80V Series are listed as follows.

These manuals are written on the assumption that all optional functions are added to the targeted model.

Some functions or screens may not be available depending on the machine or specifications set by MTB. (Confirm the specifications before use.)

The manuals issued by MTB take precedence over these manuals.

Manual	IB No.	Purpose and Contents
M800V/M80V Series Instruction Manual	IB-1501618	<ul style="list-style-type: none"> <li>♦ Operation guide for NC</li> <li>♦ Explanation for screen operation, etc.</li> </ul>
M800V/M80V Series Programming Manual (Lathe System) (1/2)	IB-1501619	<ul style="list-style-type: none"> <li>♦ G code programming for lathe system</li> <li>♦ Basic functions, etc.</li> </ul>
M800V/M80V Series Programming Manual (Lathe System) (2/2)	IB-1501620	<ul style="list-style-type: none"> <li>♦ G code programming for lathe system</li> <li>♦ Functions for multi-part system, high-accuracy function, etc.</li> </ul>
M800V/M80V Series Programming Manual (Machining Center System) (1/2)	IB-1501621	<ul style="list-style-type: none"> <li>♦ G code programming for machining center system</li> <li>♦ Basic functions, etc.</li> </ul>
M800V/M80V Series Programming Manual (Machining Center System) (2/2)	IB-1501622	<ul style="list-style-type: none"> <li>♦ G code programming for machining center system</li> <li>♦ Functions for multi-part system, high-accuracy function, etc.</li> </ul>
M800V/M80V Series Alarm/Parameter Manual	IB-1501623	<ul style="list-style-type: none"> <li>♦ Alarms</li> <li>♦ Parameters</li> </ul>

Manuals for MTBs (NC)

Manual	IB No.	Purpose and Contents
M800V/M80V Series Specifications Manual (Function)	IB-1501610	<ul style="list-style-type: none"> <li>♦ Model selection</li> <li>♦ Outline of various functions</li> </ul>
M800V/M80V Series Specifications Manual (Hardware)	IB-1501611	<ul style="list-style-type: none"> <li>♦ Model selection</li> <li>♦ Specifications of hardware unit</li> </ul>
M800VW/M80VW Series Connection and Setup Manual	IB-1501612	<ul style="list-style-type: none"> <li>♦ Detailed specifications of hardware unit</li> <li>♦ Installation, connection, wiring, setup (startup/adjustment)</li> </ul>
M800VS/M80V Series Connection and Setup Manual	IB-1501613	<ul style="list-style-type: none"> <li>♦ Detailed specifications of hardware unit</li> <li>♦ Installation, connection, wiring, setup (startup/adjustment)</li> </ul>
M800V/M80V Series PLC Development Manual	IB-1501614	<ul style="list-style-type: none"> <li>♦ Electrical design</li> <li>♦ I/O relation (assignment, setting, connection), field network</li> <li>♦ Development environment (PLC on-board, peripheral development environment), etc.</li> </ul>
M800V/M80V Series PLC Programming Manual (1/2)	IB-1501667	<ul style="list-style-type: none"> <li>♦ Electrical design</li> <li>♦ Sequence programming</li> <li>♦ Explanation for instructions, functions, and parameters</li> </ul>
M800V/M80V Series PLC Programming Manual (2/2)	IB-1501668	<ul style="list-style-type: none"> <li>♦ Electrical design</li> <li>♦ Sequence programming</li> <li>♦ Usage examples of instructions</li> </ul>
M800V/M80V Series PLC Interface Manual	IB-1501616	<ul style="list-style-type: none"> <li>♦ Electrical design</li> <li>♦ Interface signals between NC and PLC</li> </ul>
M800V/M80V Series Maintenance Manual	IB-1501617	<ul style="list-style-type: none"> <li>♦ Cleaning and replacement for each unit</li> <li>♦ Other items related to maintenance</li> </ul>

Manuals for MTBs (drive section)

Manual	IB No.	Contents
MDS-E/EH Series Specifications Manual	IB-1501226	<ul style="list-style-type: none"> <li>♦ Specifications for power supply regeneration type</li> </ul>
MDS-E/EH Series Instruction Manual	IB-1501229	<ul style="list-style-type: none"> <li>♦ Instruction for power supply regeneration type</li> </ul>
MDS-EJ/EJH Series Specifications Manual	IB-1501232	<ul style="list-style-type: none"> <li>♦ Specifications for regenerative resistor type</li> </ul>
MDS-EJ/EJH Series Instruction Manual	IB-1501235	<ul style="list-style-type: none"> <li>♦ Instruction for regenerative resistor type</li> </ul>
MDS-EM/EMH Series Specifications Manual	IB-1501238	<ul style="list-style-type: none"> <li>♦ Specifications for multi-hybrid, power supply regeneration type</li> </ul>
MDS-EM/EMH Series Instruction Manual	IB-1501241	<ul style="list-style-type: none"> <li>♦ Instruction for multi-hybrid, power supply regeneration type</li> </ul>
DATA BOOK	IB-1501252	<ul style="list-style-type: none"> <li>♦ Specifications of servo drive unit, spindle drive unit, motor, etc.</li> </ul>
MDS-EX-CVP Series Specifications and Instruction Manual	IB-1501587	<ul style="list-style-type: none"> <li>♦ Specifications and instruction for the power supply unit with large capacity</li> </ul>

Manuals for MTBs (Others)

Manual	No.	Purpose and Contents
GOT2000 Series User's Manual (Hardware)	SH-081194ENG	♦ Outline of hardware such as part names, external dimensions, installation, wiring, maintenance, etc. of GOTs
GOT2000 Series User's Manual (Utility)	SH-081195ENG	♦ Outline of utilities such as screen display setting, operation method, etc. of GOTs
GOT2000 Series User's Manual (Monitor)	SH-081196ENG	♦ Outline of each monitor function of GOTs
GOT2000 Series Connection Manual (Mitsubishi Electric Products)	SH-081197ENG	♦ Outline of connection types and connection method between GOT and Mitsubishi Electric connection devices
GT Designer3 (GOT2000) Screen Design Manual	SH-081220ENG	♦ Outline of screen design method using screen creation software GT Designer3
GOT2000/GOT1000 Series CC-Link Communication Unit User's Manual	IB-0800351	♦ Explanation for handling CC-Link communication unit (for GOT2000 series/GOT1000 series)
GX Developer Version 8 Operating Manual (Startup)	SH-080372E	♦ Explanation for system configuration, installation, etc. of PLC development tool GX Developer
GX Developer Version 8 Operating Manual	SH-080373E	♦ Explanation for operations using PLC development tool GX Developer
GX Converter Version 1 Operating Manual	IB-0800004	♦ Explanation for operations using data conversion tool GX Converter
GX Works2 Installation Instructions	BCN-P5999-0944	♦ Explanation for the operating environment and installation method of GX Works2
GX Works2 Version 1 Operating Manual (Common)	SH-080779ENG	♦ Explanation for the system configuration of GX Works2 and the functions common to Simple project and Structured project such as parameter setting, operation method for the online function
GX Works2 Version 1 Operating Manual (Simple Project)	SH-080780ENG	♦ Explanation for methods for such as creating and monitoring programs in Simple project of GX Works2
MELSEC-Q/L/F Structured Programming Manual (Fundamentals)	SH-080782ENG	♦ Explanation for programming methods, types of programming languages, etc. required to create structured programs
MELSEC-Q/L Structured Programming Manual (Application Functions)	SH-080784ENG	♦ Explanation for specifications and functions related to application functions which can be used in structured programs
GX Works2 Version 1 Operating Manual (Simple Project, Function Block)	SH-080984ENG	♦ Explanation for methods for such as creating function blocks, pasting function blocks to sequence programs, and operating FB library in Simple project of GX Works2
GX Works2 Version 1 Operating Manual (Structured Project)	SH-080781ENG	♦ Explanation for methods for such as creating and monitoring programs in Structured project of GX Works2
GX Works3 Installation Instructions	BCN-P5999-0391	♦ Explanation for the operating environment and installation method of GX Works3
MELSEC-Q CC-Link System Master/Local Module User's Manual	SH-080394E	♦ Explanation for system configuration, installation, wiring, etc. of master/local modules for CC-Link system
GOT2000 Series Connection Manual (Non-Mitsubishi Electric Products 1)	SH-081198ENG	♦ Explanation for connection types and connection method between GOT and other company's devices
GOT2000 Series Connection Manual (Non-Mitsubishi Electric Products 2)	SH-081199ENG	
GOT2000 Series Connection Manual (Microcomputers, MODBUS/Fieldbus Products, Peripherals)	SH-081200ENG	♦ Explanation for connection types and connection method between GOT and microcomputers, MODBUS/fieldbus products, peripherals
GT SoftGOT2000 Version1 Operating Manual	SH-081201ENG	♦ Explanation for system configuration, screen configuration and operation method of monitoring software GT SoftGOT2000
MELSEC iQ-R Programming Manual (CPU Module Instructions, Standard Functions/Function Blocks)	SH-081266ENG	♦ Explanation for instructions, general-purpose functions, and general-purpose function blocks required for programming the sequencer MELSEC iQ-R series

Reference Manual for MTBs

Manual	No.	Purpose and Contents
M800/M80 Series Smart safety observation Specification manual	BNP-C3072-022	♦ Explanation for smart safety observation function
M800/M80 Series CC-Link (Master/Local) Specification manual	BNP-C3072-089	♦ Explanation for CC-Link
M800/M80 Series PROFIBUS-DP Specification manual	BNP-C3072-118	♦ Explanation for PROFIBUS-DP communication function
M800/M80 Series Interactive cycle insertion (Customization) Specification manual	BNP-C3072-121-0003	♦ Explanation for interactive cycle insertion
M800/M80 Series EtherNet/IP Specifications manual	BNP-C3072-263	♦ Explanation for EtherNet/IP
M800/M80 Series CC-Link IE Field (Master/local) Specifications manual	BNP-C3072-283	♦ Explanation for CC-Link IE Field
M800/M80 Series GOT Connection Specifications manual	BNP-C3072-314	♦ Explanation for GOT connection
M800/M80 Series CC-Link IE Field Basic Specifications manual	BNP-C3072-337	♦ Explanation for CC-Link IE Field Basic
M800/M80 Series FL-net Specifications manual	BNP-C3072-368	♦ Explanation for FL-net
M800/M80 Series Synchronous Control Specifications manual	BNP-C3072-074	♦ Explanation for synchronous control
M800/M80 Series Multiple-Axis Synchronization Control Specifications manual	BNP-C3072-339	♦ Explanation for multiple-axis synchronization control

## Precautions for Safety

Always read this manual, related manuals and attached documents before installation, operation, programming, maintenance or inspection to ensure correct use. Understand all the conditions described in this manual before using the unit.

We rank the safety precautions into "DANGER", "WARNING" and "CAUTION" for the manuals issued by Mitsubishi Electric, including this manual.

 <b>DANGER</b> <b>When the user may be subject to imminent fatalities or major injuries if handling is mistaken.</b>
 <b>WARNING</b> <b>When the user may be subject to fatalities or major injuries if handling is mistaken.</b>
 <b>CAUTION</b> <b>When the user may be subject to medium or minor injuries or when only property damage may occur, if handling is mistaken.</b>

Note that even items ranked as "  CAUTION", may lead to serious consequences depending on the situation. All the items are important and must always be observed.

The following signs indicate prohibition and compulsory.

	<b>This sign indicates prohibited behavior (must not do).</b> <b>For example,  indicates "Keep fire away".</b>
--	---

	<b>This sign indicated a thing that is pompously (must do).</b> <b>For example,  indicates "it must be grounded".</b>
---	---

The meaning of each pictorial sign is as follows.

 <b>CAUTION</b>	 <b>CAUTION rotated object</b>	 <b>CAUTION HOT</b>	 <b>Danger Electric shock risk</b>	 <b>Danger explosive</b>
 <b>Prohibited</b>	 <b>Disassembly is prohibited</b>	 <b>KEEP FIRE AWAY</b>	 <b>General instruction</b>	 <b>Earth ground</b>

### For Safe Use

Mitsubishi Electric CNC is designed and manufactured solely for applications to machine tools to be used for industrial purposes.

Do not use this product in any applications other than those specified above, especially those which are substantially influential on the public interest or which are expected to have significant influence on human lives or properties.

 **DANGER**

Not applicable in this manual.

 **WARNING**

Not applicable in this manual.

 **CAUTION**

■ **Items related to product and manual**

-  **The items that are not described in this manual must be interpreted as "not possible".**
-  **This manual is written on the assumption that all the applicable functions are included. Some of them, however, may not be available for your NC system. Refer to the specifications issued by the machine tool builder before use.**
-  **Some screens and functions may differ depending on each NC system (or version), and some functions may not be possible. Please confirm the specifications before starting to use.**
-  **To protect the availability, integrity and confidentiality of the NC system against cyber-attacks including unauthorized access, denial-of-service (Dos) (\*1) attack, and computer virus from external sources via a network, take security measures such as firewall, VPN, and anti-virus software.**
-  **Mitsubishi Electric assumes no responsibility for any problems caused to the NC system by any type of cyber-attacks including DoS attack, unauthorized access and computer virus.**

(\*1) Denial-of-service (Dos) refers to a type of cyber-attack that disrupts services by overloading the system or by exploiting a vulnerability of the system.

■ **Items related to start up and maintenance**

-  **Follow the power specifications (input voltage range, frequency range, momentary power failure time range) described in this manual.**
-  **Follow the environment conditions (ambient temperature, humidity, vibration, atmosphere) described in this manual.**
-  **Follow the remote type machine contact input/output interface described in this manual. (Connect a diode in parallel with the inductive load or connect a protective resistor in serial with the capacitive load, etc.)**
-  **If the temperature rise detection function is invalidated with the parameters, the control could be disabled when the temperature is excessive. This could result in machine damage or personal injuries due to runaway axis, and could damage the device. Enable the detection function for normal use. The parameter for the temperature rise detection function will be validated forcibly when the NC unit is turned ON.**

## Treatment of waste

The following two laws will apply when disposing of this product. Considerations must be made to each law. The following laws are in effect in Japan. Thus, when using this product overseas, the local laws will have a priority. If necessary, indicate or notify these laws to the final user of the product.

- (1) Requirements for "Law for Promotion of Effective Utilization of Resources"
  - (a) Recycle as much of this product as possible when finished with use.
  - (b) When recycling, often parts are sorted into steel scraps and electric parts, etc., and sold to scrap contractors. Mitsubishi Electric recommends sorting the product and selling the members to appropriate contractors.
  
- (2) Requirements for "Law for Treatment of Waste and Cleaning"
  - (a) Mitsubishi Electric recommends recycling and selling the product when no longer needed according to item (1) above. The user should make an effort to reduce waste in this manner.
  - (b) When disposing a product that cannot be resold, it shall be treated as a waste product.
  - (c) The treatment of industrial waste must be commissioned to a licensed industrial waste treatment contractor, and appropriate measures, including a manifest control, must be taken.
  - (d) Batteries correspond to "primary batteries", and must be disposed of according to local disposal laws.

## Disposal



(Note) This symbol mark is for EU countries only.  
This symbol mark is according to the directive 2006/66/EC Article 20 Information for end-users and Annex II.

Your MITSUBISHI ELECTRIC product is designed and manufactured with high quality materials and components which can be recycled and/or reused.

This symbol means that batteries and accumulators, at their end-of-life, should be disposed of separately from your household waste.

If a chemical symbol is printed beneath the symbol shown above, this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This will be indicated as follows:

Hg: mercury (0,0005%), Cd: cadmium (0,002%), Pb: lead (0,004%)

In the European Union there are separate collection systems for used batteries and accumulators.

Please, dispose of batteries and accumulators correctly at your local community waste collection/recycling centre.

Please, help us to conserve the environment we live in!

## Trademarks

MELDAS, MELSEC, EZSocket, EZMotion, iQ Platform, MELSEC iQ-R, MELSOFT, GOT, CC-Link, CC-Link/LT, CC-Link IE, CC-Link IE/field, EcoMonitorLight and SLMP are either trademarks or registered trademarks of Mitsubishi Electric Corporation in Japan and/or other countries.

Ethernet is a registered trademark of Xerox Corporation in the United States and/or other countries.

Microsoft®, Windows®, SQL Server® and Access® are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

SD logo and SDHC logo are either registered trademarks or trademarks of LLC.

UNIX is a registered trademark of The Open Group in the United States and/or other countries.

Intel® and Pentium® are either trademarks or registered trademarks of Intel Corporation in the United States and/or other countries.

MODBUS® is either a trademark or a registered trademark of Schneider Electric USA, Inc. or the affiliated companies in Japan and/or other countries.

EtherNet/IP is a trademark of Open DeviceNet Vendor Association, Inc.

PROFIBUS-DP and PROFINET are either trademarks of Profibus International.

Oracle® is a registered trademark of Oracle Corporation, the subsidiaries, or the affiliated companies in the United States and /or other countries.

VNC is a registered trademark of RealVNC Ltd. in the United States and other countries.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

McAfee is a registered trademark or a trademark of McAfee, LLC or its subsidiaries in the United States and other countries.

Punchtap is licensed by EMUGE.

Other company and product names that appear in this manual are trademarks or registered trademarks of the respective companies.

## 本製品の取扱いについて

(日本語 /Japanese)

本製品は工業用 (クラス A) 電磁環境適合機器です。販売者あるいは使用者はこの点に注意し、住商業環境以外での使用をお願いいたします。

## Handling of our product

(English)

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## 본 제품의 취급에 대해서

(한국어 /Korean)

이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며 가정외의 지역에서 사용하는 것을 목적으로 합니다 .

# WARRANTY

Please confirm the following product warranty details before using Mitsubishi Electric CNC.

## **1. Warranty Period and Coverage**

Should any fault or defect (hereafter called "failure") for which we are liable occur in this product during the warranty period, we shall provide repair services at no cost through the distributor from which the product was purchased or through a Mitsubishi Electric service provider. Note, however that this shall not apply if the customer was informed prior to purchase of the product that the product is not covered under warranty. Also note that we are not responsible for any on-site readjustment and/or trial run that may be required after a defective unit is replaced.

### [Warranty Term]

The term of warranty for this product shall be twenty-four (24) months from the date of delivery of product to the end user, provided the product purchased from us in Japan is installed in Japan (but in no event longer than thirty (30) months, including the distribution time after shipment from Mitsubishi Electric or its distributor).

Note that, for the case where the product purchased from us in or outside Japan is exported and installed in any country other than where it was purchased; please refer to "2. Service in overseas countries" as will be explained.

### [Limitations]

- (1) The customer is requested to conduct an initial failure diagnosis by him/herself, as a general rule. It can also be carried out by us or our service provider upon the customer's request and the actual cost will be charged.
- (2) This warranty applies only when the conditions, method, environment, etc., of use are in compliance with the terms and conditions and instructions that are set forth in the instruction manual, user's manual, and the caution label affixed to the product, etc.
- (3) Even during the term of warranty, repair costs shall be charged to the customer in the following cases:
  - (a) a failure caused by improper storage or handling, carelessness or negligence, etc., or a failure caused by the customer's hardware or software problem
  - (b) a failure caused by any alteration, etc., to the product made by the customer without Mitsubishi Electric's approval
  - (c) a failure which may be regarded as avoidable, if the customer's equipment in which this product is incorporated is equipped with a safety device required by applicable laws or has any function or structure considered to be indispensable in the light of common sense in the industry
  - (d) a failure which may be regarded as avoidable if consumable parts designated in the instruction manual, etc. are duly maintained and replaced
  - (e) any replacement of consumable parts (including a battery, relay and fuse)
  - (f) a failure caused by external factors such as inevitable accidents, including without limitation fire and abnormal fluctuation of voltage, and acts of God, including without limitation earthquake, lightning, and natural disasters
  - (g) a failure which is unforeseeable under technologies available at the time of shipment of this product from our company
  - (h) any other failures which we are not responsible for or which the customer acknowledges we are not responsible for

## **2. Service in Overseas Countries**

If the customer installs the product purchased from us in his/her machine or equipment, and export it to any country other than where he/she bought it, the customer may sign a paid warranty contract with our local FA center.

This falls under the case where the product purchased from us in or outside Japan is exported and installed in any country other than where it was purchased.

For details please contact the distributor from which the customer purchased the product.

## **3. Exclusion of Loss in Opportunity and Secondary Loss from Warranty Liability**

Regardless of the gratis warranty term, Mitsubishi Electric shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi Electric.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi Electric products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi Electric products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

## **4. Changes in Product Specifications**

Specifications shown in our catalogs, manuals or technical documents are subject to change without notice.

## **5. Product Application**

- (1) For the use of this product, its applications should be those that may not result in a serious damage even if any failure or malfunction occurs in the product, and a backup or fail-safe function should operate on an external system to the product when any failure or malfunction occurs.
- (2) Mitsubishi Electric CNC is designed and manufactured solely for applications to machine tools to be used for industrial purposes.  
Do not use this product in any applications other than those specified above, especially those which are substantially influential on the public interest or which are expected to have significant influence on human lives or properties.

# Contents

<b>M800VW/M80VW Series Hardware</b> .....	<b>1</b>
<b>1 System Basic Configuration (M800VW/M80VW Series)</b> .....	<b>3</b>
1.1 System Basic Configuration Drawing.....	4
<b>2 General Connection Diagram (M800VW/M80VW Series)</b> .....	<b>5</b>
2.1 General Connection Diagram [M800VW].....	6
2.1.1 M800VW, Windows-based display.....	6
2.2 General Connection Diagram [M80VW].....	7
2.2.1 M80VW, Windows-based display.....	7
<b>3 List of Configuration (M800VW/M80VW Series)</b> .....	<b>9</b>
3.1 Control Unit [M800VW] .....	10
3.2 Control Unit [M80VW] .....	10
3.3 Display Unit [M800VW] .....	11
3.4 Display Unit [M80VW].....	11
3.5 Personal Computer Unit.....	11
3.6 Keyboard Unit .....	11
3.7 Operation Panel I/O Unit.....	12
3.8 Remote I/O Unit .....	13
3.9 Function Expansion Unit .....	14
3.10 Side Memory I/F Unit .....	14
3.11 Manual Pulse Generator .....	14
3.12 Synchronous Feed Encoder.....	14
3.13 Machine Operation Panel.....	15
3.14 Handy Terminal.....	15
3.15 Cable Connector Sets .....	16
3.16 Thermistor Set.....	16
3.17 Genuine Memory Card.....	16
3.18 Durable Parts .....	16
3.19 Replacements .....	16
3.20 List of Cables .....	17
3.21 System Type .....	18
<b>4 General Specifications (M800VW/M80VW Series)</b> .....	<b>19</b>
4.1 Environment Conditions [M800VW] .....	20
4.1.1 Environment Conditions inside the Operation Panel.....	20
4.1.2 Environment Conditions inside the Control Panel .....	22
4.1.3 24 VDC Stabilized Power Supply Selecting Conditions .....	24
4.2 Environment Conditions [M80VW] .....	25
4.2.1 Environment Conditions inside the Operation Panel.....	25
4.2.2 Environment Conditions inside the Control Panel .....	27
4.2.3 24 VDC Stabilized Power Supply Selecting Conditions .....	29
4.3 Control Unit [M800VW] .....	30
4.3.1 M830VW(FCU8-MU052)/M850VW(FCU8-MA051).....	30
4.4 Control Unit [M80VW] .....	32
4.4.1 FCU8-MU054 .....	32
4.5 Display Unit [M800VW] .....	34
4.5.1 15-type (FCU8-DU182-34).....	34
4.5.2 19-type (FCU8-DU193-75).....	36
4.5.3 19-type (FCU8-DU194-75).....	38
4.6 Display Unit [M80VW] .....	40
4.6.1 15-type (FCU8-DU182-36).....	40
4.6.2 19-type (FCU8-DU193-77).....	42
4.6.3 19-type (FCU8-DU194-77).....	44
4.7 Personal Computer Unit.....	46
4.7.1 Personal Computer Unit (FCU8-PC232).....	46
4.7.2 Built-in Disk of the Display Unit (FCU8-CF060G-1).....	47
4.8 Keyboard Unit .....	48
4.8.1 Keyboard for 15-type Display Unit (FCU8-KB083).....	48
4.9 Operation Panel I/O Unit.....	49
4.9.1 List of Units.....	49

4.9.2 FCU8-DX830/FCU8-DX834/FCU8-DX837 .....	50
4.10 Remote I/O Unit .....	53
4.10.1 List of Units .....	53
4.10.2 FCU8-DX220/FCU8-DX230/FCU8-DX231/FCU8-DX202/FCU8-DX213/ FCU8-DX213-1/FCU8-DX654/FCU8-DX654-1/FCU8-DX651/FCU8-DX408/ FCU8-DX409 .....	54
4.11 Function Expansion Unit.....	61
4.11.1 Encoder (Manual Pulse Generator) I/F Expansion (FCU8-EX544).....	61
4.11.2 CC-Link (FCU8-EX561) .....	62
4.11.3 PROFIBUS-DP (FCU8-EX563).....	63
4.11.4 CC-Link IE Field (FCU8-EX564) .....	64
4.11.5 EtherNet/IP (FCU8-EX565).....	65
4.11.6 FL-net (FCU8-EX568).....	66
4.11.7 Vibration Cutting Expansion Unit (FCU8-EX744).....	67
4.12 Side Memory I/F Unit .....	68
4.13 Manual Pulse Generator .....	70
4.13.1 5 V Manual Pulse Generator (UFO-01-2Z9) .....	70
4.13.2 12 V Manual Pulse Generator (HD60C).....	71
4.14 Synchronous Feed Encoder .....	72
4.14.1 Synchronous Feed Encoder (OSE-1024-3-15-68).....	72
4.15 Machine Operation Panel .....	74
4.15.1 Main Panels A/B (FCU8-KB921/FCU8-KB922/FCU8-KB925, FCU8-KB923/FCU8-KB924/FCU8-KB926) .....	74
4.15.2 Sub Panel A (FCU8-KB931/FCU8-KB941).....	78
4.16 Handy Terminal .....	79
4.17 Thermistor.....	81
4.17.1 Thermistor(PT3C-51F-M2).....	81
4.18 Exclusive SD Cards .....	82
4.19 Specifications and Precautions of USB/SD/LAN Interface .....	83
4.19.1 USB Interface (Personal Computer Unit, Side Memory I/F Unit) .....	83
4.19.2 SD Interface (Control Unit, Side Memory I/F Unit).....	84
4.19.3 LAN Interface (Control Unit, Personal Computer Unit) .....	84

<b>M800VS/M80V Series Hardware .....</b>	<b>85</b>
<b>1 System Basic Configuration (M800VS/M80V Series).....</b>	<b>87</b>
1.1 System Basic Configuration Drawing.....	88
<b>2 General Connection Diagram (M800VS/M80V Series) .....</b>	<b>89</b>
2.1 General Connection Diagram [M800VS].....	90
2.2 General Connection Diagram [M80V] .....	91
2.3 Differences in Connection Depending on the Operation Panel I/O Unit .....	93
2.4 Connecting a Pulse-controlled Inverter [M80V].....	94
<b>3 List of Configuration (M800VS/M80V Series) .....</b>	<b>95</b>
3.1 Control Unit [M800VS] .....	96
3.2 Control Unit [M80V].....	96
3.3 Display Unit [M800VS] .....	96
3.4 Display Unit [M80V].....	96
3.5 Keyboard Unit [M800VS].....	97
3.6 Keyboard Unit [M80V] .....	97
3.7 Operation Panel I/O Unit .....	98
3.8 Remote I/O Unit .....	99
3.9 Functional Safety Expansion Unit [M80V] .....	100
3.10 Function Expansion Unit .....	100
3.11 Manual Pulse Generator .....	100
3.12 Synchronous feed encoder .....	100
3.13 Machine Operation Panel.....	101
3.14 Handy Terminal.....	101
3.15 Cable Connector Sets .....	102
3.16 Thermistor Set.....	102
3.17 Genuine Memory Card .....	102
3.18 Durable Parts .....	102
3.19 Replacements .....	102
3.20 List of Cables .....	103
3.21 System Type .....	105
<b>4 General Specifications (M800VS/M80V Series) .....</b>	<b>107</b>
4.1 Environment Conditions [M800VS] .....	108
4.1.1 Installation Environment Conditions .....	108
4.1.2 24 VDC Stabilized Power Supply Selecting Conditions .....	111
4.2 Environment Conditions [M80V].....	112
4.2.1 Installation Environment Conditions .....	112
4.2.2 24 VDC Stabilized Power Supply Selecting Conditions .....	115
4.3 Control Unit [M800VS] .....	116
4.3.1 FCU8-MU551 / FCU8-MA551 .....	116
4.4 Control Unit [M80V].....	117
4.4.1 FCU8-MU521 / FCU8-MU522 .....	117
4.5 Display Unit [M800VS] .....	118
4.5.1 10.4-type (FCU8-DU142-31) .....	118
4.5.2 15-type (FCU8-DU182-31) .....	120
4.6 Display Unit [M80V].....	122
4.6.1 8.4-type (FCU8-DU122-12) .....	122
4.6.2 10.4-type (FCU8-DU142-32) .....	124
4.6.3 15-type (FCU8-DU182-32) .....	126
4.7 Keyboard Unit .....	128
4.7.1 Keyboard for 8.4-type Display Unit (FCU8-KB025) .....	128
4.7.2 Keyboard for 8.4-type Display Unit (FCU8-KB026) .....	129
4.7.3 Keyboard for 8.4-type Display Unit (FCU8-KB028) .....	130
4.7.4 Keyboard for 8.4-type Display Unit (FCU8-KB029) .....	131
4.7.5 Keyboard for 10.4-type Display Unit (FCU8-KB041) .....	132
4.7.6 Keyboard for 10.4-type Display Unit (FCU8-KB046) .....	133
4.7.7 Keyboard for 10.4-type Display Unit (FCU8-KB047) .....	134
4.7.8 Keyboard for 10.4-type Display Unit (FCU8-KB048) .....	135
4.7.9 Keyboard for 15-type Display Unit (FCU8-KB083) .....	136
4.8 Operation Panel I/O Unit .....	137
4.8.1 List of Units .....	137
4.8.2 FCU8-DX731/FCU8-DX750/FCU8-DX760/FCU8-DX761/FCU8-DX834 .....	138

4.9 Remote I/O Unit.....	142
4.9.1 List of Units .....	142
4.9.2 FCU8-DX220/FCU8-DX230/FCU8-DX231/FCU8-DX202/FCU8-DX213/ FCU8-DX213-1/FCU8-DX654/FCU8-DX654-1/FCU8-DX651/FCU8-DX408/ FCU8-DX409 .....	143
4.10 Functional Safety Expansion Unit.....	150
4.10.1 Functional Safety Expansion Unit (FCU8-EX134) .....	150
4.11 Function Expansion Unit.....	151
4.11.1 CC-Link (FCU8-EX561) .....	151
4.11.2 PROFIBUS-DP (FCU8-EX563).....	152
4.11.3 CC-Link IE Field (FCU8-EX564) .....	153
4.11.4 EtherNet/IP (FCU8-EX565).....	154
4.11.5 FL-net (FCU8-EX568).....	155
4.11.6 Vibration Cutting Expansion Unit (FCU8-EX744).....	156
4.11.7 Option Relay Unit (FCU8-EX704) .....	157
4.11.8 Option Relay Unit (FCU8-EX705).....	158
4.12 Manual Pulse Generator.....	159
4.12.1 5 V Manual Pulse Generator (UFO-01-2Z9) .....	159
4.12.2 12 V Manual Pulse Generator (HD60C).....	160
4.13 Synchronous Feed Encoder .....	161
4.13.1 Synchronous Feed Encoder (OSE-1024-3-15-68).....	161
4.14 Machine Operation Panel .....	163
4.14.1 Main Panels A/B (FCU8-KB921/FCU8-KB922/FCU8-KB925, FCU8-KB923/FCU8-KB924/FCU8-KB926) .....	163
4.14.2 Sub Panel A (FCU8-KB931/FCU8-KB941).....	167
4.15 Handy Terminal .....	168
4.16 Thermistor.....	170
4.16.1 Thermistor(PT3C-51F-M2).....	170
4.17 Exclusive SD Cards .....	171
4.18 Specifications and Precautions of USB/SD/LAN Interface .....	172
4.18.1 USB Interface (Memory I/F card) .....	172
4.18.2 SD Interface (Memory I/F card).....	173
4.18.3 LAN Interface (Control Unit).....	173

# **M800VW/M80VW Series Hardware**






---

## **System Basic Configuration (M800VW/M80VW Series)**

## 1.1 System Basic Configuration Drawing

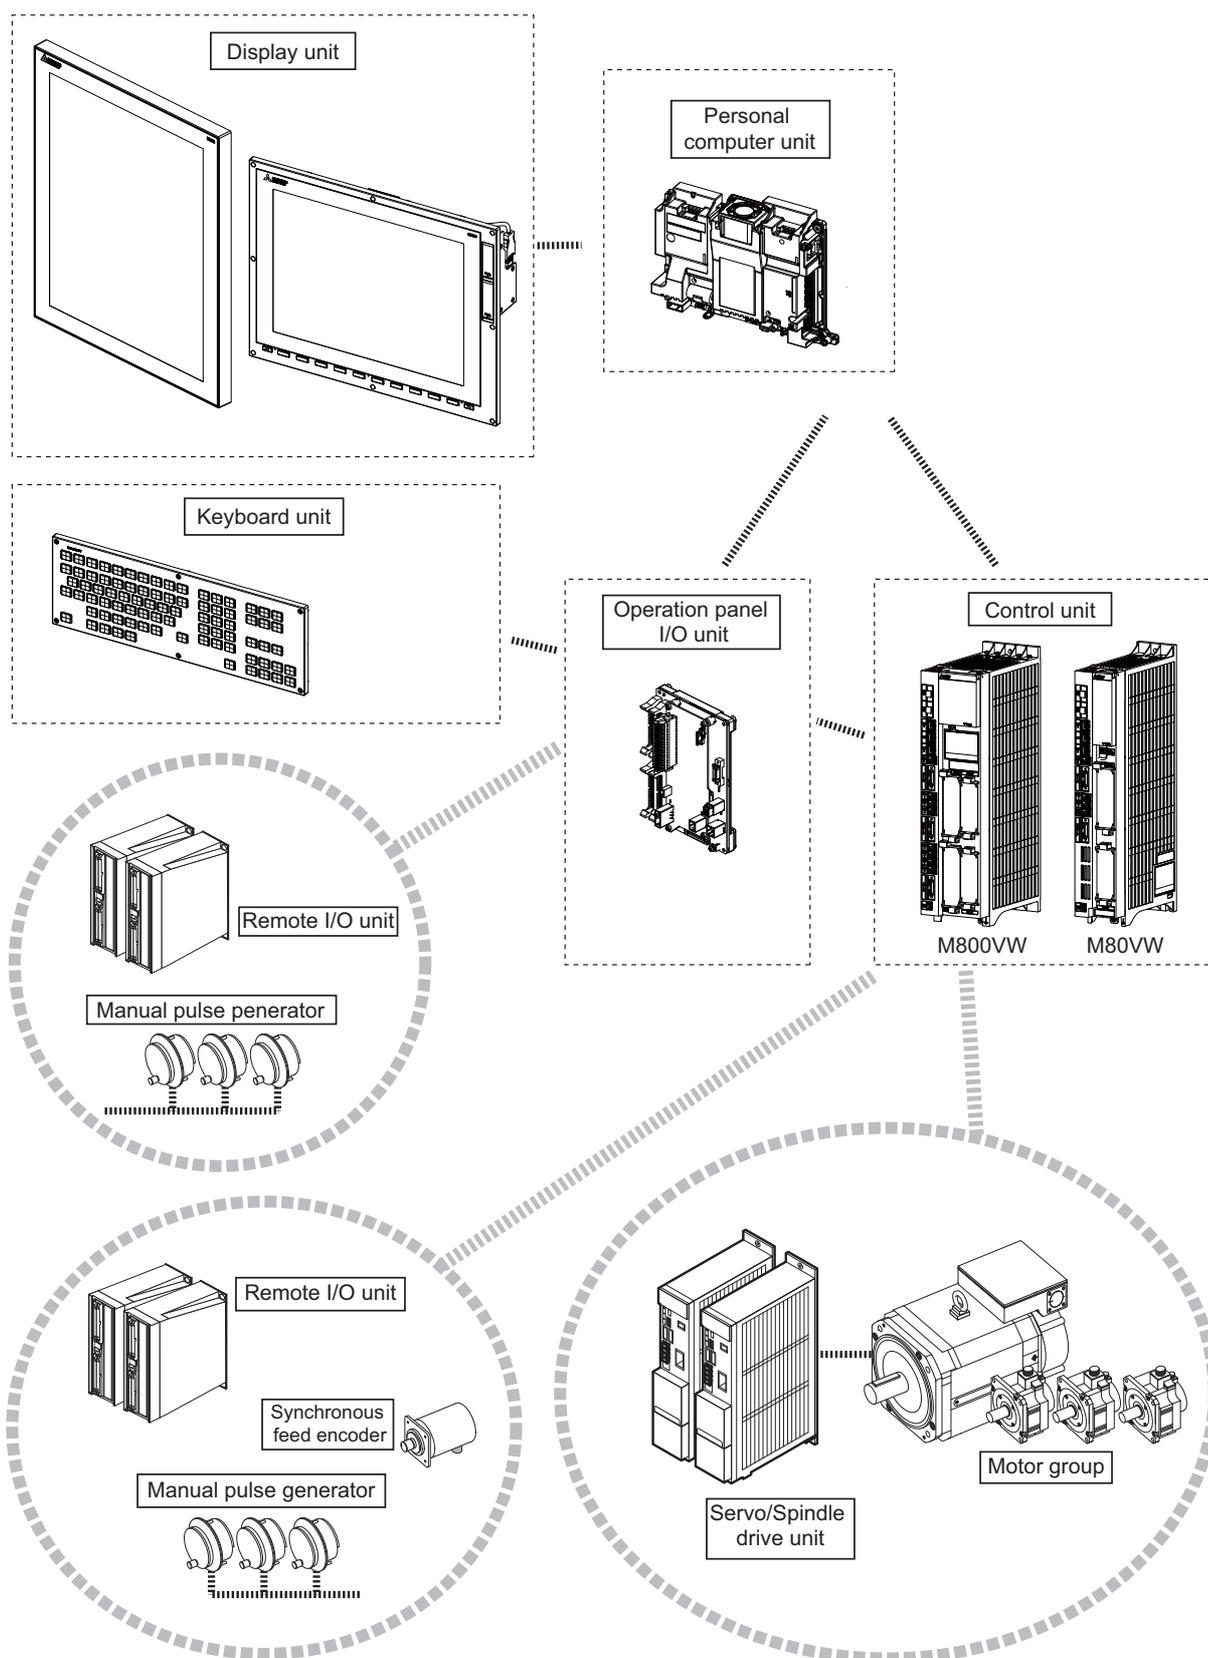

### Note

(1) For the drive unit configuration, refer to the instruction manual of the drive unit you use.


**General Connection Diagram  
(M800VW/M80VW Series)**

## 2.1 General Connection Diagram [M800VW]

### 2.1.1 M800VW, Windows-based display

⋯ Dotted lines indicate the sections prepared by the machine tool builder.

<> Angle brackets indicates attached cable of unit.

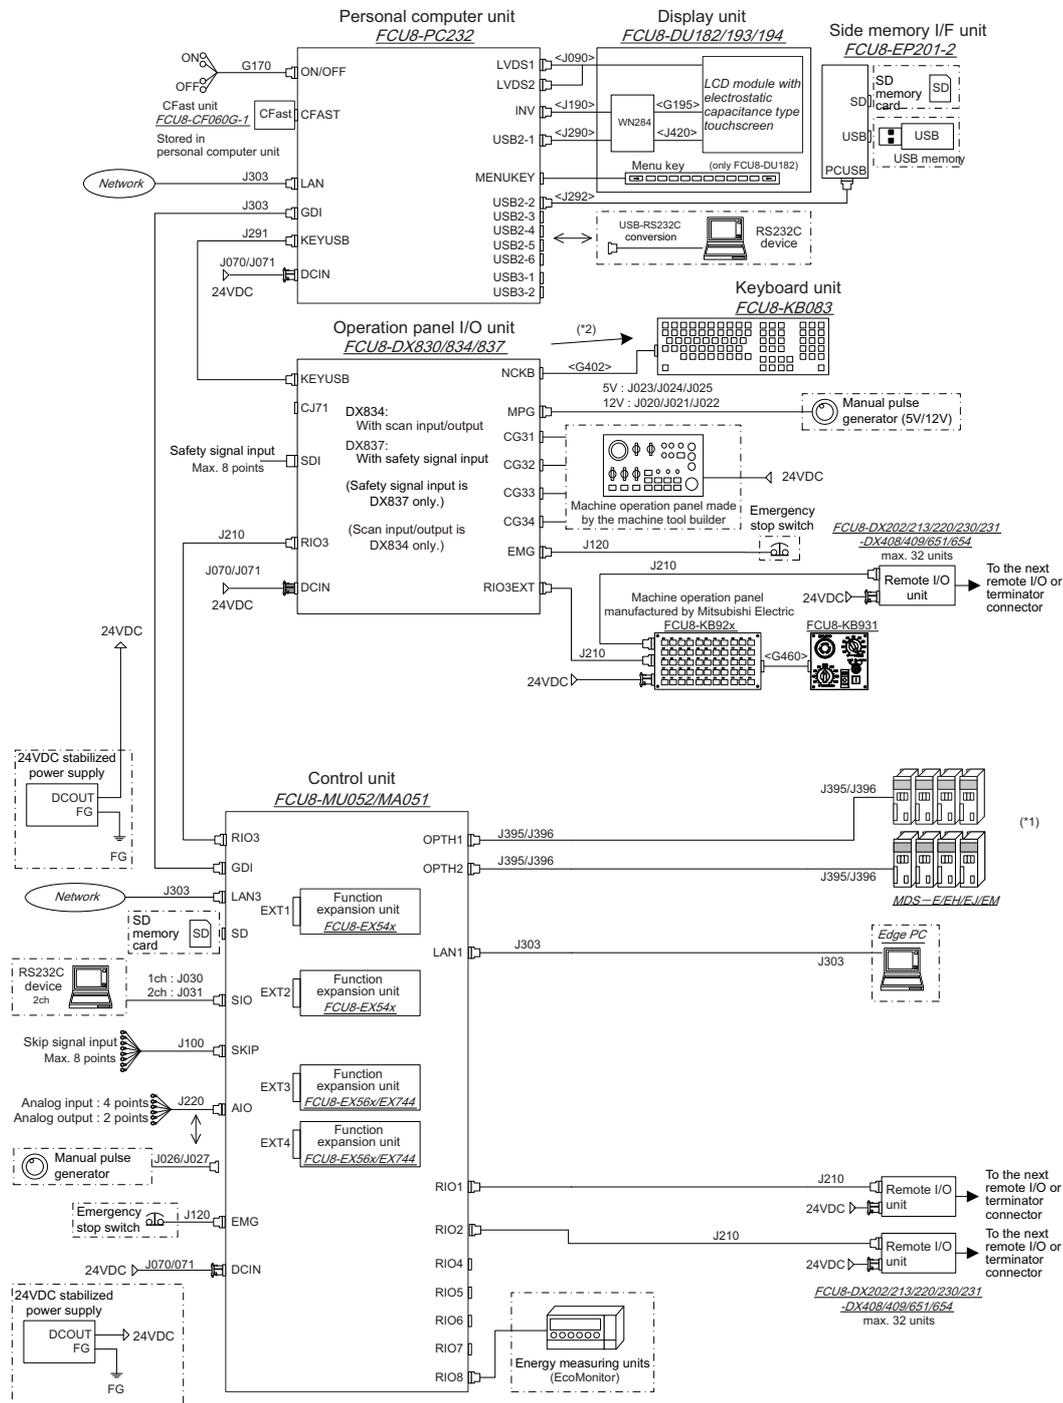


(\*1) For information on how to connect the drive unit, refer to the drive unit's manual.

(\*2) When using a keyboard unit, install the operation panel I/O unit on the back of the keyboard unit.

## 2.2 General Connection Diagram [M80VW]

### 2.2.1 M80VW, Windows-based display

⋯ Dotted lines indicate the sections prepared by the machine tool builder.  
 <> Angle brackets indicates attached cable of unit.

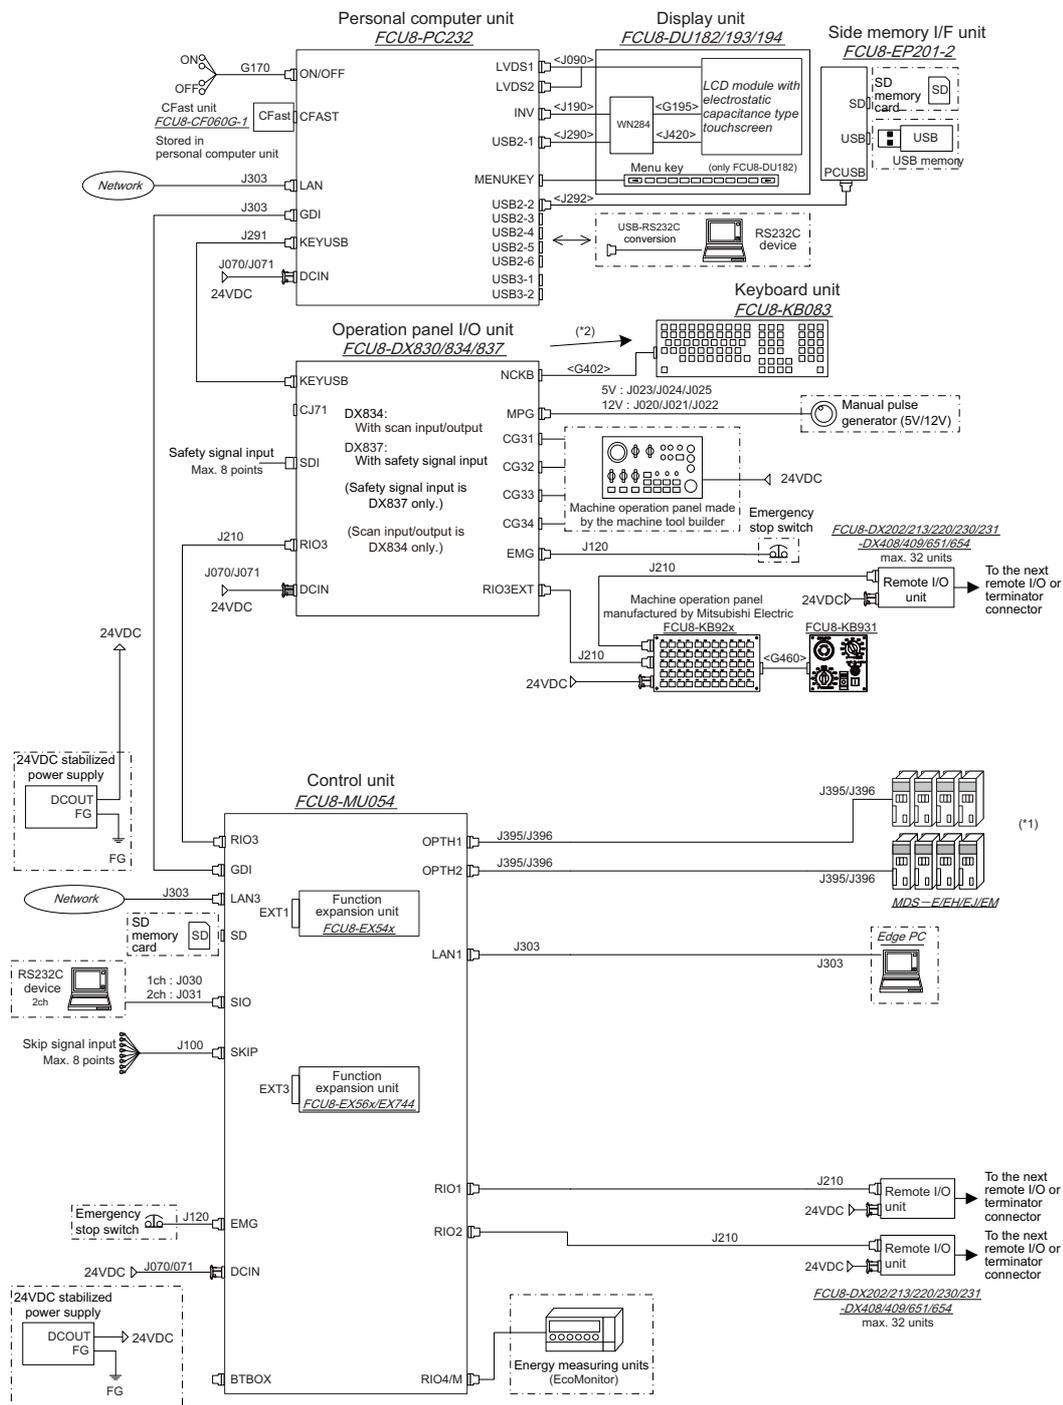

(\*1) For information on how to connect the drive unit, refer to the drive unit's manual.

(\*2) When using a keyboard unit, install the operation panel I/O unit on the back of the keyboard unit.

#### Note

- When the handle of handy terminal is used, connect ENC connector of G430 cable to MPG connector of the operation panel I/O unit.  
 Because the pin assignment of ENC connector of G430 is different from that of MPG connector of the operation panel I/O unit, conversion is required. The conversion cable needs to be prepared by the MTB.



## List of Configuration (M800VW/M80VW Series)

**3 List of Configuration (M800VW/M80VW Series)**

## 3.1 Control Unit [M800VW]

Classification	Type	Components	Remark
NC function For M830VW	FCU8-MU052	Main CPU card (non-compliant) 7SEG card SDHC: 1ch Back panel card Unit lid (Resin molded article) etc.	This unit is not compliant with either the Export Trade Control Order or Foreign Exchange Order.  G123 cable for EMG is attached.
NC function For M850VW	FCU8-MA051	Main CPU card (compliant) 7SEG card SDHC: 1ch Back panel card Unit lid (Resin molded article) etc.	This unit is compliant with the Foreign Exchange Order but not with the Export Trade Control Order.  G123 cable for EMG is attached.

**3.2 Control Unit [M80VW]**

Classification	Type	Components	Remark
NC function For M80VW	FCU8-MU054	Main CPU card (non-compliant) 7SEG card SDHC: 1ch Back panel card Unit lid (Resin molded article) etc.	This unit is not compliant with either the Export Trade Control Order or Foreign Exchange Order.  G123 cable for EMG is attached.

## 3 List of Configuration (M800VW/M80VW Series)

## 3.3 Display Unit [M800VW]

## 3.3 Display Unit [M800VW]

Classification	Type	Components	Remark
15-type color LCD touchscreen (XGA:1024*768)	FCU8-DU182-34	LCD panel Backlight I/F PCB Menu keys Escutcheon Base metal plate Cable Screw cap set	Personal computer unit is prepared at the same time. Built-in disk of the display unit is prepared at the same time. Front side memory I/F is normally equipped with the display unit (Windows-based display)
19-type color LCD touchscreen (SXGA:1024*1280)	FCU8-DU193-75	LCD panel Backlight I/F PCB Escutcheon Base metal plate Cable	Personal computer unit is prepared at the same time. Built-in disk of the display unit is prepared at the same time. Side memory I/F unit is separately prepared. (Windows-based display)
19-type color LCD touchscreen (SXGA:1280*1024)	FCU8-DU194-75	LCD panel Backlight I/F PCB Escutcheon Base metal plate Cable	Personal computer unit is prepared at the same time. Built-in disk of the display unit is prepared at the same time. Side memory I/F unit is separately prepared. (Windows-based display)

## 3.4 Display Unit [M80VW]

Classification	Type	Components	Remark
15-type color LCD touchscreen (XGA:1024*768)	FCU8-DU182-36	LCD panel Backlight I/F PCB Menu keys Escutcheon Base metal plate Cable Screw cap set	Personal computer unit is prepared at the same time. Built-in disk of the display unit is prepared at the same time. Front side memory I/F is normally equipped with the display unit (Windows-based display)
19-type color LCD touchscreen (SXGA:1024*1280)	FCU8-DU193-77	LCD panel Backlight I/F PCB Escutcheon Base metal plate Cable	Personal computer unit is prepared at the same time. Built-in disk of the display unit is prepared at the same time. Side memory I/F unit is separately prepared. (Windows-based display)
19-type color LCD touchscreen (SXGA:1280*1024)	FCU8-DU194-77	LCD panel Backlight I/F PCB Escutcheon Base metal plate Cable	Personal computer unit is prepared at the same time. Built-in disk of the display unit is prepared at the same time. Side memory I/F unit is separately prepared. (Windows-based display)

## 3.5 Personal Computer Unit

Classification	Type	Components	Remark
Personal computer unit	FCU8-PC232	PC board PC cooling FAN Unit lid (Resin molded article) etc.	
Built-in disk of the display unit	FCU8-CF060G-1	Windows OS/data storage	Windows10

## 3.6 Keyboard Unit

Classification	Type	Components	Remark
Keyboard for 15-type display unit Clear key	FCU8-KB083	Escutcheon, key switch G402 cable Screw cap set	Full keyboard (for M system/L system) (in tandem)

## 3.7 Operation Panel I/O Unit

Classification	Type	Components	Remark
DI 24 V/0 V common input [64 points] DO Source output [64 points]	FCU8-DX830	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 64-points source type (20 0 mA/point) Manual pulse generator input: 3ch Display unit I/F Keyboard unit I/F Emergency stop input Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 14, 20 to 22 RIO extensible stations: 5, 6, 15 to 19, 23 to 64 (*1)
DI 24 V/0 V common input [64 points] DO Source output [64 points] Scan input [64 points] Scan output [64 points]	FCU8-DX834	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 64-points source type (20 0 mA/point) Scan input: 64 points Scan output: 64 points Manual pulse generator input: 3ch Display unit I/F Keyboard unit I/F Emergency stop input Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 14, 20 to 22 RIO extensible stations: 5, 6, 15 to 19, 23 to 64 (*1)
DI 24 V/0 V common input [64 points] DO Source output [64 points] Safety DI 24 V/0 V common input [8 points]	FCU8-DX837	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 64-points source type (200 mA/point) Safety DI: 8-points 0 V common type Manual pulse generator input: 3ch Display unit I/F Keyboard unit I/F Emergency stop input Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 14, 20 to 22 RIO extensible stations: 5, 6, 15 to 19, 23 to 64 (*1)

(\*1) J291 cable is required for connection with the personal computer unit. (for windows-based display)

♦ DI: Digital input signals, DO: Digital output signals

## 3 List of Configuration (M800VW/M80VW Series)

## 3.8 Remote I/O Unit

## 3.8 Remote I/O Unit

Classification	Type	Components	Remark
DI 24 V/0 V common input [32 points] DO Source output [32 points]	FCU8-DX220	Base card RIO 2.0 connector set	DI: 32-points 24 V/0 V common type DO: 32-points source type (200 mA/point) Number of occupied stations: 1
DI 24 V/0 V common input [64 points] DO Source output [48 points]	FCU8-DX230	Base card RIO 2.0 connector set	DI: 64-points 24 V/0 V common type DO: 48-points source type (200 mA/point) Number of occupied stations: 2
DI 24 V/0 V common input [64 points] DO Source output [48 points] AO analog output [1 point]	FCU8-DX231	Base card RIO 2.0 connector set	DI: 64-points 24 V/0 V common type DO: 48-points source type (200 mA/point) AO: 1 point Number of occupied stations: 2
AI analog input [4 points] AO analog output [1 point]	FCU8-DX202	Base card RIO 2.0 connector set	AI: 4 points AO: 1 point Number of occupied stations: 1
DI 0 V common input [16 points] DO Source output (large capacity) [8 points]	FCU8-DX213	Base card RIO 2.0 connector set	DI: 16-points 0 V common type (3 mA/point) DO: 8-points source type (2 A/point) Number of occupied stations: 1
DI 0 V common input [16 points] DO Source output (large capacity) [8 points]	FCU8-DX213-1	Base card RIO 2.0 connector set	DI: 16-points 0 V common type (9 mA/point) DO: 8-points source type (2 A/point) Number of occupied stations: 1
Safety DI 0 V common input [8 points] Safety DO Source output (large capacity) [4 points]	FCU8-DX654	Base card RIO 2.0 connector set	Safety DI: 8-points 0 V common type (3 mA/point) Safety DO: 4-points source type (2A/point) Number of occupied stations: 2
Safety DI 0 V common input [8 points] Safety DO Source output (large capacity) [4 points]	FCU8-DX654-1	Base card RIO 2.0 connector set	Safety DI: 8-points 0 V common type (9 mA/point) Safety DO: 4-points source type (2 A/point) Number of occupied stations: 2
DI 24 V/0 V common input [32 points] DO Source output [32 points] Safety DI 0 V common input [8 points] (*1) Safety relay output [4 points] (*2)	FCU8-DX651	Base card Add-on card RIO 2.0 connector set	DI: 32-points 24 V/0 V common type DO: 32-points source type (200 mA/point) Safety DI: 8-points 0 V common type Safety relay: 4-points (non-voltage contact) Relay contact welding detection Number of occupied stations: 3
Thermistor input [12 points]	FCU8-DX408	Base card RIO 2.0 connector set	Thermistor input: 12 points Number of occupied stations: 3
Multi-analog input [4 points>(*3)	FCU8-DX409	Base card RIO 2.0 connector set	Multi-analog input: 4 points Number of occupied stations: 4

(\*1) Safety DI uses 16 points of terminal because of the duplication wiring.

(\*2) Safety relay output uses 8 points of terminal because of the duplication wiring.

(\*3) Voltage input, current input, thermocouple input and resistance temperature detector input are selected for each channel.

♦ DI: Digital input signals, DO: Digital output signals, AI: Analog input signals, AO: Analog output signals

### 3.9 Function Expansion Unit

[Connector: EXT1/EXT2 on the control unit]

Classification	Type	Components	Remark
Encoder (manual pulse generator) I/F expansion unit	FCU8-EX544	Encoder I/F PCB	Encoder input 1ch 5 V manual pulse generator input 2ch

[Connector: EXT3/EXT4 on the control unit]

Classification	Type	Components	Remark
CC-Link expansion unit	FCU8-EX561	CC-Link I/F PCB	CC-Link 1 ch
PROFIBUS-DP master unit	FCU8-EX563	PROFIBUS-DP I/F PCB	PROFIBUS-DP 1 ch
CC-Link IE Field Master/local unit	FCU8-EX564	Base card Add-on card	CC-Link IE Field 2 ch
EtherNet/IP scanner/adaptor unit	FCU8-EX565	Base card Add-on card	EtherNet/IP 1 ch (LAN1 only; LAN2 unavailable)
FL-net expansion unit	FCU8-EX568	Base card Add-on card	FL-net 1 ch (LAN1 only; LAN2 unavailable)
Vibration cutting expansion unit	FCU8-EX744	Base card	Vibration cutting function

### 3.10 Side Memory I/F Unit

Classification	Type	Components	Remark
Side memory I/F unit	FCU8-EP201-2	Side memory I/F PCB PCB J292 cable Structural member	SDHC: 1 ch USB2.0 1 ch USB communication (between side memory I/F PCB and personal computer) Unit lid (resin molded article), metal plate, etc. Exclusive for 19-type display unit

### 3.11 Manual Pulse Generator

Classification	Type	Components	Remark
5 V manual pulse generator	UFO-01-2Z9	UFO-01-2Z9 (Produced by NIDEC NEMICON)	Input: DC5 V 100 pulse/rev
12V manual pulse generator	HD60C	HD60C	Input: DC12 V 100 pulse/rev

### 3.12 Synchronous Feed Encoder

Classification	Type name	Components	Remark
Synchronous feed encoder	OSE1024-3-15-68	OSE1024-3-15-68	Input: DC5 V 1024 pulse/rev 6000 rpm, 68-square flange
Synchronous feed encoder	OSE1024-3-15-68-8	OSE1024-3-15-68-8	Input: DC5 V 1024 pulse/rev 8000 rpm, 68-square flange
Synchronous feed encoder	OSE1024-3-15-160	OSE1024-3-15-160	Input: DC5 V 1024 pulse/rev 6000 rpm, 160-square flange

### 3.13 Machine Operation Panel

Classification	Type name	Components	Remark
Main panel A (For 8.4-type/15-type display unit)	FCU8-KB921	Escutcheon, key switch Control card G054 cable, screw cap set	MITSUBISHI standard key layout (55 keys) (Standard specification A)
Main panel A (For 8.4-type/15-type display unit)	FCU8-KB922	Escutcheon, key switch Control card G054 cable, screw cap set	Custom specification, 55-key layout (Clear key top cover sold separately)
Main panel B (For 10.4-type display unit)	FCU8-KB923	Escutcheon, key switch Control card G054 cable, screw cap set	MITSUBISHI standard key layout (55 keys) (Standard specification A)
Main panel B (For 10.4-type display unit)	FCU8-KB924	Escutcheon, key switch Control card G054 cable, screw cap set	Custom specification, 55-key layout (Clear key top cover sold separately)
Main panel A (For 8.4-type/15-type display unit)	FCU8-KB925	Escutcheon, key switch Control card G054 cable, screw cap set	MITSUBISHI standard key layout (55 keys) (Standard specification B)
Main panel B (For 10.4-type display unit)	FCU8-KB926	Escutcheon, key switch Control card G054 cable, screw cap set	MITSUBISHI standard key layout (55 keys) (Standard specification B)
Sub panel A (Common for all display units)	FCU8-KB931	Escutcheon Emergency stop switch, override switch ON/OFF switch, screw cap set	MITSUBISHI standard switch specification (Standard specification A)
Sub panel A (Common for all display units)	FCU8-KB941	Escutcheon Emergency stop switch, override switch ON/OFF switch, screw cap set	MITSUBISHI standard switch specification (Standard specification B)
Clear key top set	N030C975G51/ N030C975G55	Clear key top cover (20 pieces/60 pieces)	
Set of labels for M7 standard key layout	N939A169G51	Labels for M7 standard key layout (1 sheet)	

### 3.14 Handy Terminal

Classification	Type name	Components	Remark
Handy terminal	HG1T-SB12UH- MK1346-L5		

### 3.15 Cable Connector Sets

Classification	Type name	Components	Remark
General I/O (For SKIP, SIO, MPG, AIO)	FCUA-CS000	Connector (10120-3000PE, 2 pcs.) Shell kit (10320-52F0-008, 2 pcs.)	
Emergency stop connector (For EMG)	005057-9403 0016020103 x 3 pcs.	Connector (50-57-9403), Contact (0016020103, 3 pcs.)	
Connector kit for RIO 2.0 unit	RIO2 CON	Connector (1-1318119-3, 2 pcs.), Contact (1318107-1, 8 pcs.), Connector (2-178288-3), Contact (1-175218-5, 3 pcs.)	
24 VDC power supply connector (For DCIN)	FCUA-CN220	Connector (2-178288-3), Contact (1-175218-5, 3 pcs.)	
DI/DO Connector (for operation panel I/O unit) (for remote I/O unit)	7940-6500SC x 4 pieces 3448-7940 x 4 pcs.	Connector (7940-6500SC, 4 pcs.), Strain relief (3448-7940, 4 pcs.)	
ON/OFF switch connector	005057-9404 0016020103 x 4 pcs.	Connector (50-57-9404), Contact (0016020103, 4 pcs.)	
THERMISTOR connector	37104-2165- 000FL 10P	Connector (37104-2165-000FL, 10 pieces)	

### 3.16 Thermistor Set

Classification	Type name	Components	Remark
Thermistor	PT3C-51F-M2 10P	Thermistor (PT3C-51F-M2, 10 pieces)	

### 3.17 Genuine Memory Card

Classification	Type name	Components	Remark
Exclusive SD cards for 1 GB	FCU8-SD001G	FCU8-SD001G	1 GB capacity
Exclusive SD cards for 4 GB	FCU8-SD004G	FCU8-SD004G	4 GB capacity

### 3.18 Durable Parts

Durable parts	Part type
Battery for control unit	Q6BAT BKO-C10811H03
Battery for personal computer unit	Q6BAT BKO-C10811H03
Cooling fan for personal computer unit	109P0424H3103

- ◆ Contact the Service Center, Sales Office or dealer for repairs or part replacement.

### 3.19 Replacements

Replacements	Part type	Manufacturer
Protection fuse for operation panel I/O unit	LM50	Daito Communication Apparatus Co., Ltd.
Protection fuse for FCU8-DX220/230/231	LM50	Daito Communication Apparatus Co., Ltd.
Protection fuse for FCU8-DX213/654/213-1/654-1	MP63	Daito Communication Apparatus Co., Ltd.
Pair of SD/USB covers for display unit	N031C089G51	-

## 3 List of Configuration (M800VW/M80VW Series)

## 3.20 List of Cables

## 3.20 List of Cables

[Cable relating to NC]

Type name	Application	Available cable length (m)	Max. cable length
FCUA-R050-xM	Wiring between synchronous encoder and control unit (straight, with connector) (for FCU8-EX544)	5	30 m
FCUA-R054-xM	Wiring between synchronous encoder and control unit (right angle, with connector) (for FCU8-EX544)	3, 5, 10, 15, 20	30 m
G071 LxM	24 VDC relay cable for machine operation panel	0.12, 0.5, 1	1 m
G123	Cable for emergency stop release	-	-
G170 LxM	ON/OFF switch cable (for wiring between ON/OFF switch and personal computer unit) (for windows-based display)	1 to 2, 3 to 5, 10 to 15	15 m
G430 LxM	Cable for connection to handy terminal	3, 5, 10	10 m
G460 LxM	Cable for machine operation panel (for wiring between main panel and sub panel)	0.5	0.5 m
J020 LxM	Manual pulse generator cable (12 V): 1 ch	1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J021 LxM	Manual pulse generator cable (12 V): 2 ch	1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J022 LxM	Manual pulse generator cable (12 V): 3 ch	1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J023 LxM	Manual pulse generator cable (5 V): 1 ch	1, 2, 3, 5, 7, 10, 15, 20	20 m
J024 LxM	Manual pulse generator cable (5 V): 2 ch	1, 2, 3, 5, 7, 10, 15, 20	20 m
J025 LxM	Manual pulse generator cable (5 V): 3 ch	1, 2, 3, 5, 7, 10, 15, 20	20 m
J026 LxM	Manual pulse generator cable (5 V): 1 ch (For connection to control unit)	1, 2, 3, 5, 7, 10, 15, 20	20 m (*)
J027 LxM	Manual pulse generator cable (5 V): 2 ch (For connection to control unit)	1, 2, 3, 5, 7, 10, 15, 20	20 m (*)
J030 LxM	RS-232C I/F cable: 1 ch	1, 2, 3, 5, 7, 10	15 m (*)
J031 LxM	RS-232C I/F cable: 2 ch	1, 2, 3, 5, 7, 10	15 m (*)
J070 LxM	24 VDC power cable	1, 2, 3, 5, 7, 10, 15	15 m
J071 LxM	24 VDC power cable (for long distance)	20	20 m
J100 LxM	SKIP input cable	1, 2, 3, 5, 7, 10, 15, 20	20 m
J120 LxM	Emergency stop cable	1, 2, 3, 5, 7, 10, 15, 20, 30	30 m
J121 LxM	Emergency stop cable for machine operation panel	1, 2, 3, 5, 7, 10, 15, 20, 30	30 m
J210 LxM	Remote I/O 2.0 communication cable	0.3, 1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J220 LxM	Analog output cable (for M800VW)	2, 3, 7	30 m
J221 LxM	Analog input/output cable (for remote I/O unit)	2, 3, 7	30 m
J291 LxM	Connection cable between personal computer unit and operation panel I/O unit	0.15, 0.5, 1	1 m
J303 LxM	LAN straight cable	1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J350 LxM	DI/DO cable (connectors at both ends)	1, 2, 3, 5	50m
J351 LxM	DI/DO cable (connector at one end)	3	50 m
J460 LxM	DI/DO cable (connectors at both ends)	1, 2, 3, 5	50 m
J461 LxM	DI/DO cable (connector at one end)	3	50 m
R2-TM	Terminator for remote I/O interface	-	-

**Note**

- (1) "x" in type columns indicate cable length (unit: m).
- (2) Lengths indicated with an asterisk (\*) in the max. cable length column indicate the maximum cable length when connecting via other unit.

## [Cable Relating to Drive Unit]

Type name	Application	Available cable length (m)	Max. cable length
CNP2E-1-xM	Motor side PLG cable Spindle side accuracy encoder TS5690 cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNP3EZ-2P-xM	Spindle side detector cable OSE-1024 cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNP3EZ-3P-xM	Spindle side detector cable OSE-1024 cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNV2E-8P-xM	For HG/HG-H, HQ/HQ-H motor side encoder cable (for D48/D51/D74)	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNV2E-9P-xM	For HG/HG-H, HQ/HQ-H motor side encoder cable (for D48/D51/D74)	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNV2E-D-xM	MDS-B-SD unit cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNV2E-HP-xM	MDS-B-HR unit cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
DG30-xM	Battery cable (for wiring between drive unit and battery box, between drive units)	0.3, 0.5, 1, 2, 3, 5, 7, 10	10 m
G380 LxM	Optical communication cable Wiring between drive units (outside panel)	5, 10, 12, 15, 20, 25, 30	30 m
J395 LxM	Optical communication cable Wiring between drive units (outside panel) Wiring between NC and-drive unit	3, 5, 7, 10	10 m
J396 LxM	Optical communication cable Wiring between drive units (inside panel)	0.2, 0.3, 0.5, 1, 2, 3, 5	10 m
MR-BKS1CBLx-MA1-H	<200V Series> Brake cable for HG96 load side angle	2, 3, 5, 7, 10	10 m
MR-BKS1CBLx-MA2-H	<200V Series> Brake cable for HG96 reverse load side angle	2, 3, 5, 7, 10	10 m
MR-BT6V2CBL LxM	Battery cable (MDS-EJ/EJH) (for wiring between drive units)	0.3, 1	1 m
MR-D05UDL3M-B	STO cable	3	3 m
MR-PWS1CBLx-MA1-H	<200V Series> Power cable for HG96 load side angle	2, 3, 5, 7, 10	10 m
MR-PWS1CBLx-MA2-H	<200V Series> Power cable for HG96 reverse load side angle	2, 3, 5, 7, 10	10 m
SH21 LxM	Power supply communication cable Backup unit communication cable	0.35, 0.5, 1, 2, 3	30 m

**Note**

- (1) "x" in type columns indicate cable length (unit: m).
- (2) Lengths indicated with an asterisk (\*) in the max. cable length column indicate the maximum cable length when connecting via other unit.

**3.21 System Type**

Series	Model name	System type	Control unit
M800VW Series	M850VW	FCA850U-V	FCU8-MA051-001
	M830VW	FCA830U-V	FCU8-MU052-001
M80VW Series	M80VW	FCA80U-V	FCU8-MU054-001

## General Specifications (M800VW/M80VW Series)

## 4.1 Environment Conditions [M800VW]

### 4.1.1 Environment Conditions inside the Operation Panel

Item	Unit name		Display unit	Personal computer unit
	Type		FCU8-DU182-34: (15-type) FCU8-DU193-75: (19-type) FCU8-DU194-75: (19-type)	FCU8-PC232
General specifications	Ambient temperature	During operation	0 to 58 °C	
		During storage	-20 to 60 °C	
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)	
		Short term	10 to 95% RH (with no dew condensation) (*1)	
	Vibration resistance		4.9 m/s <sup>2</sup> [0.5 G] or less	
	Shock resistance		29.4 m/s <sup>2</sup> [3 G] or less	
	Working atmosphere		No corrosive gases, dust or oil mist	
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level	
	Power supply voltage		FCU8-DU182-34: DC 12 V/5 V/3.3 V FCU8-DU193-75: DC 12 V/5 V FCU8-DU194-75: DC 12 V/5 V (Supplied from personal computer unit)	24 VDC
	Current consumption		24 V, 2.2 A	
	Maximum heating value	(W)	FCU8-DU182-34: 18 FCU8-DU193-75: 21 FCU8-DU194-75: 21	32
	Mass	(kg)	FCU8-DU182-34: 3.9 FCU8-DU193-75: 5.2 FCU8-DU194-75: 5.2	1.2
Outline dimensions W × H or W × H × D	(mm)	FCU8-DU182-34: 400 × 320 FCU8-DU193-75: 365 × 440 FCU8-DU194-75: 440 × 365	237 × 182 × 53.5	

(\*1) "Short term" means within one month.

#### Note

- For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.  
Refer to the manual of drive unit for details.
- When the display unit is mounted on an incline, the inclination angle to place the unit should follow below.  
15-type display unit: The inclination should be 30 degrees or less from the vertical direction.  
19-type display unit: The inclination should be 60 degrees or less from the vertical direction.

4 General Specifications (M800VW/M80VW Series)

4.1 Environment Conditions [M800VW]

Item	Unit name		Keyboard unit	Operation panel I/O unit	Machine operation panel
	Type		FCU8-KB083: (15-type/vertical arrangement)	FCU8-DX830/DX834/DX837	FCU8-KB921/KB922/KB925 FCU8-KB923/KB924/KB926 FCU8-KB931/KB941
General specifications	Ambient temperature	During operation	0 to 58 °C		
		During storage	-20 to 60 °C		
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)		
		Short term	10 to 95% RH (with no dew condensation)(*1)		
	Vibration resistance		4.9 m/s <sup>2</sup> [0.5 G] or less		
	Shock resistance		29.4 m/s <sup>2</sup> [3 G] or less		
	Working atmosphere		No corrosive gases, dust or oil mist		
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level		
	Power supply voltage		5 VDC (Supply from operation panel I/O unit )	24 VDC	24 VDC (*5)
	Current consumption		- (*2)	24 V, 0.3 A (*3)	0.3 A (*5)
	Maximum heating value	(W)	1	8 (*4)	7.2
	Mass	(kg)	1.5	0.4	FCU8-KB921/KB922/KB925: 1.1 FCU8-KB923/KB924/KB926: 1.2 FCU8-KB931/KB941: 0.5
	Outline dimensions W × H	(mm)	400 × 140	116 × 179	FCU8-KB921/KB922/KB925: 260 × 140 FCU8-KB923/KB924/KB926: 290 × 140 FCU8-KB931/KB941: 140 × 140

(\*1) "Short term" means within one month.

(\*2) The current consumption of the keyboard unit is included in that of the operation panel I/O unit.

(\*3) Current consumption for the I/O circuit needs to be separately calculated based on the number of points used and its load.

(\*4) For the heating value of the I/O circuit, calculate with the number of points used.

(\*5) 24 V power input is not required for FCU8-KB931/KB941.

**Note**

(1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.

Refer to the manual of drive unit for details.

## 4.1.2 Environment Conditions inside the Control Panel

Item	Unit name		Control unit
	Type		FCU8-MU052/MA051
General specifications	Ambient temperature	During operation	0 to 55 °C
		During storage	-20 to 60 °C
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)
		Short term	10 to 95% RH (with no dew condensation) (*1)
	Vibration resistance		4.9 m/s <sup>2</sup> [0.5 G] or less
	Shock resistance		29.4m/s <sup>2</sup> [3 G] or less
	Working atmosphere		No corrosive gases, dust or oil mist
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level
	Power supply voltage		24 VDC
	Current consumption		1.5 A
	Maximum heating value	(W)	16
	Mass	(kg)	1.9
	Outline dimensions W × H × D	(mm)	90 × 380 × 180

(\*1) "Short term" means within one month.

### Note

(1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.

Refer to the manual of drive unit for details.

4 General Specifications (M800VW/M80VW Series)

4.1 Environment Conditions [M800VW]

Item	Unit name		Remote I/O unit					
	Type		FCU8-DX220/ DX230/ DX231	FCU8-DX202	FCU8-DX213/ DX213-1/ DX654/ DX654-1	FCU8-DX408	FCU8-DX409	FCU8-DX651
General specifications	Ambient temperature	During operation	0 to 58 °C					
		During storage	-20 to 60 °C					
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)					
		Short term	10 to 95% RH (with no dew condensation) (*1)				10 to 85% RH (with no dew condensation) (*1)	
	Vibration resistance		4.9 m/s <sup>2</sup> or less					
	Shock resistance		29.4 m/s <sup>2</sup> or less					
	Working atmosphere		No corrosive gases, dust or oil mist					
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level					
	Power supply voltage		24 VDC					
	Current consumption		3.5 A (*2)	0.3 A	0.3A (*3)	0.1 A	0.2A	3.7 A (*2)
	Maximum heating value	(W)	8 (*4)			3	6 (*5)	8 (*4)
	Mass	(kg)	0.4			0.2	0.3	0.8
	Outline dimensions W × H × D	(mm)	40 × 175 × 133	40 × 175 × 119	40 × 175 × 130	40 × 175 × 109	40 × 175 × 130	104 × 175 × 115

(\*1) "Short term" means roughly within one month.

(\*2) This value includes the maximum value of DO external load current (3.2A).

(\*3) This value does not include DO external load current.

(\*4) For the heating value of the I/O circuit, calculate with the number of points used.

(\*5) The maximum value including the heating value of analog input circuit.

**Note**

(1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.

Refer to the manual of drive unit for details.

### 4.1.3 24 VDC Stabilized Power Supply Selecting Conditions

Consider the following characteristics for the stabilized power supply, and select the power supply that complies with laws, regulations, or safety standards of the country where the machine will be installed.

	Item	Specifications	Remarks
Output	Voltage	24 VDC	When the stabilized power supply and 24 VDC input unit are distant, select the stabilized power supply which is possible to set output voltage 24 VDC or more allowing for the influence of voltage down by the cable.
	Voltage fluctuation	±5%	
	Current	-	Calculate the current value as a reference of maximum current consumption for the unit which uses the power supply.
	Ripple noise	0.2 V (P-P)	
	Output holding time	min 20 ms	Output holding time is decided by loading ratio; however, the stabilized power supply which complies with the specification on the left must be selected during maximum loading.
	Overcurrent output shutoff function	-	Use a power supply having the overcurrent output shutoff function.

#### CAUTION

Using a stabilized power supply without overcurrent protection may cause the unit's failure due to miswiring of 24 V.

## 4.2 Environment Conditions [M80VW]

### 4.2.1 Environment Conditions inside the Operation Panel

Item	Unit name		Display unit	Personal computer unit
	Type		FCU8-DU182-36: (15-type) FCU8-DU193-77: (19-type) FCU8-DU194-77: (19-type)	FCU8-PC232
General specifications	Ambient temperature	During operation	0 to 58 °C	
		During storage	-20 to 60 °C	
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)	
		Short term	10 to 95% RH (with no dew condensation) (*1)	
	Vibration resistance		4.9 m/s <sup>2</sup> [0.5 G] or less	
	Shock resistance		29.4 m/s <sup>2</sup> [0.5 G] or less	
	Working atmosphere		No corrosive gases, dust or oil mist	
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level	
	Power supply voltage		FCU8-DU182-36: DC 12 V/5 V/3.3 V FCU8-DU193-77: DC 12 V/5 V FCU8-DU194-77: DC 12 V/5 V (Supplied from personal computer unit)	24 VDC
	Current consumption		24 V, 2.2 A	
	Maximum heating value	(W)	FCU8-DU182-36: 18 FCU8-DU193-77: 21 FCU8-DU194-77: 21	32
	Mass	(kg)	FCU8-DU182-36: 3.9 FCU8-DU193-77: 5.2 FCU8-DU194-77: 5.2	1.2
	Outline dimensions W × H or W × H × D	(mm)	FCU8-DU182-36: 400 × 320 FCU8-DU193-77: 365 × 440 FCU8-DU194-77: 440 × 365	237 × 182 × 53.5

(\*1) "Short term" means within one month.

#### Note

- For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.  
Refer to the manual of drive unit for details.
- When the display unit is mounted on an incline, the inclination angle to place the unit should follow below.  
15-type display unit: the inclination should be 30 degrees or less from the vertical direction.  
19-type display unit: the inclination should be 60 degrees or less from the vertical direction.

## 4 General Specifications (M800VW/M80VW Series)

## 4.2 Environment Conditions [M80VW]

Item	Unit name		Keyboard unit	Operation panel I/O unit	Machine operation panel
	Type		FCU8-KB083: (15-type/vertical arrangement)	FCU8-DX830/DX834/DX837	FCU8-KB921/KB922/KB925 FCU8-KB923/KB924/KB926 FCU8-KB931/KB941
General specifications	Ambient temperature	During operation	0 to 58 °C		
		During storage	-20 to 60°C		
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)		
		Short term	10 to 95% RH (with no dew condensation)(*1)		
	Vibration resistance		4.9 m/s <sup>2</sup> [0.5 G] or less		
	Shock resistance		29.4m/s <sup>2</sup> [3 G] or less		
	Working atmosphere		No corrosive gases, dust or oil mist		
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level		
	Power supply voltage		5 VDC (Supply from operation panel I/O unit )	24 VDC	24 VDC (*5)
	Current consumption		24 V, 0.3 A (*2)	24 V, 0.3 A (*3)	0.3 A (*5)
	Maximum heating value	(W)	1	8 (*4)	7.2
	Mass	(kg)	1.5	0.4	FCU8-KB921/KB922/KB925: 1.1 FCU8-KB923/KB924/KB926: 1.2 FCU8-KB931/KB941: 0.5
Outline dimensions W × H	(mm)	400140	116 × 179	FCU8-KB921/KB922/KB925: 260 × 140 FCU8-KB923/KB924/KB926: 290 × 140 FCU8-KB931/KB941: 140 × 140	

(\*1) "Short term" means within one month.

(\*2) The current consumption of the keyboard unit is included in that of the operation panel I/O unit.

(\*3) Current consumption for the I/O circuit needs to be separately calculated based on the number of points used and its load.

(\*4) For the heating value of the I/O circuit, calculate with the number of points used.

(\*5) 24 V power input is not required for FCU8-KB931/KB941.

### Note

(1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.

Refer to the manual of drive unit for details.

## 4.2.2 Environment Conditions inside the Control Panel

Item	Unit name		Control unit
	Type		FCU8-MU054
General specifications	Ambient temperature	During operation	0 to 55°C
		During storage	-20 to 60°C
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)
		Short term	10 to 95% RH (with no dew condensation) (*1)
	Vibration resistance		4.9 m/s <sup>2</sup> [0.5 G] or less
	Shock resistance		29.4 m/s <sup>2</sup> [3 G] or less
	Working atmosphere		No corrosive gases, dust or oil mist
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level
	Power supply voltage		24 VDC
	Current consumption		1.25 A
	Maximum heating value	(W)	16
	Mass	(kg)	2.0
	Outline dimensions W × H × D	(mm)	60 × 380 × 180

(\*1) "Short term" means within one month.

#### Note

- (1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.  
Refer to the manual of drive unit for details.

4 General Specifications (M800VW/M80VW Series)

4.2 Environment Conditions [M80VW]

Item	Unit name		Remote I/O unit					
	Type		FCU8-DX220/ DX230/ DX231	FCU8-DX202	FCU8-DX213/ DX213-1/ DX654/ DX654-1	FCU8-DX408	FCU8-DX409	FCU8-DX651
General specifications	Ambient temperature	During operation	0 to 58 °C					
		During storage	-20 to 60 °C					
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)					
		Short term	10 to 95% RH (with no dew condensation) (*1)					10 to 85% RH (with no dew condensation) (*1)
	Vibration resistance		4.9 m/s <sup>2</sup> or less					
	Shock resistance		29.4 m/s <sup>2</sup> or less					
	Working atmosphere		No corrosive gases, dust or oil mist					
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level					
	Power supply voltage		24 VDC					
	Current consumption		3.5 A (*2)	0.3 A	0.3A (*3)	0.1 A	0.2A	3.7 A (*2)
	Maximum heating value	(W)	8 (*4)			3	6 (*5)	8 (*4)
	Mass	(kg)	0.4			0.2	0.3	0.8
	Outline dimensions W × H × D	(mm)	40 × 175 × 133	40 × 175 × 119	40 × 175 × 130	40 × 175 × 109	40 × 175 × 130	104 × 175 × 115

(\*1) "Short term" means roughly within one month.

(\*2) This value includes the maximum value of DO external load current (3.2A).

(\*3) This value does not include DO external load current.

(\*4) For the heating value of the I/O circuit, calculate with the number of points used.

(\*5) The maximum value including the heating value of analog input circuit.

**Note**

(1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.

Refer to the manual of drive unit for details.

### 4.2.3 24 VDC Stabilized Power Supply Selecting Conditions

Consider the following characteristics for the stabilized power supply, and select the power supply that complies with laws, regulations, or safety standards of the country where the machine will be installed.

	Item	Specifications	Remarks
Output	Voltage	24 VDC	When the stabilized power supply and 24 VDC input unit are distant, select the stabilized power supply which is possible to set output voltage 24 VDC or more allowing for the influence of voltage down by the cable.
	Voltage fluctuation	±5%	
	Current	-	Calculate the current value as a reference of maximum current consumption for the unit which uses the power supply.
	Ripple noise	0.2 V (P-P)	
	Output holding time	min 20 ms	Output holding time is decided by loading ratio; however, the stabilized power supply which complies with the specification on the left must be selected during maximum loading.
	Overcurrent output shutoff function	-	Use a power supply having the overcurrent output shutoff function.


#### CAUTION

Using a stabilized power supply without overcurrent protection may cause the unit's failure due to miswiring of 24 V.


### 4.3 Control Unit [M800VW]

#### 4.3.1 M830VW(FCU8-MU052)/M850VW(FCU8-MA051)

#### Outline dimensions

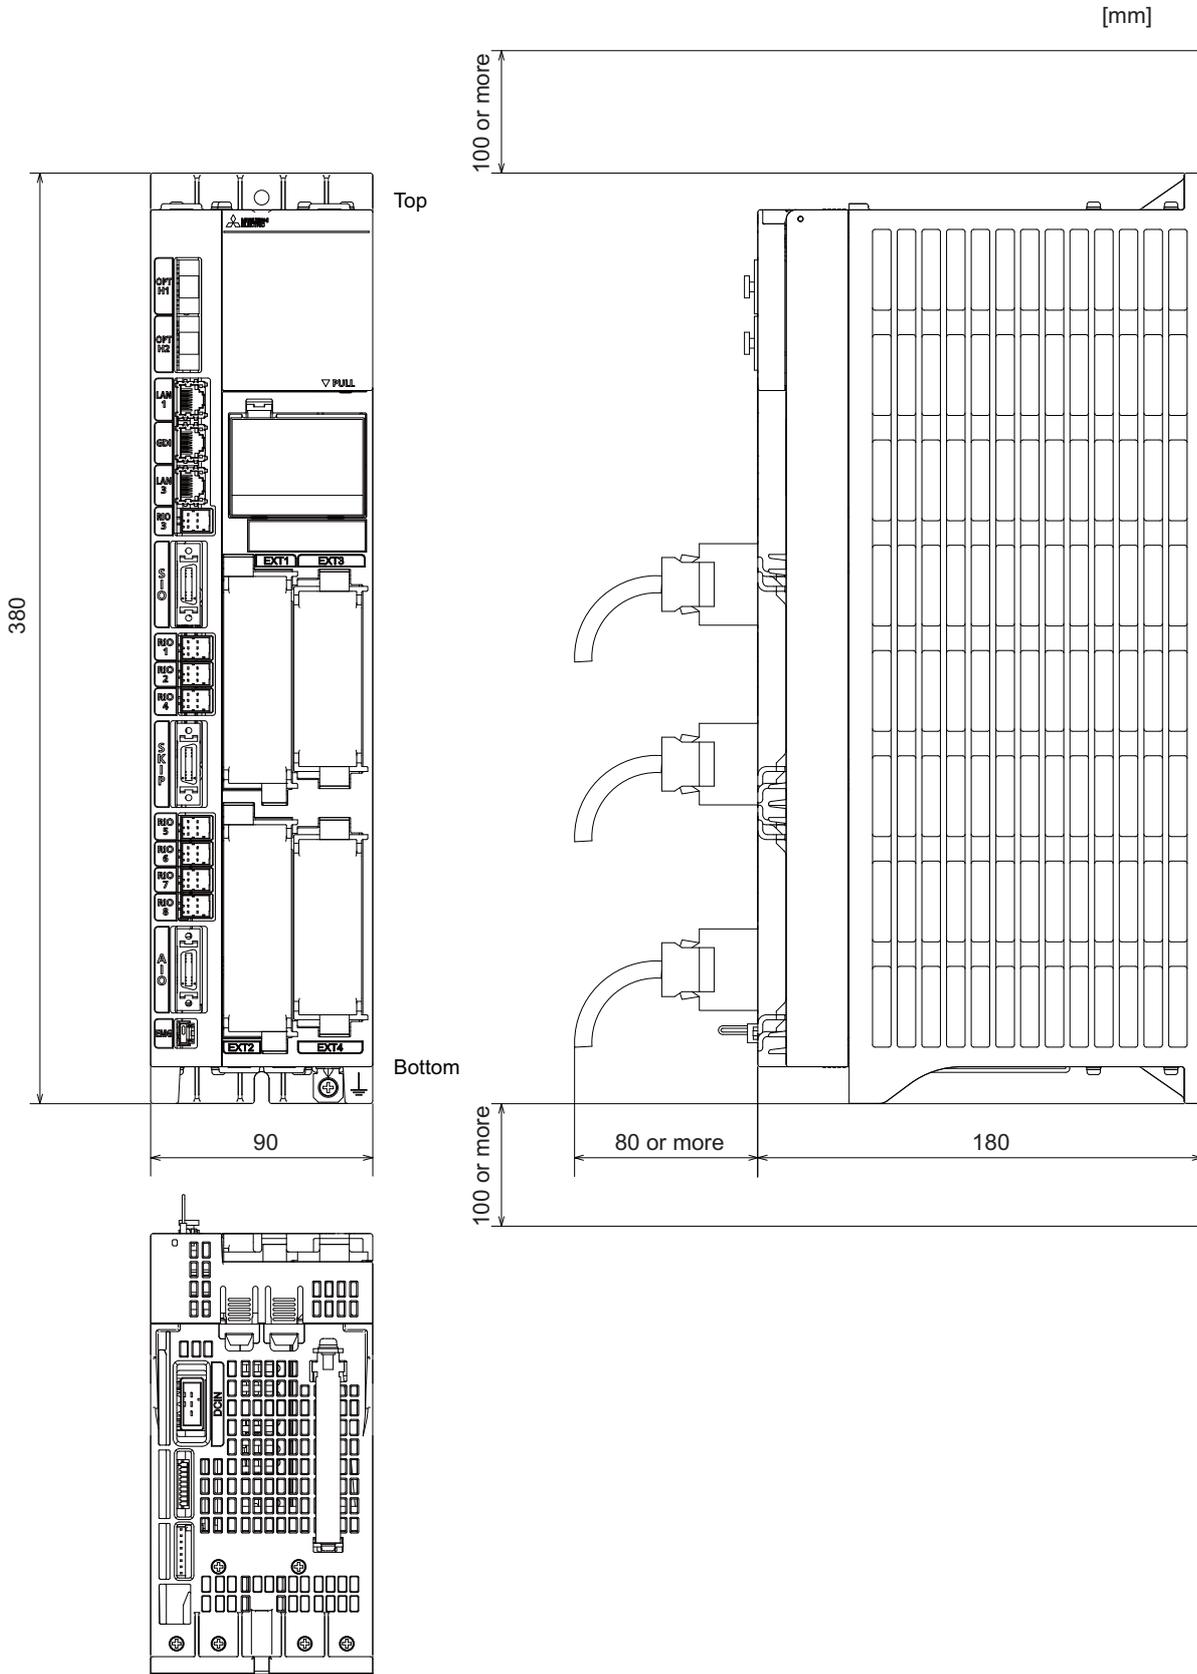


Installation dimensions

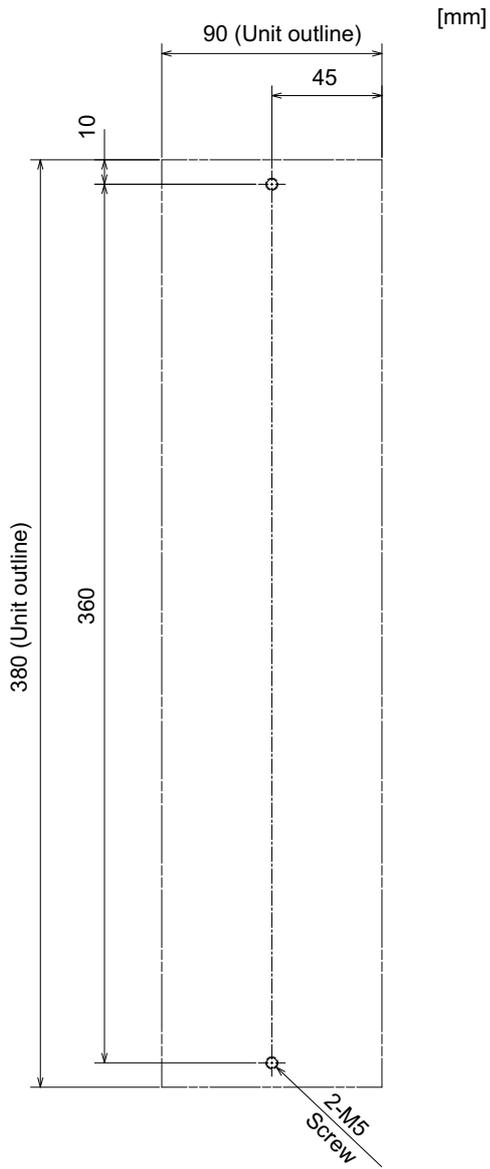


## 4.4 Control Unit [M80VW]

### 4.4.1 FCU8-MU054

#### Outline dimensions

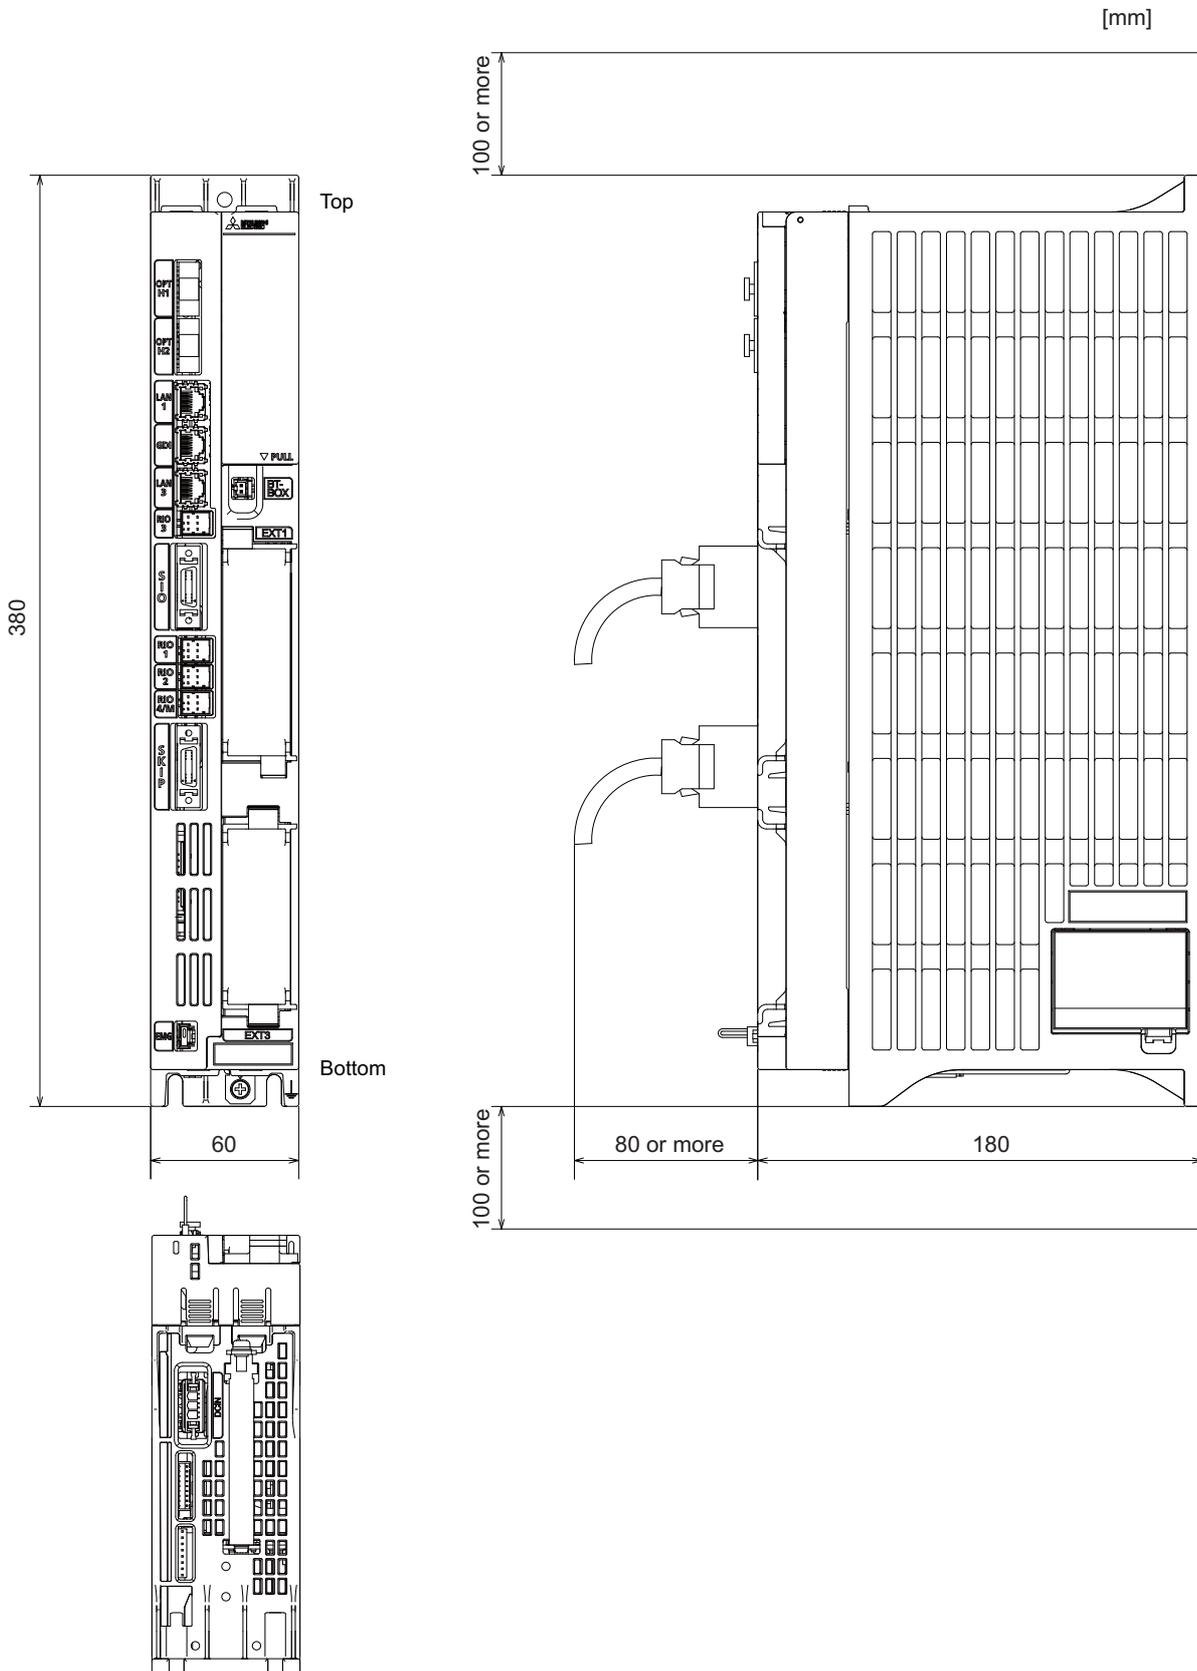


Installation dimensions

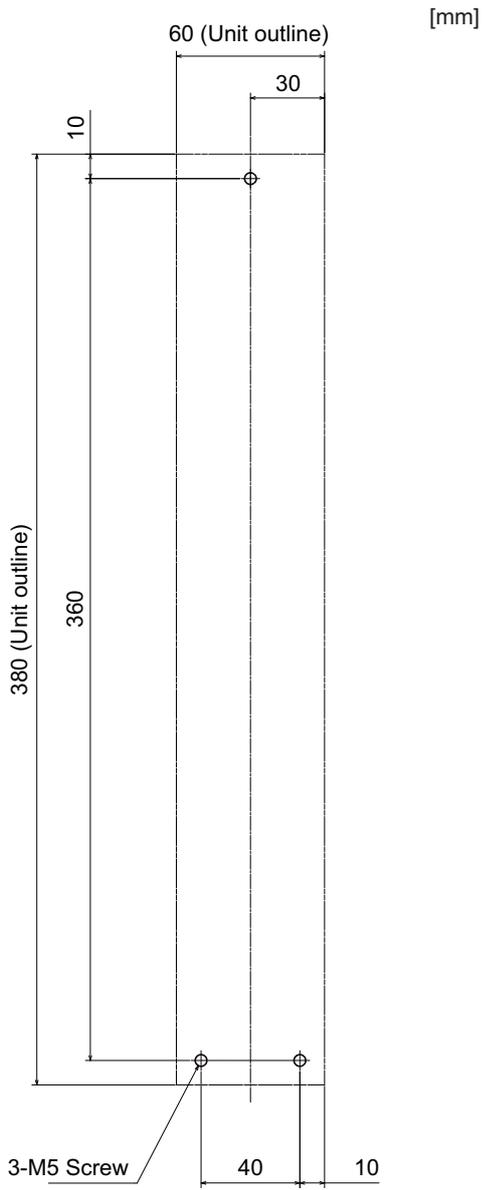

## 4.5 Display Unit [M800VW]

### 4.5.1 15-type (FCU8-DU182-34)

#### Outline dimensions

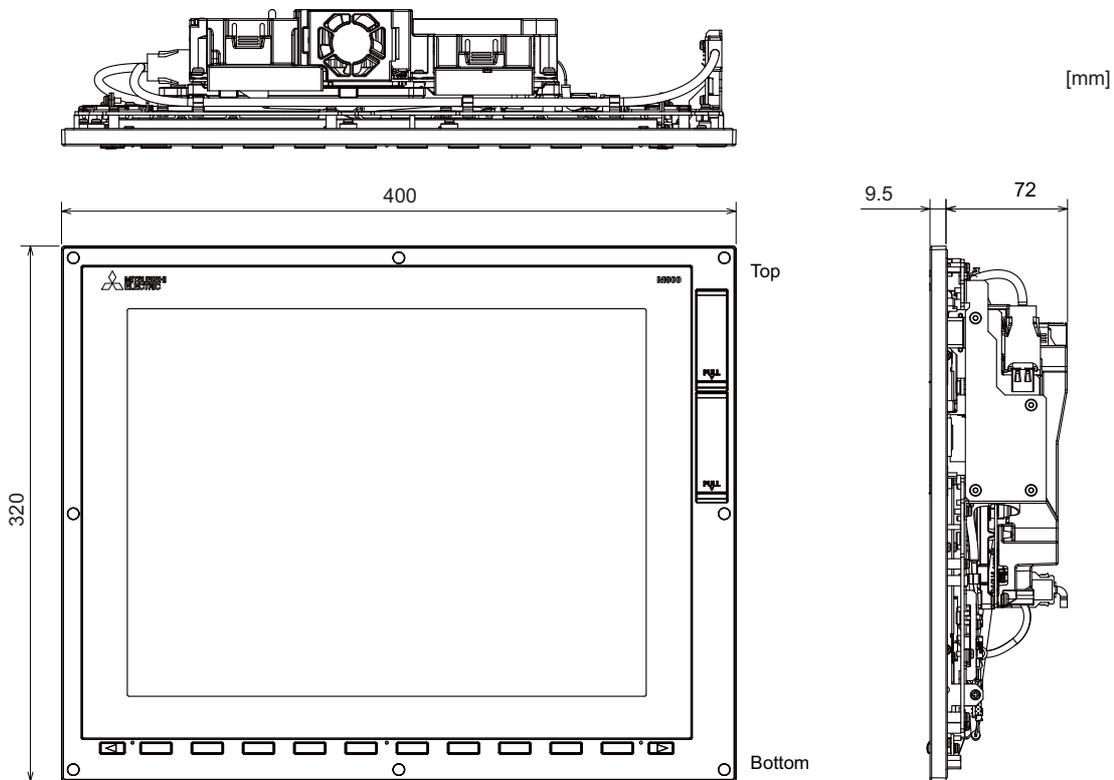


#### Note

(1) The figure above shows the state with the personal computer unit mounted.



### 4.5.2 19-type (FCU8-DU193-75)


#### Outline dimensions

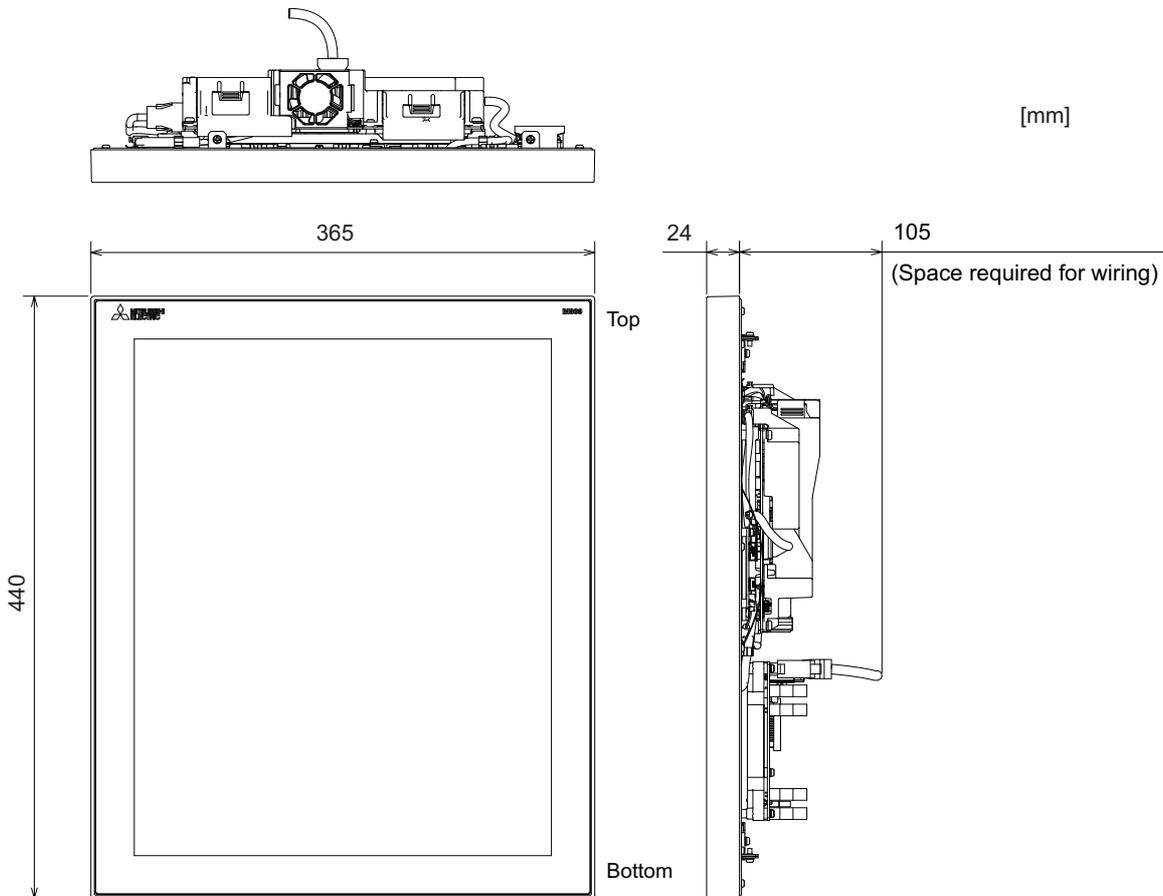

#### Note


(1) The figure above shows the state with the personal computer unit and the operation panel I/O unit mounted.

Panel cut dimensions

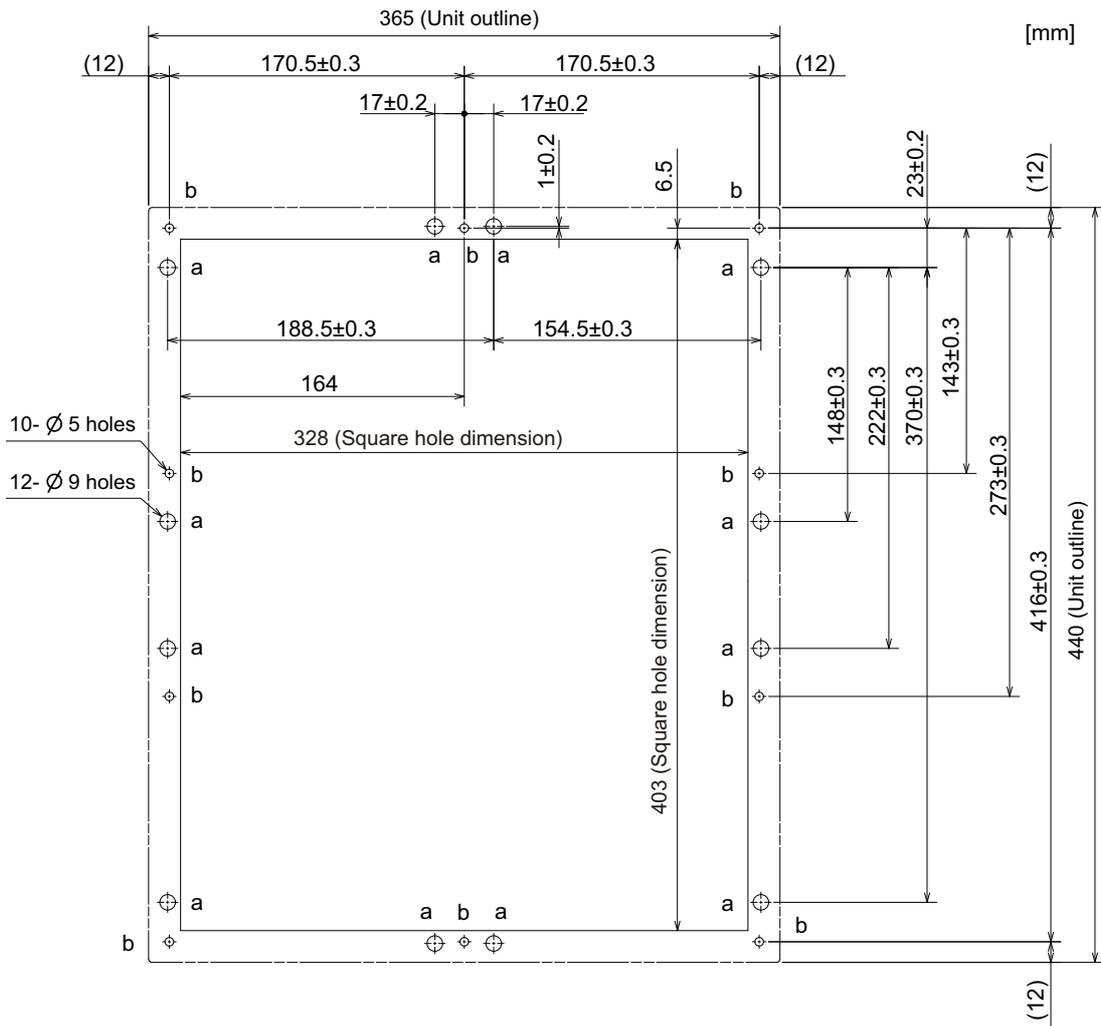

### 4.5.3 19-type (FCU8-DU194-75)


#### Outline dimensions

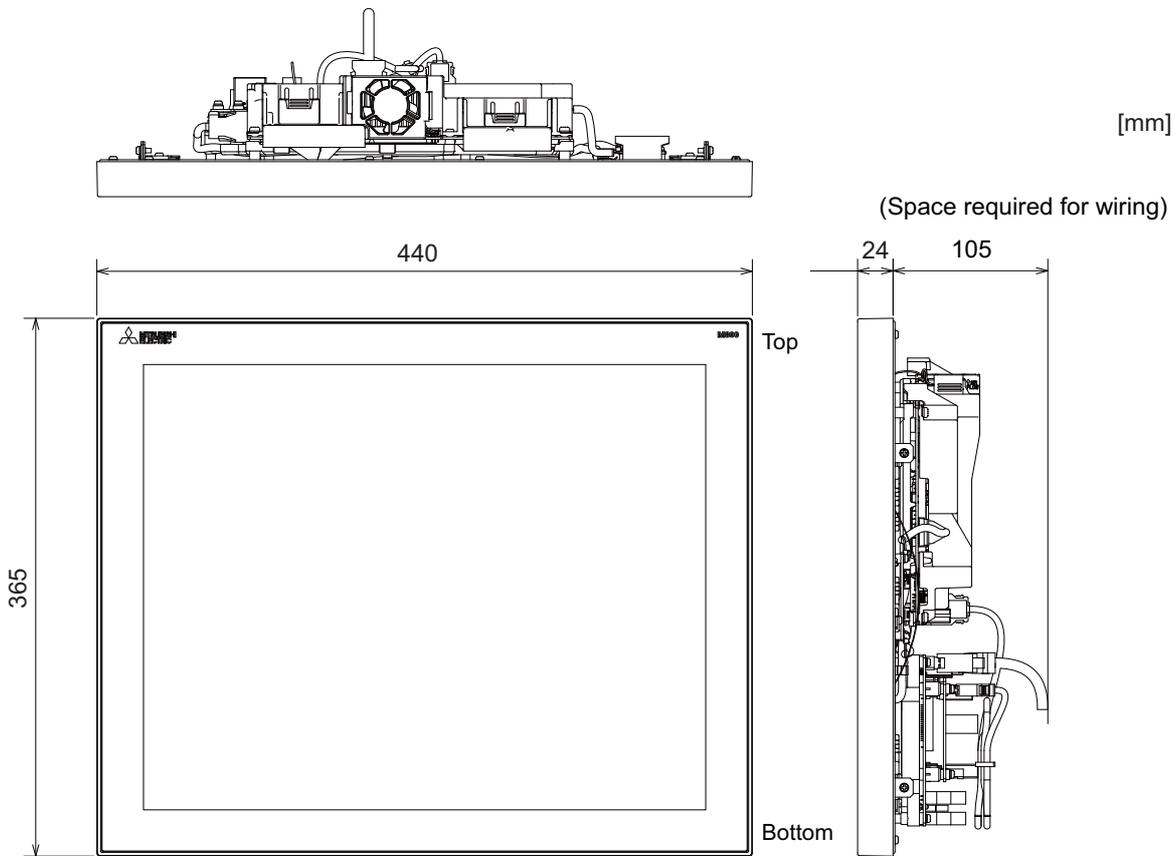

#### Note

- (1) The figure above shows the state with the personal computer unit and the operation panel I/O unit mounted.


Panel cut dimensions

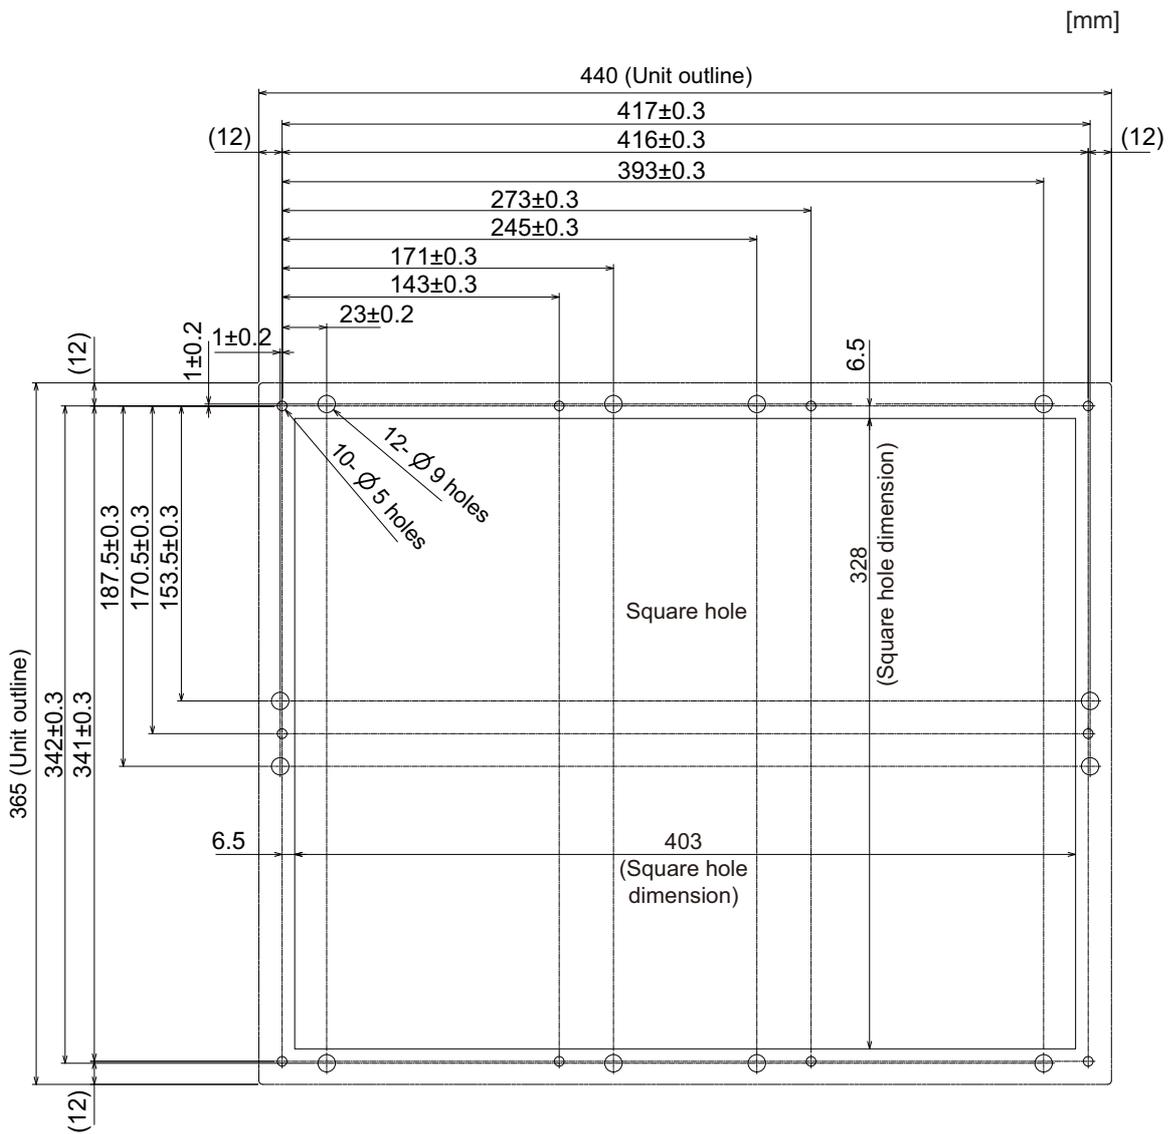

## 4.6 Display Unit [M80VW]

### 4.6.1 15-type (FCU8-DU182-36)


#### Outline dimensions

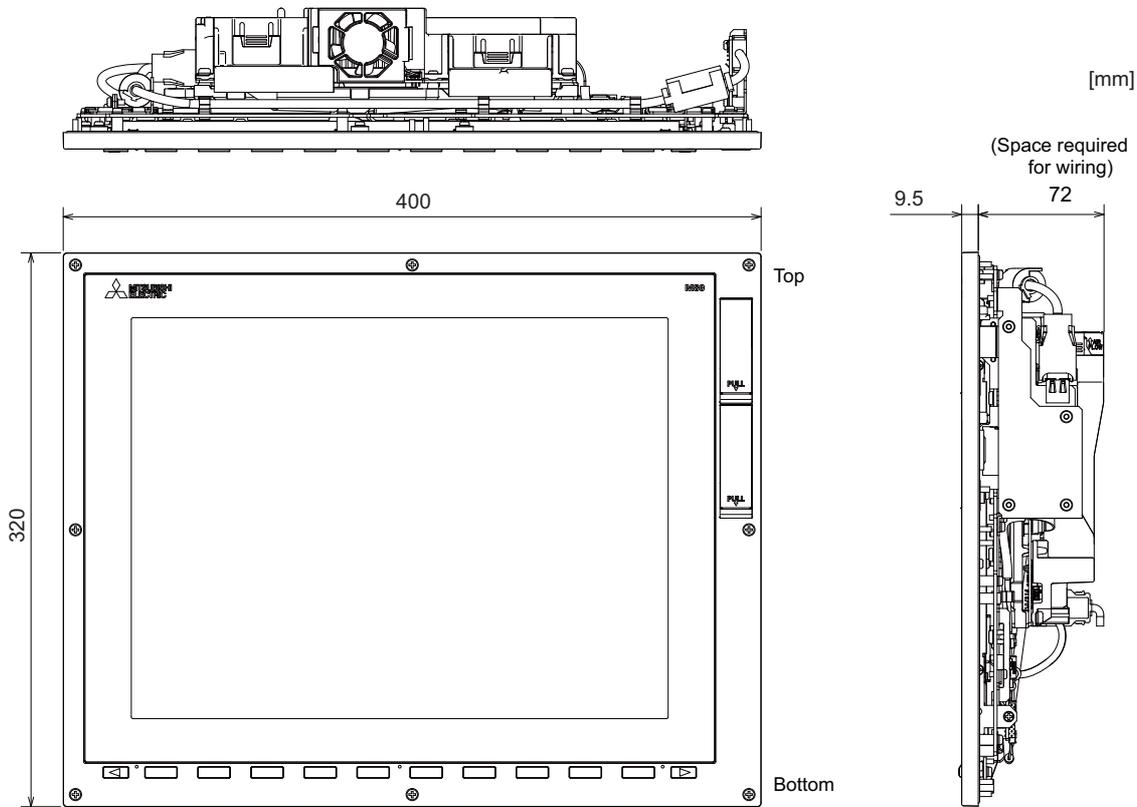

#### Note


(1) The figure above shows the state with the personal computer unit mounted.

Panel cut dimensions

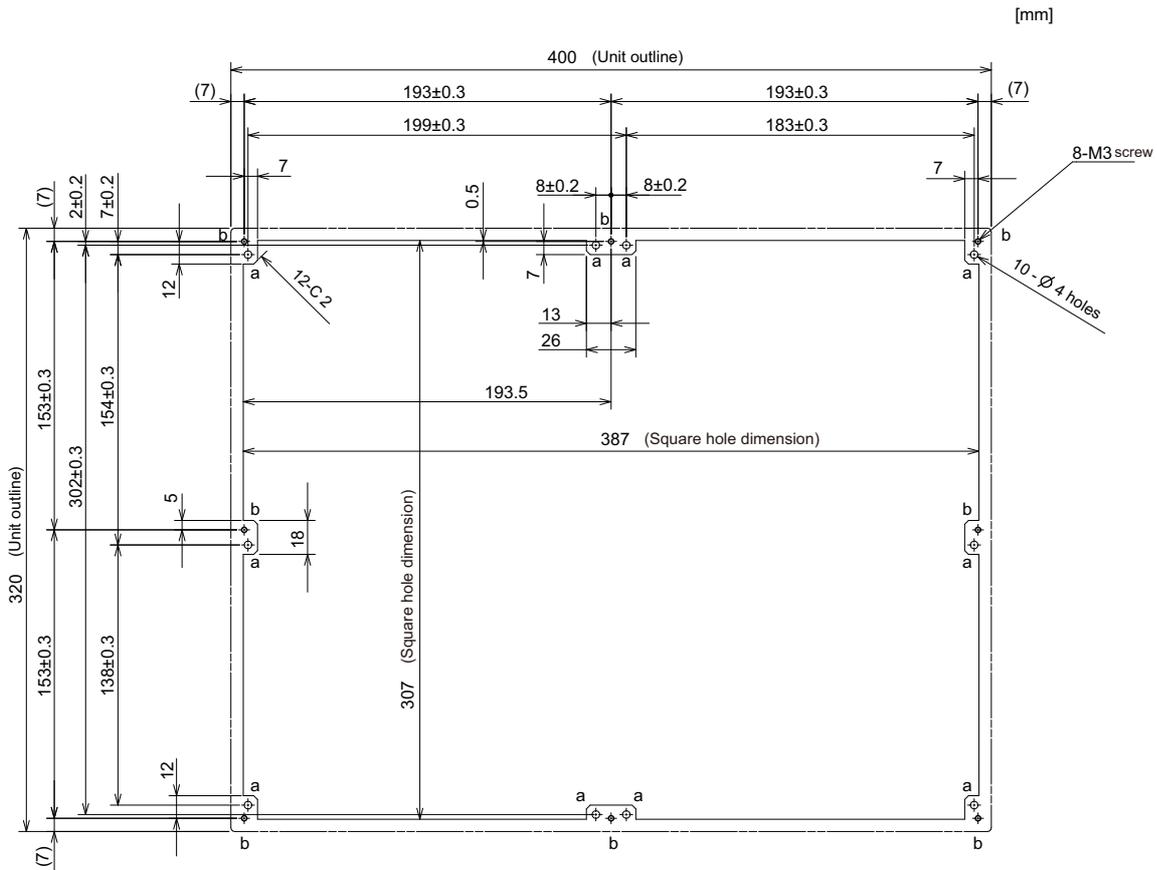

### 4.6.2 19-type (FCU8-DU193-77)


#### Outline dimensions

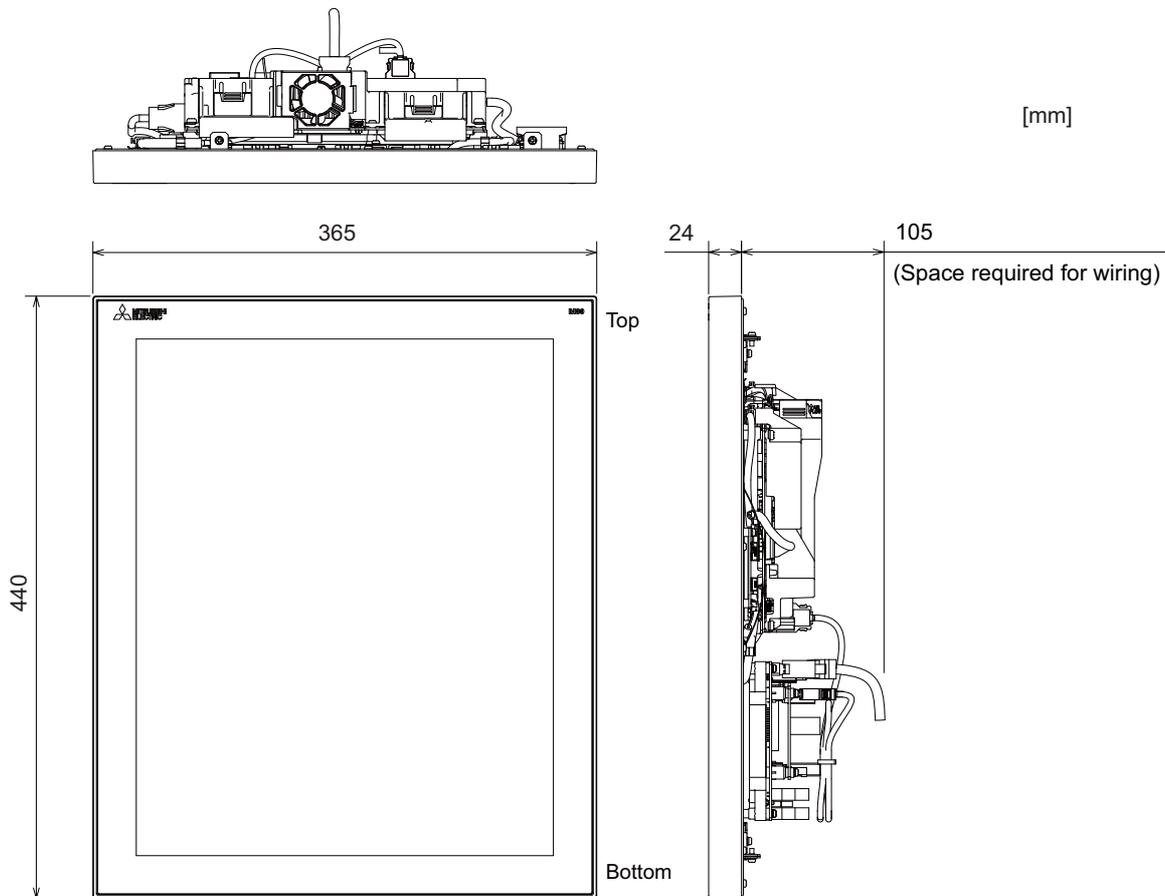

#### Note


(1) The figure above shows the state with the personal computer unit and the operation panel I/O unit mounted.

Panel cut dimensions

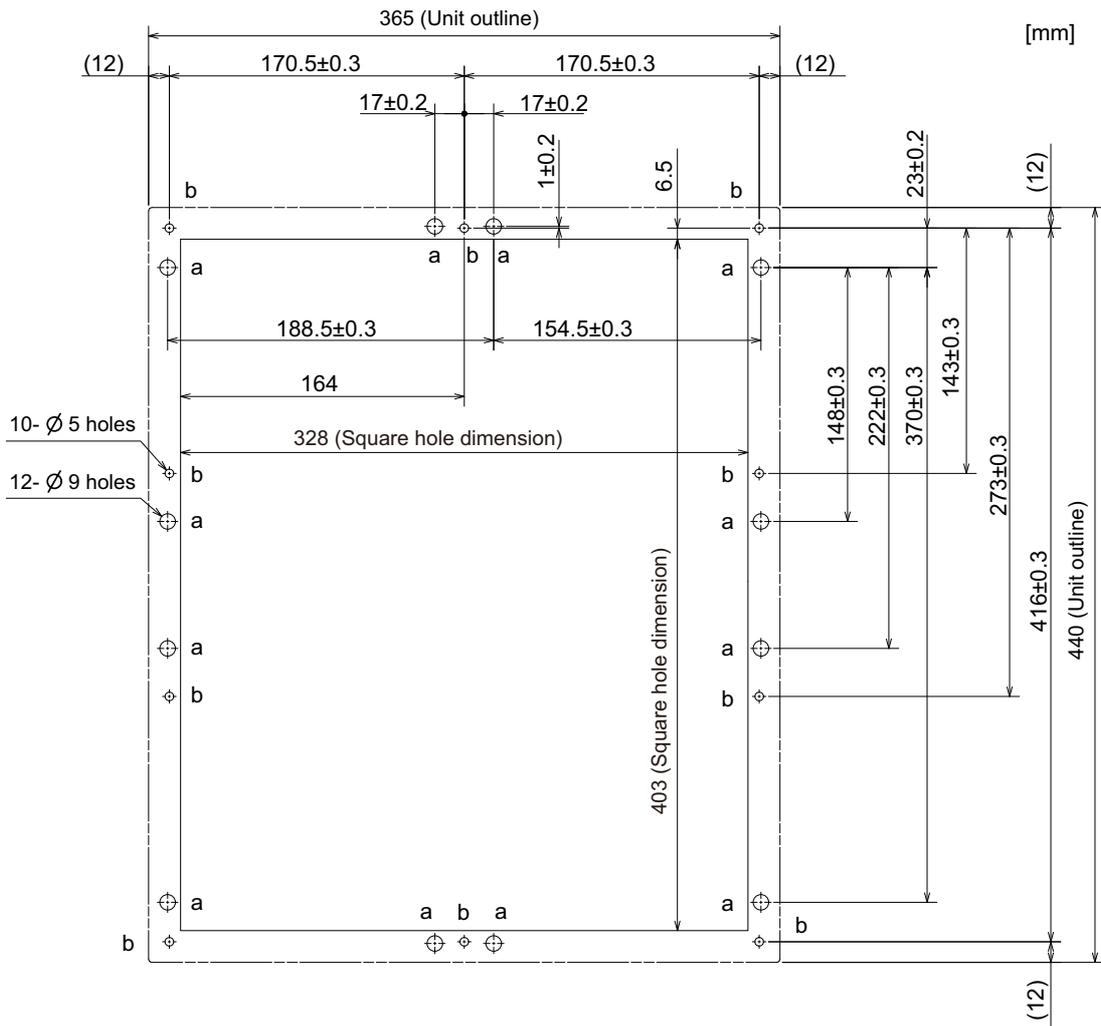

### 4.6.3 19-type (FCU8-DU194-77)


#### Outline dimensions

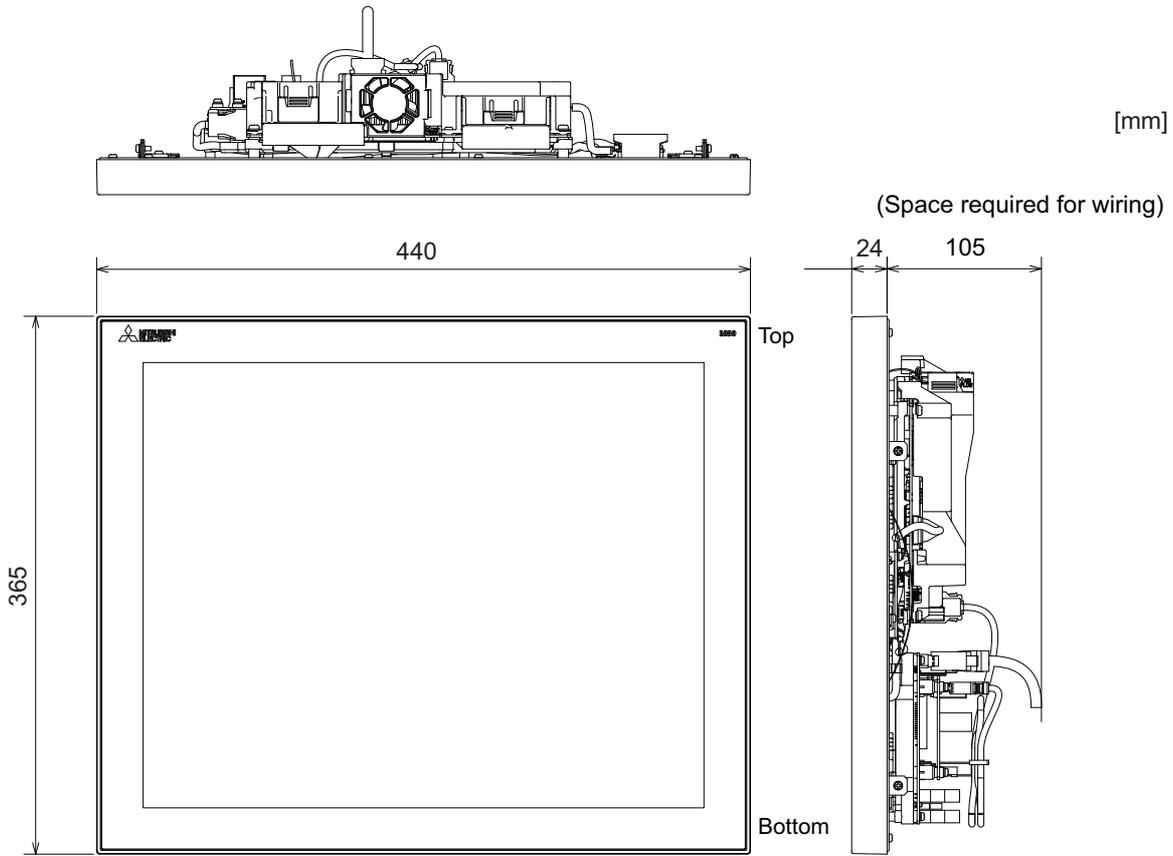

#### Note

(1) The figure above shows the state with the personal computer unit and the operation panel I/O unit mounted.


Panel cut dimensions

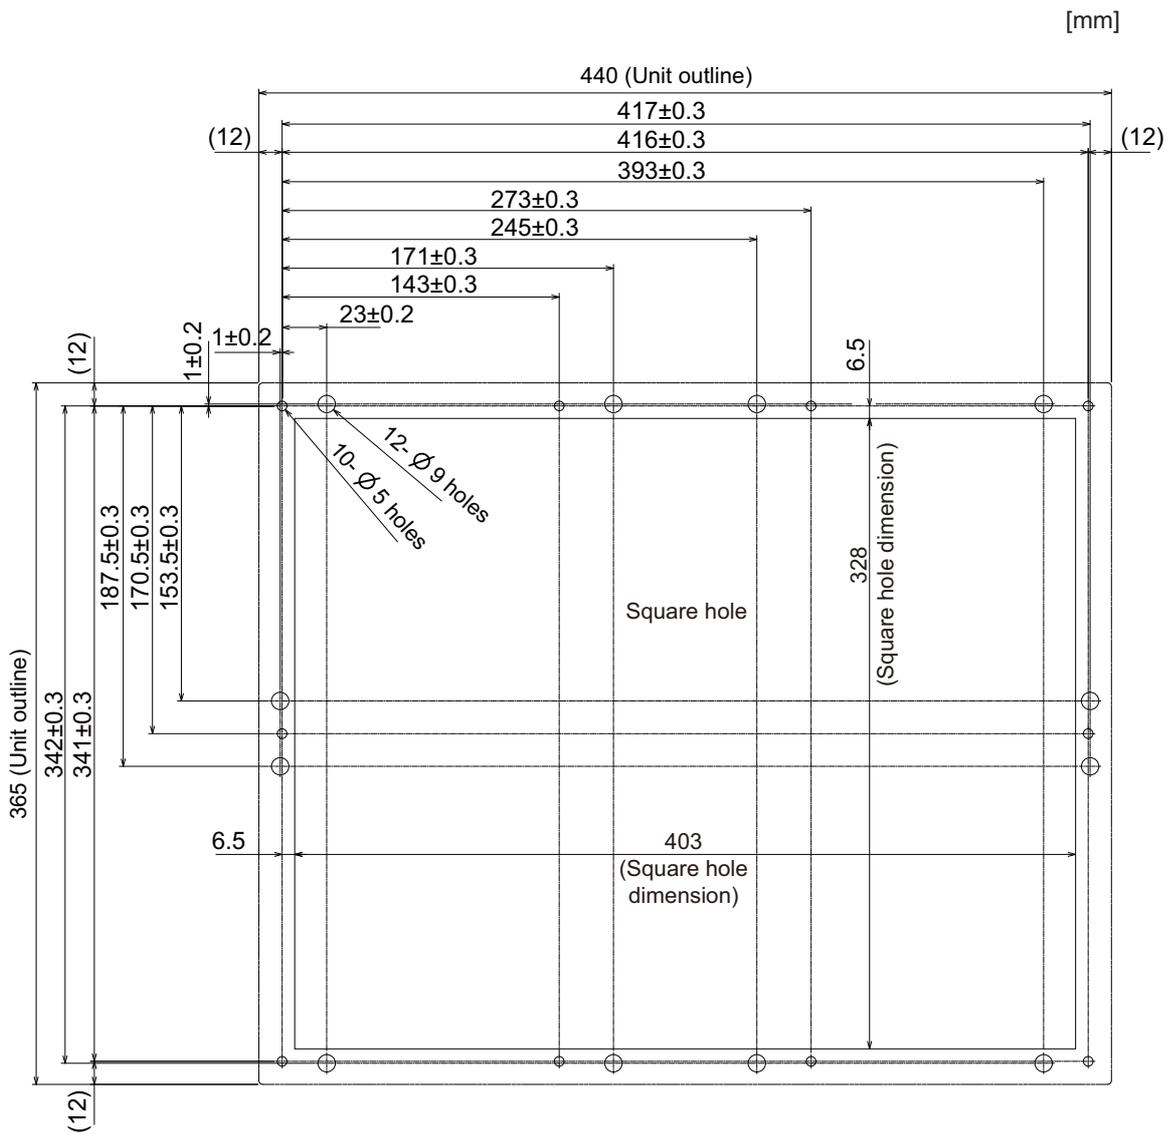

## 4.7 Personal Computer Unit


### 4.7.1 Personal Computer Unit (FCU8-PC232)

#### Outline dimensions

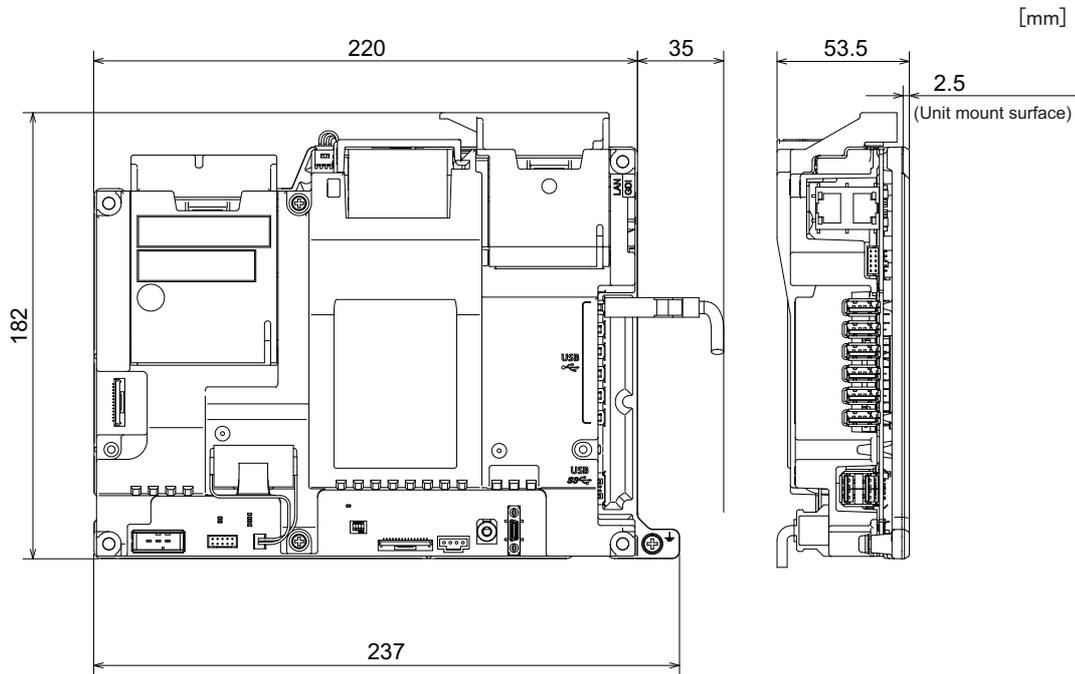

### 4.7.2 Built-in Disk of the Display Unit (FCU8-CF060G-1)


#### Outline dimensions

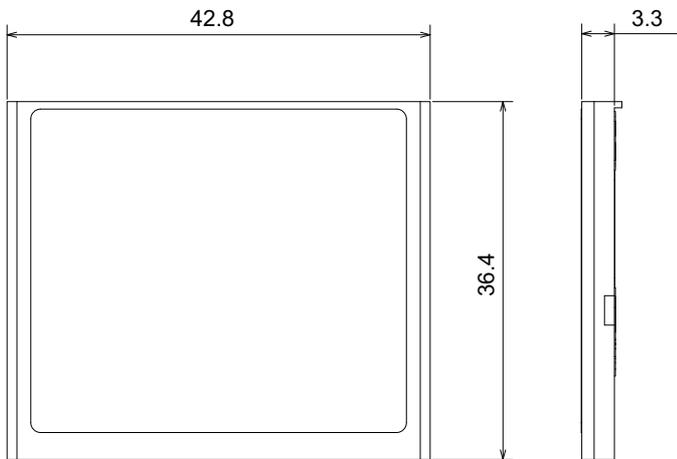

## 4.8 Keyboard Unit

### 4.8.1 Keyboard for 15-type Display Unit (FCU8-KB083)


#### Outline dimensions

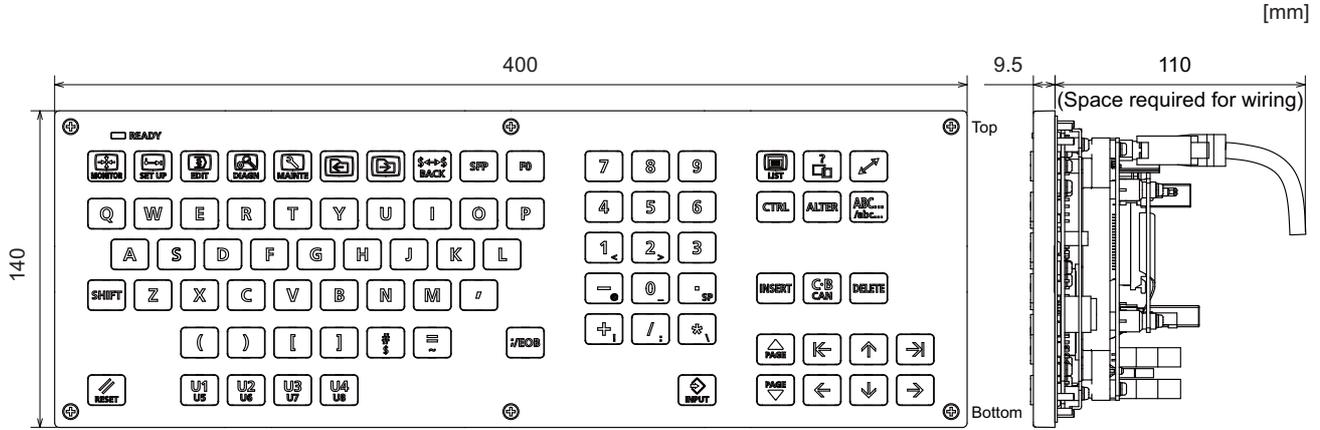

#### Note

(1) The above side view shows the state with the operation panel I/O unit mounted.

#### Panel cut dimensions

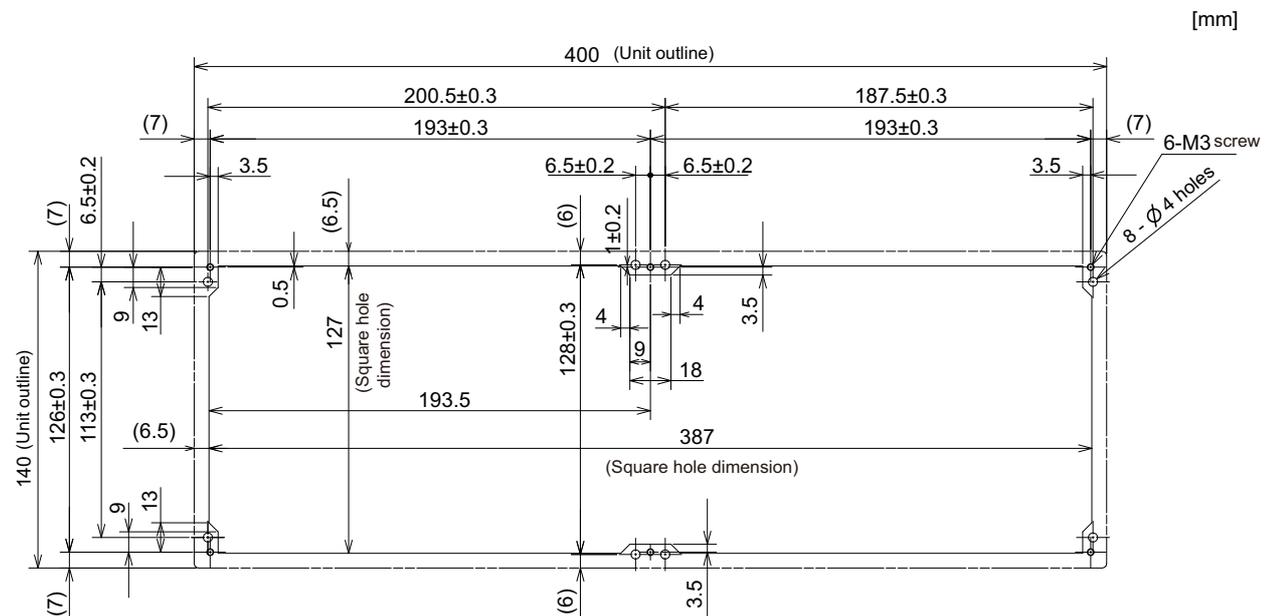

## 4.9 Operation Panel I/O Unit

### 4.9.1 List of Units


Classification	Type	Components	Remarks
DI 24 V/0 V common input [64 points] DO Source output [64 points]	FCU8-DX830	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 64-points source type (20.0 mA/point) Manual pulse generator input: 3ch Display unit I/F Keyboard unit I/F Emergency stop input Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 14, 20 to 22 RIO extensible stations: 5, 6, 15 to 19, 23 to 64 (*2)
DI 24 V/0 V common input [64 points] DO Source output [64 points] Scan input [64 points] Scan output [64 points]	FCU8-DX834 (*1)	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 64-points source type (20.0 mA/point) Scan input: 64 points Scan output: 64 points Manual pulse generator input: 3ch Display unit I/F Keyboard unit I/F Emergency stop input Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 14, 20 to 22 RIO extensible stations: 5, 6, 15 to 19, 23 to 64 (*2)
DI 24 V/0 V common input [64 points] DO Source output [64 points] Safety DI 24 V/0 V common input [8 points]	FCU8-DX837	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 64-points source type (20.0 mA/point) Safety DI: 8-points 0 V common type Manual pulse generator input: 3ch Display unit I/F Keyboard unit I/F Emergency stop input Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 14, 20 to 22 RIO extensible stations: 5, 6, 15 to 19, 23 to 64 (*2)

(\*1) The connection method of DO (CG32/CG34) of FCU8-DX834 is different from other operation panel I/O units. Be careful not to connect to a wrong connector. See the descriptions mentioned in the later section for more specific explanation on connections.


(\*2) J291 cable is required for connection with the personal computer unit. (for windows-based display)

### 4.9.2 FCU8-DX830/FCU8-DX834/FCU8-DX837


#### Outline dimensions: FCU8-DX830

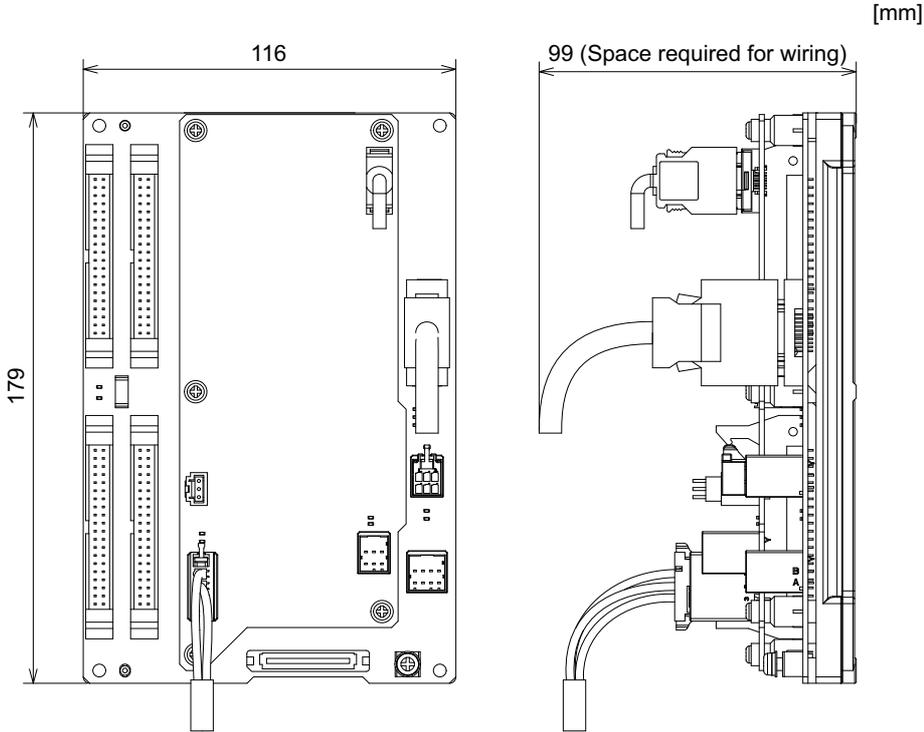


#### Outline dimensions: FCU8-DX834

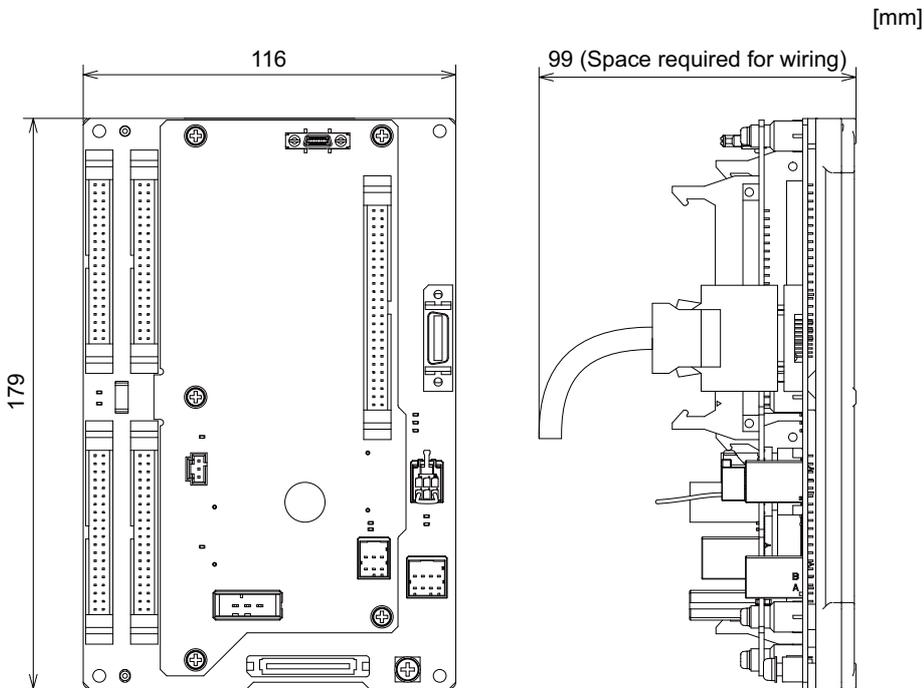

Outline dimensions: FCU8-DX837

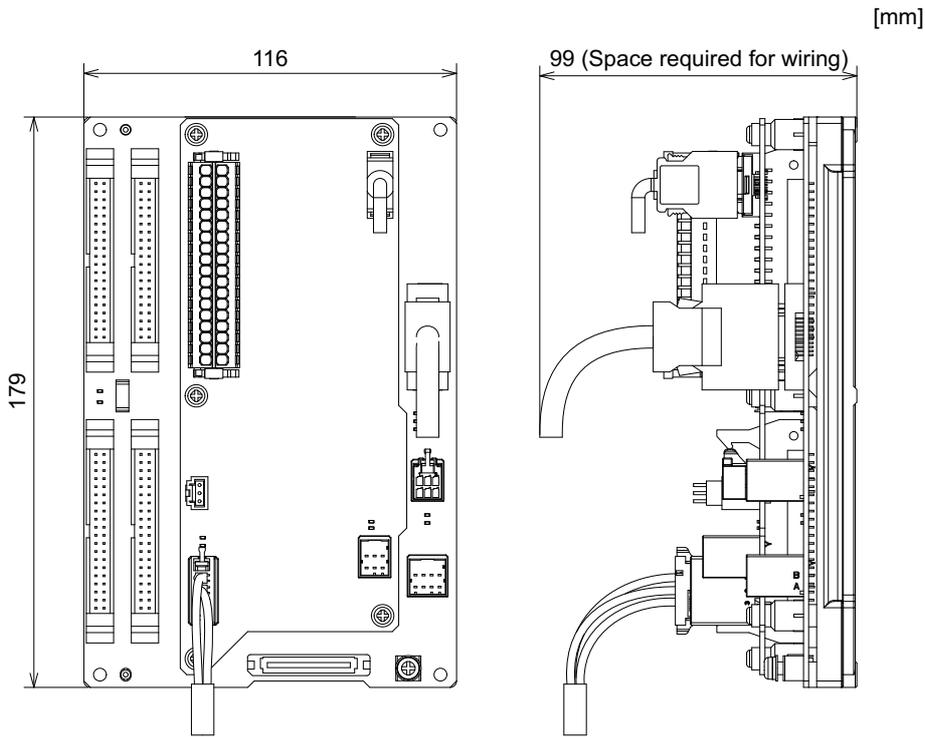

Installation dimensions: FCU8-DX830/FCU8-DX834/FCU8-DX837

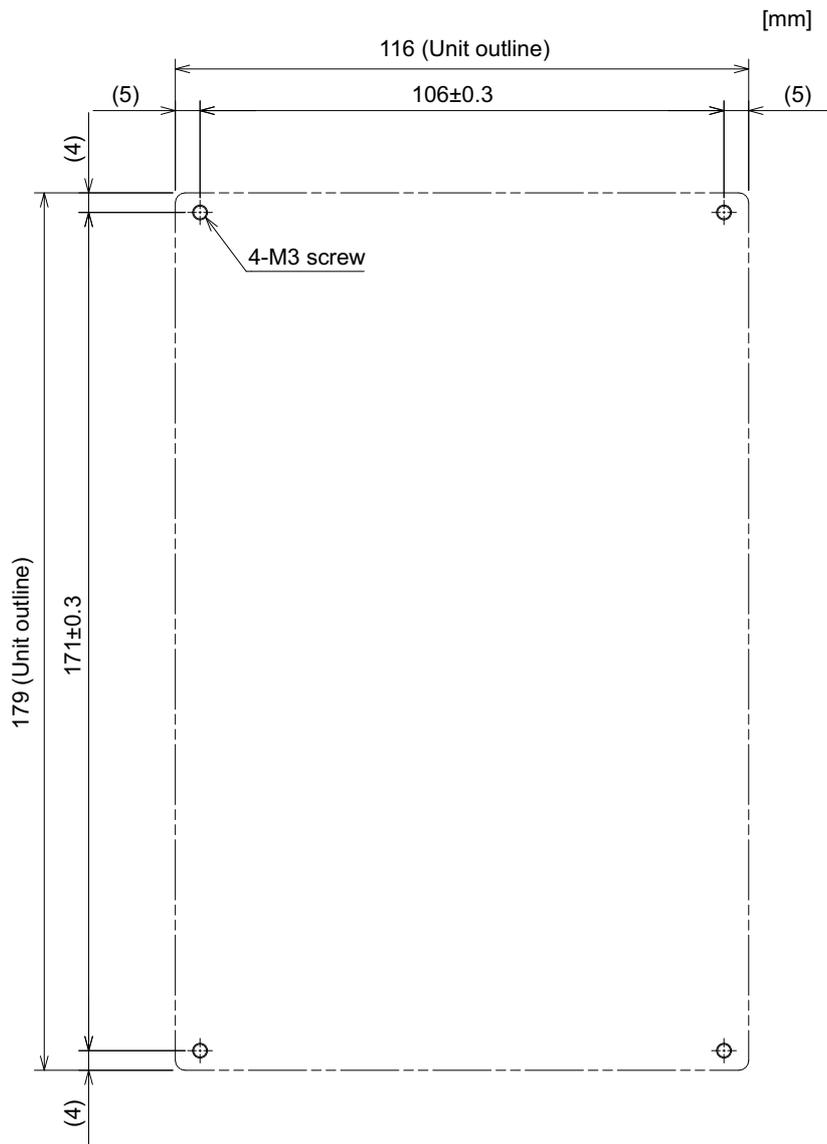

**Note**

- ♦ The unit thickness of the fixed part with screws is 16.6 mm.  
Select the fixing screws having the length suitable for the thickness.

## 4.10 Remote I/O Unit

Types of signals described on the list of units can be input/output from the remote I/O unit (FCU8-DXxxx) according to the type and No. of contacts. Remote I/O units are used by being connected to the control unit or the operation panel I/O unit. Multiple remote I/O units can be used as long as the total number of occupied stations is 64 or less.

### Note

(1) The maximum connectable number of remote I/O units is 32.

### 4.10.1 List of Units

Classification	Type	Components	Remarks
DI 24 V/0 V common input [32 points] DO Source output [32 points]	FCU8-DX220	Base card RIO 2.0 connector set	DI: 32-point 24 V/0 V common type DO: 32-point source type (200 mA/point) Number of occupied stations: 1
DI 24 V/0 V common input [64 points] DO Source output [48 points]	FCU8-DX230	Base card RIO 2.0 connector set	DI: 64-point 24 V/0 V common type DO: 48-point source type (200 mA/point) Number of occupied stations: 2
DI 24 V/0 V common input [64 points] DO Source output [48 points] AO analog output [1 point]	FCU8-DX231	Base card RIO 2.0 connector set	DI: 64-point 24 V/0 V common type DO Source type [48 points] (200 mA/point) AO: 1 point Number of occupied stations: 2
AI analog input [4 points] AO analog output [1 point]	FCU8-DX202	Base card RIO 2.0 connector set	AI: 4 points AO: 1 point Number of occupied stations: 1
DI 0 V common input [16 points] DO Source output (large capacity) [8 points]	FCU8-DX213	Base card RIO 2.0 connector set	DI: 16-point 0 V common type (3 mA/point) DO: 8-point source type (2 A/point) Number of occupied stations: 1
DI 0 V common input [16 points] DO Source output (large capacity) [8 points]	FCU8-DX213-1	Base card RIO 2.0 connector set	DI: 16-point 0 V common type (9 mA/point) DO: 8-point source type (2 A/point) Number of occupied stations: 1
Safety DI 0 V common input [8 points] Safety DO Source output (large capacity) [4 points]	FCU8-DX654	Base card RIO 2.0 connector set	Safety DI: 8-point 0 V common type (3 mA/point) Safety DO: 4-point source type (2 A/point) Number of occupied stations: 2
Safety DI 0 V common input [8 points] Safety DO Source output (large capacity) [4 points]	FCU8-DX654-1	Base card RIO 2.0 connector set	Safety DI: 8-point 0 V common type (9 mA/point) Safety DO: 4-point source type (2 A/point) Number of occupied stations: 2
DI 24 V/0 V common input [32 points] DO Source output [32 points] Safety DI 0V common input [8 points] (*1) Safety relay output [4 points] (*2)	FCU8-DX651	Base card Add-on card RIO 2.0 connector set	DI: 24 V/0 V common type [32 points] DO: 32-point source type (200 mA/point) Safety DI: 8-point 0 V common type Safety relay: 4 points (non-voltage contact) Relay contact welding detection Number of occupied stations: 3
Thermistor input (12 points)	FCU8-DX408	Base card RIO 2.0 connector set	Thermistor input: 12 points Number of occupied stations: 3
Multi-analog input [4 points] (*3)	FCU8-DX409	Base card RIO 2.0 connector set	Multi-analog input: 4 points Number of occupied stations: 4


(\*1) Safety DI uses 16 points of terminal because of the duplication wiring.

(\*2) Safety relay output uses 8 points of terminal because of the duplication wiring.


(\*3) Voltage input, current input, thermocouple input and resistance temperature detector input are selected for each CH.

### 4.10.2 FCU8-DX220/FCU8-DX230/FCU8-DX231/FCU8-DX202/FCU8-DX213/ FCU8-DX213-1/FCU8-DX654/FCU8-DX654-1/FCU8-DX651/FCU8-DX408/ FCU8-DX409


#### Outline dimensions: FCU8-DX220

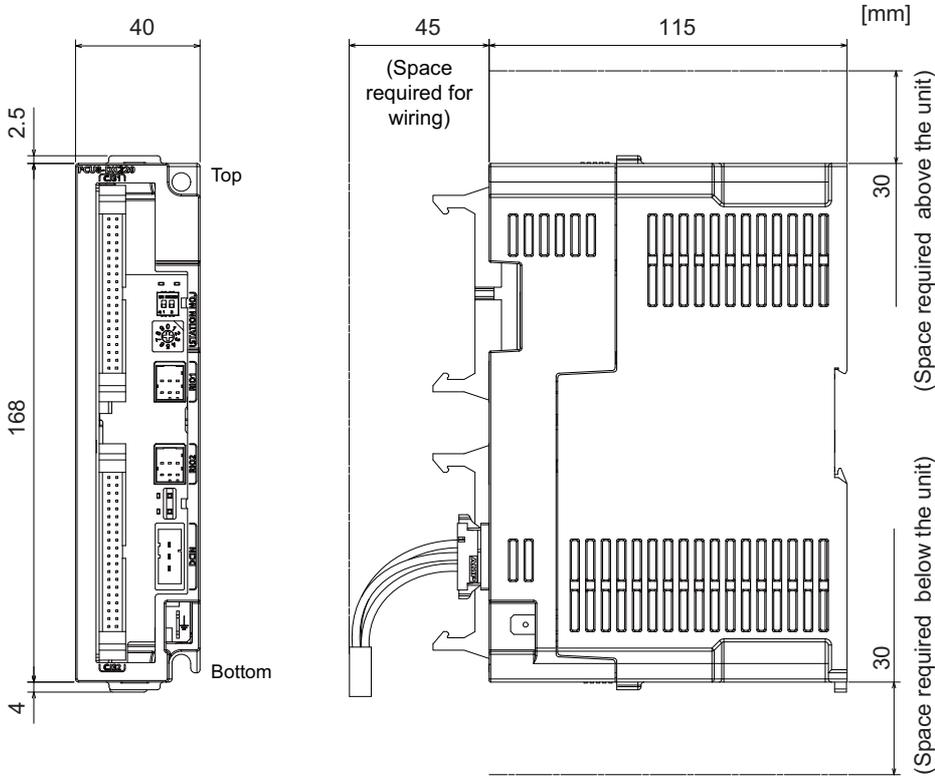


#### Outline dimensions: FCU8-DX230

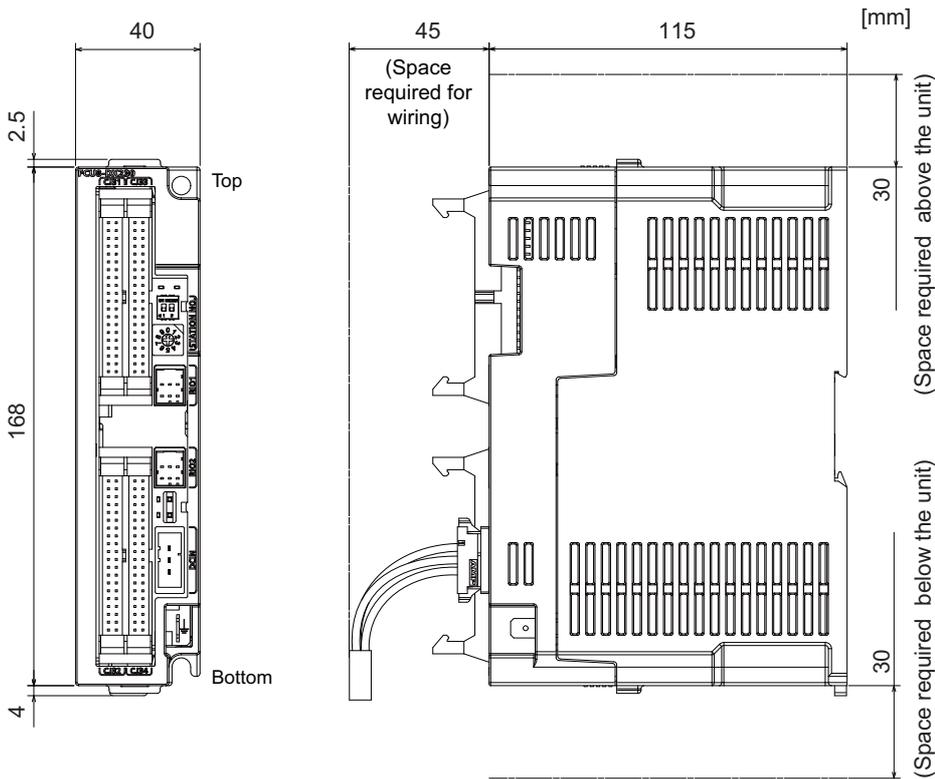

**Outline dimensions: FCU8-DX231**

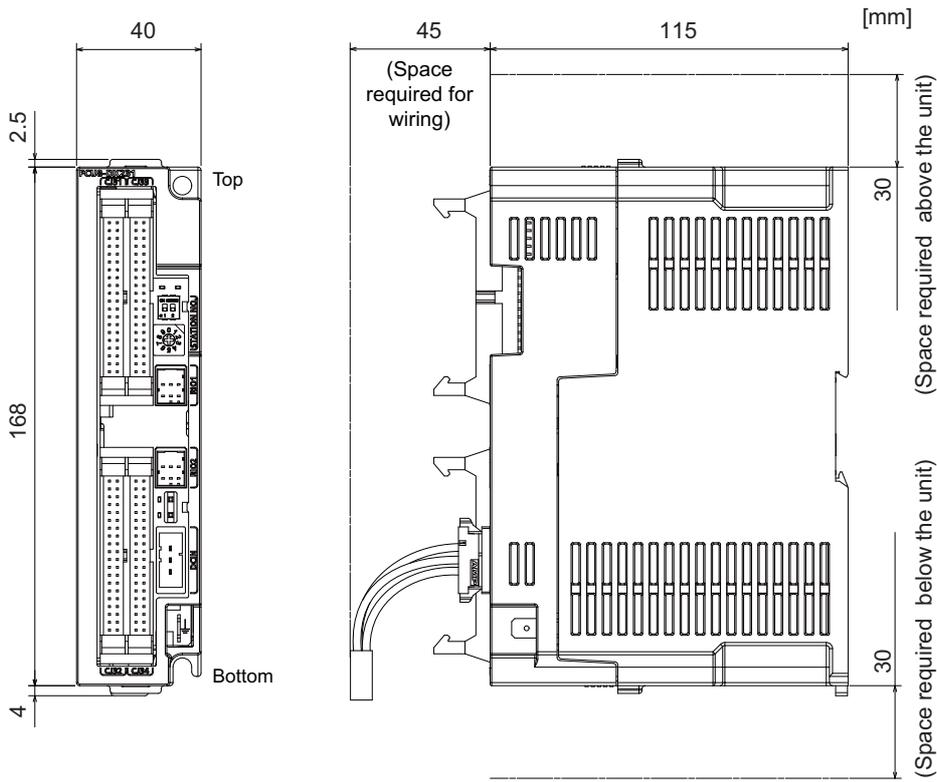


**Outline dimensions: FCU8-DX202**

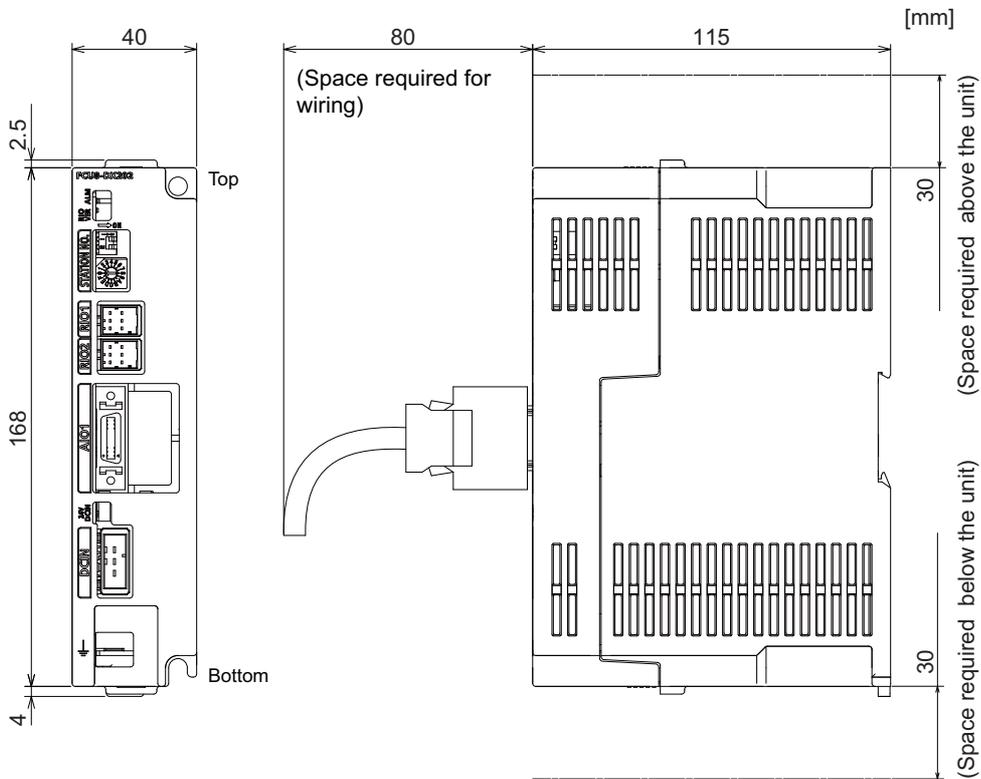




**Outline dimensions: FCU8-DX654**

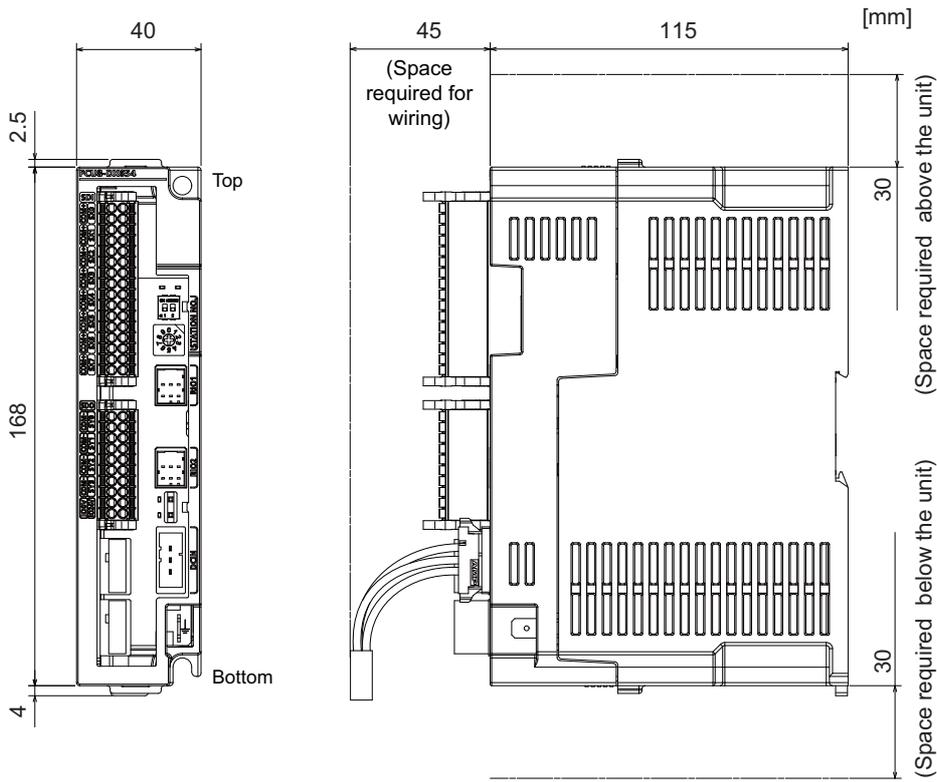


**Outline dimensions: FCU8-DX654-1**

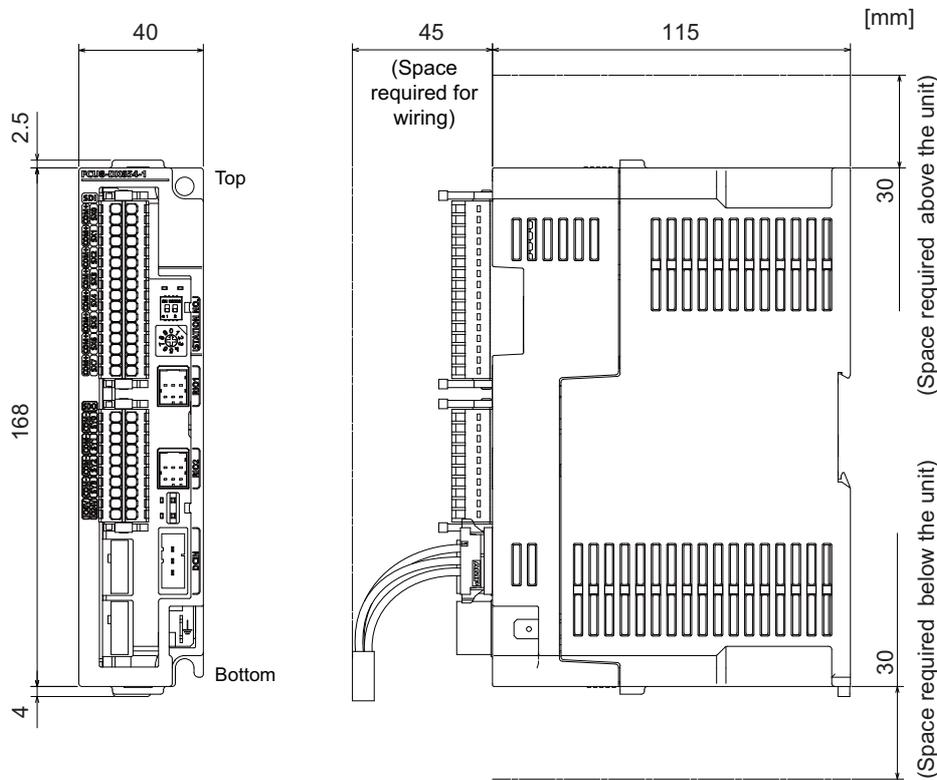






**Installation dimensions: FCU8-DX220/FCU8-DX230/FCU8-DX231/FCU8-DX202/FCU8-DX213/  
FCU8-DX213-1/FCU8-DX654/FCU8-DX654-1/FCU8-DX408/FCU8-DX409**

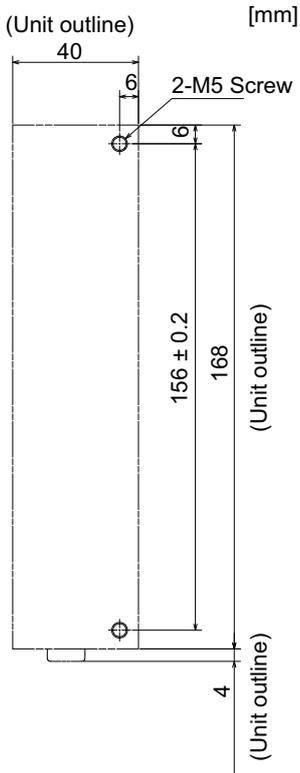


**Installation dimensions: FCU8-DX651**

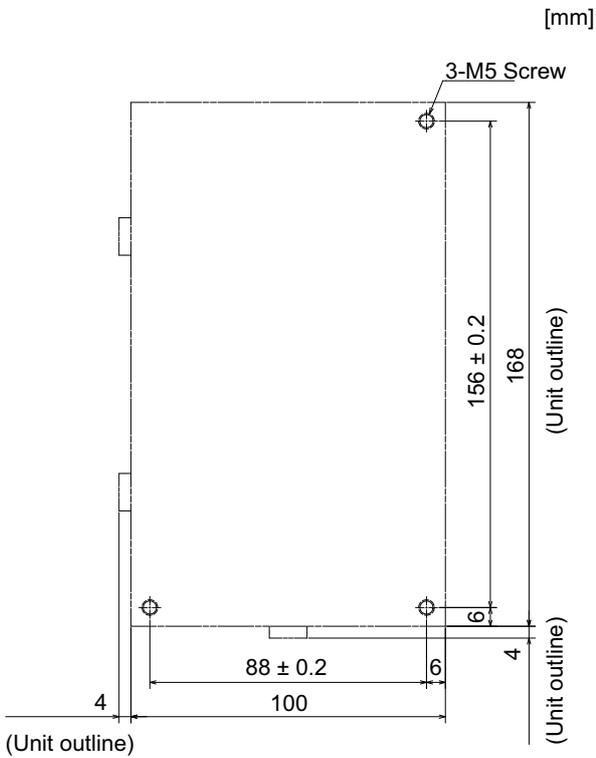

## 4.11 Function Expansion Unit

### 4.11.1 Encoder (Manual Pulse Generator) I/F Expansion (FCU8-EX544)


#### Outline dimensions

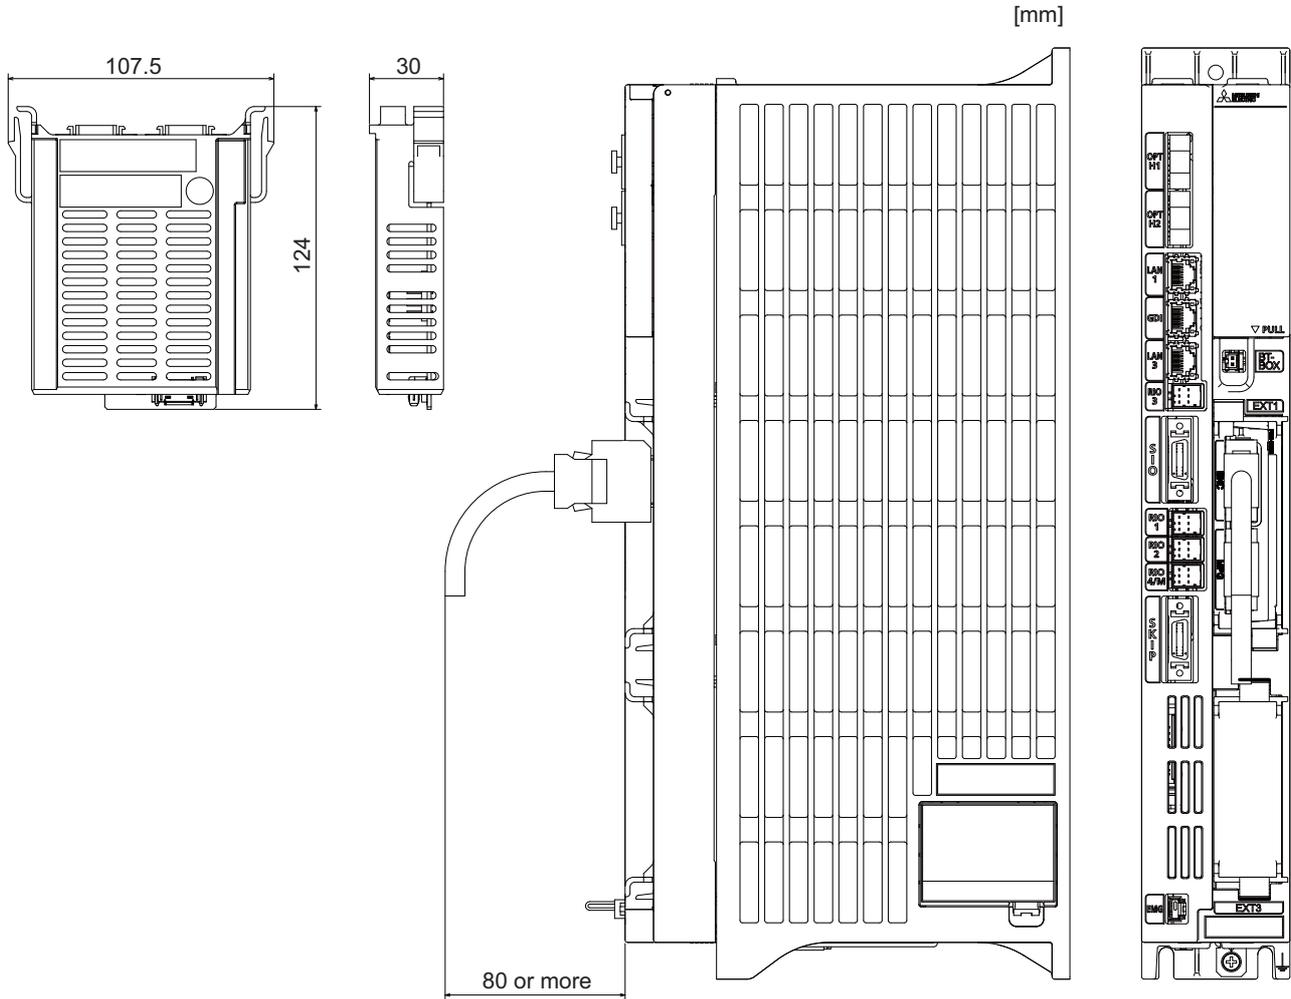

### 4.11.2 CC-Link (FCU8-EX561)


#### Outline dimensions

[mm]

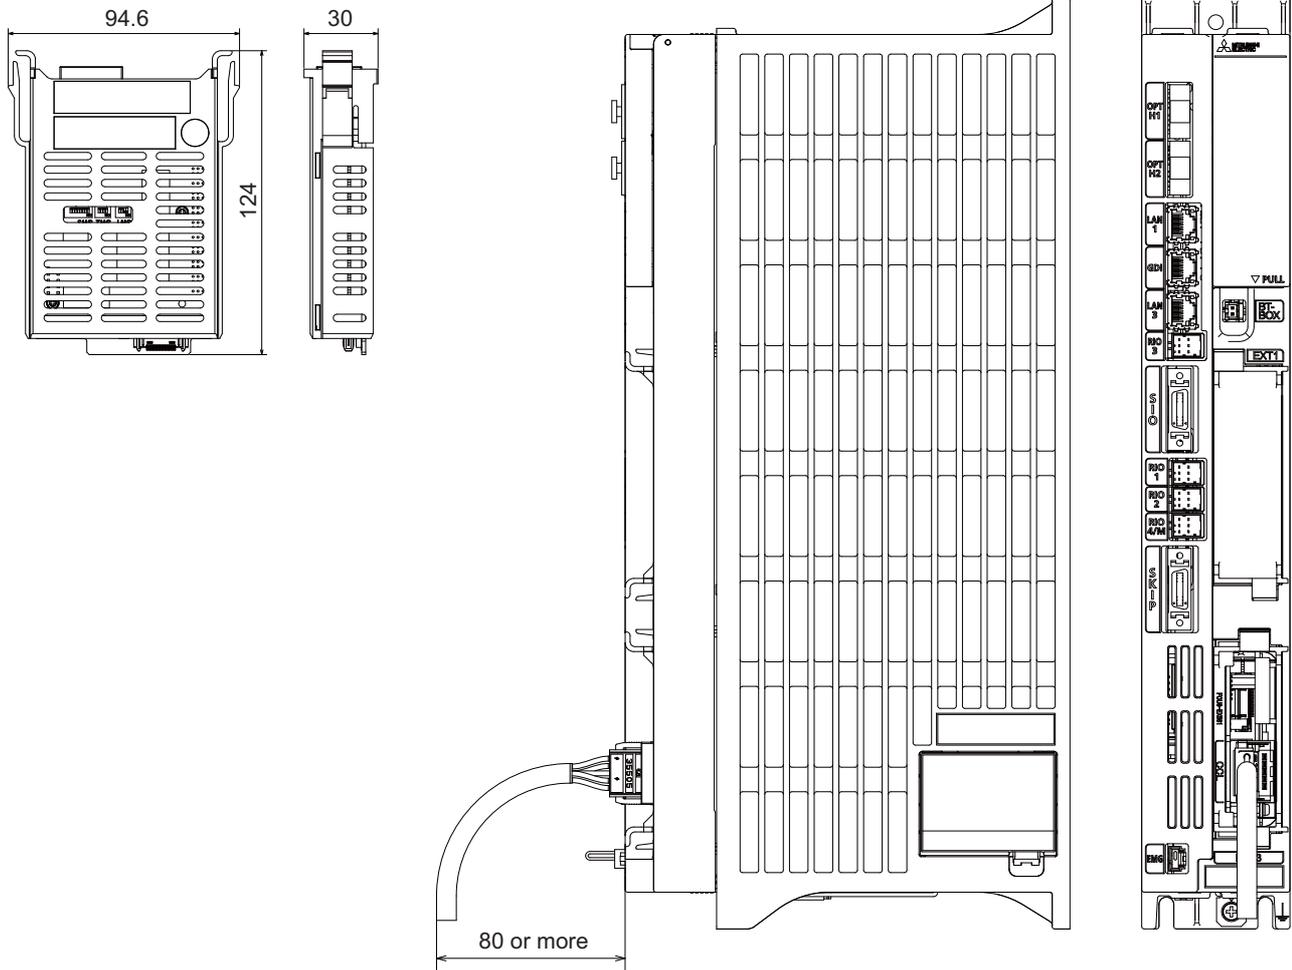


### 4.11.3 PROFIBUS-DP (FCU8-EX563)

#### Outline dimensions

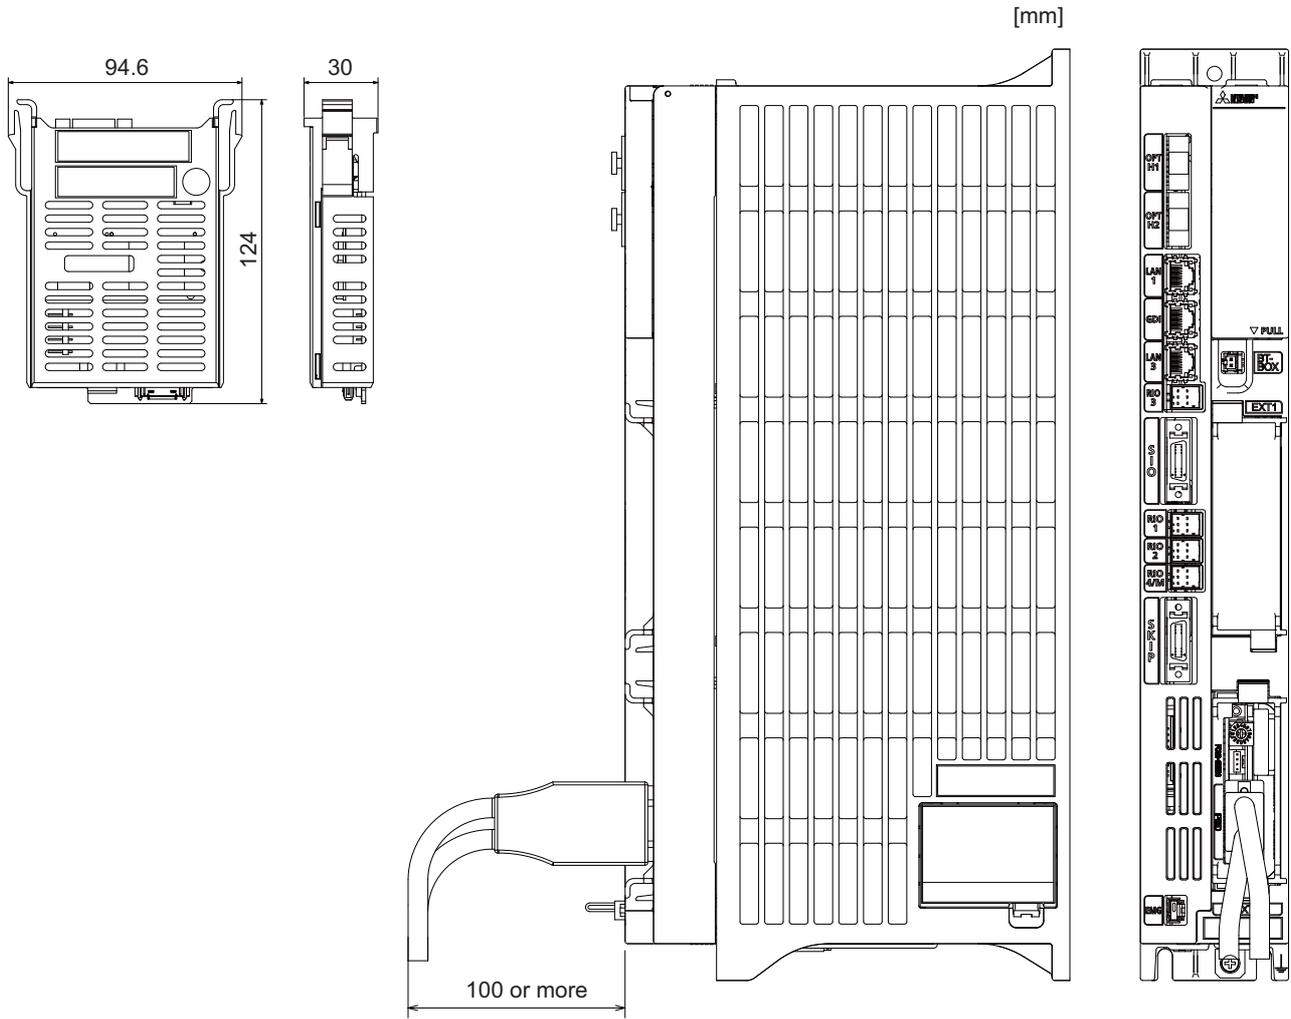


### 4.11.4 CC-Link IE Field (FCU8-EX564)

#### Outline dimensions

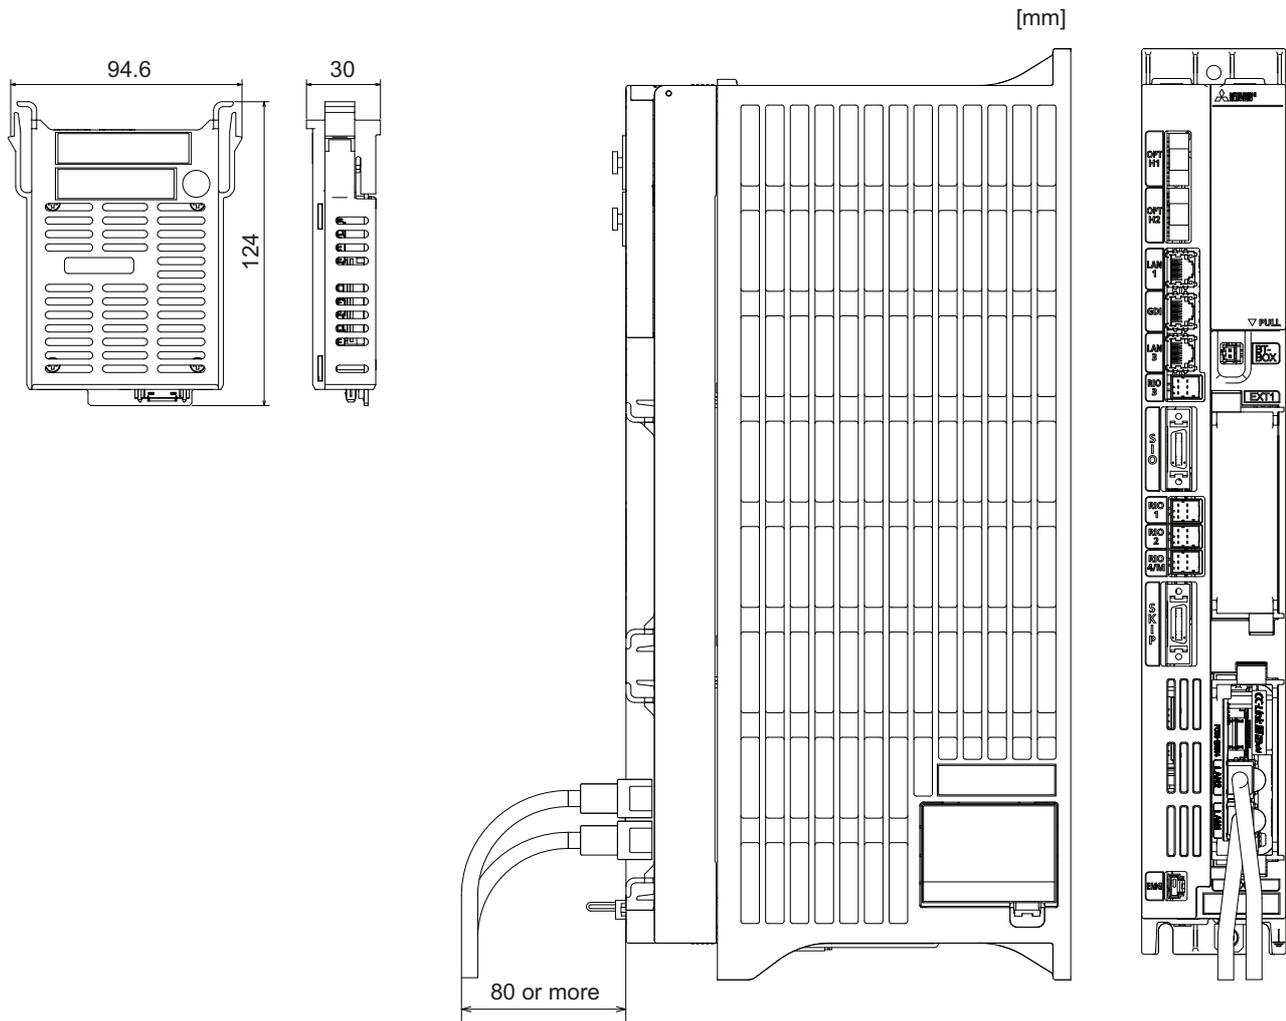


### 4.11.5 EtherNet/IP (FCU8-EX565)

#### Outline dimensions

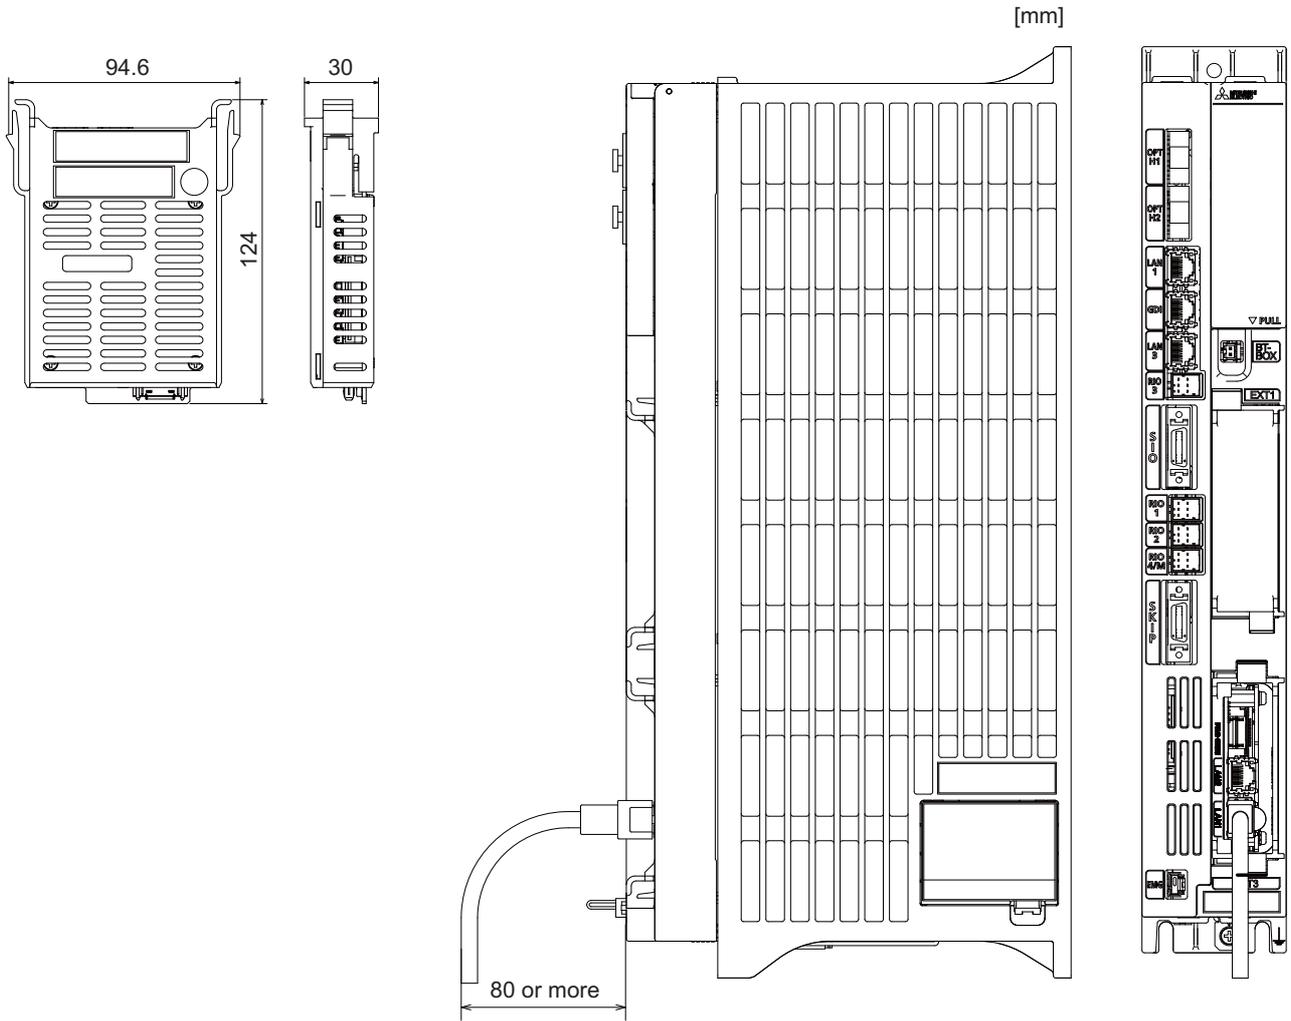

### 4.11.6 FL-net (FCU8-EX568)

#### Outline dimensions

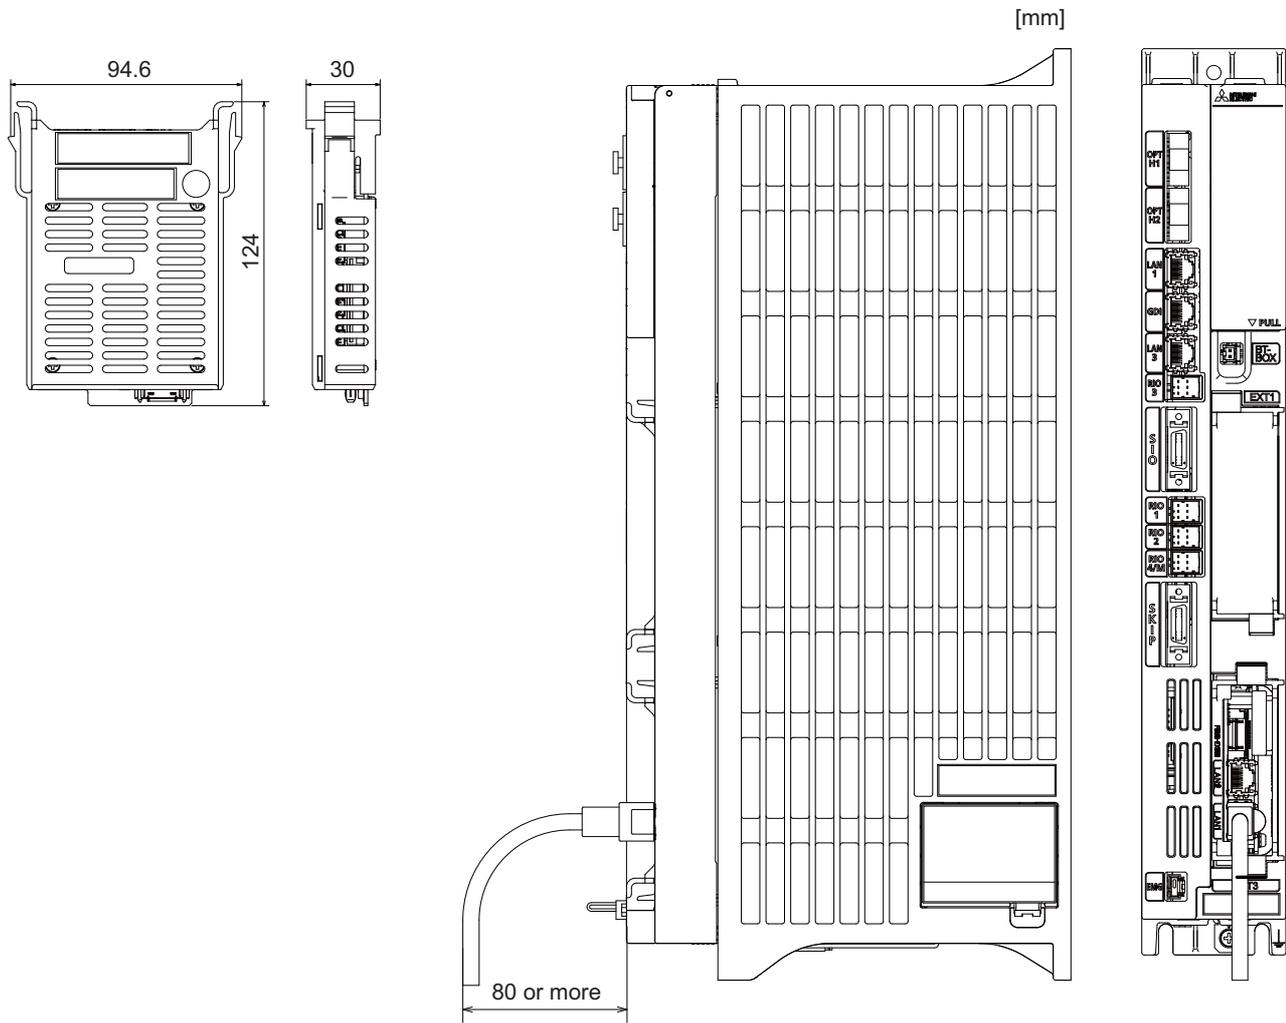




## 4.12 Side Memory I/F Unit


### Note

(1) Side memory I/F unit is only for 19-type display unit.

### Outline dimensions

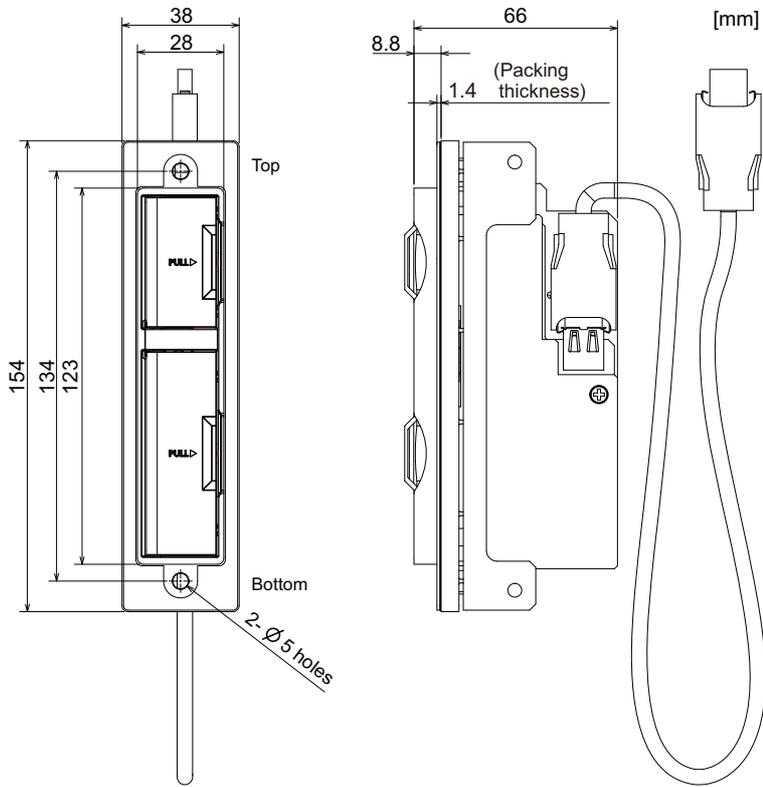

Installation dimensions

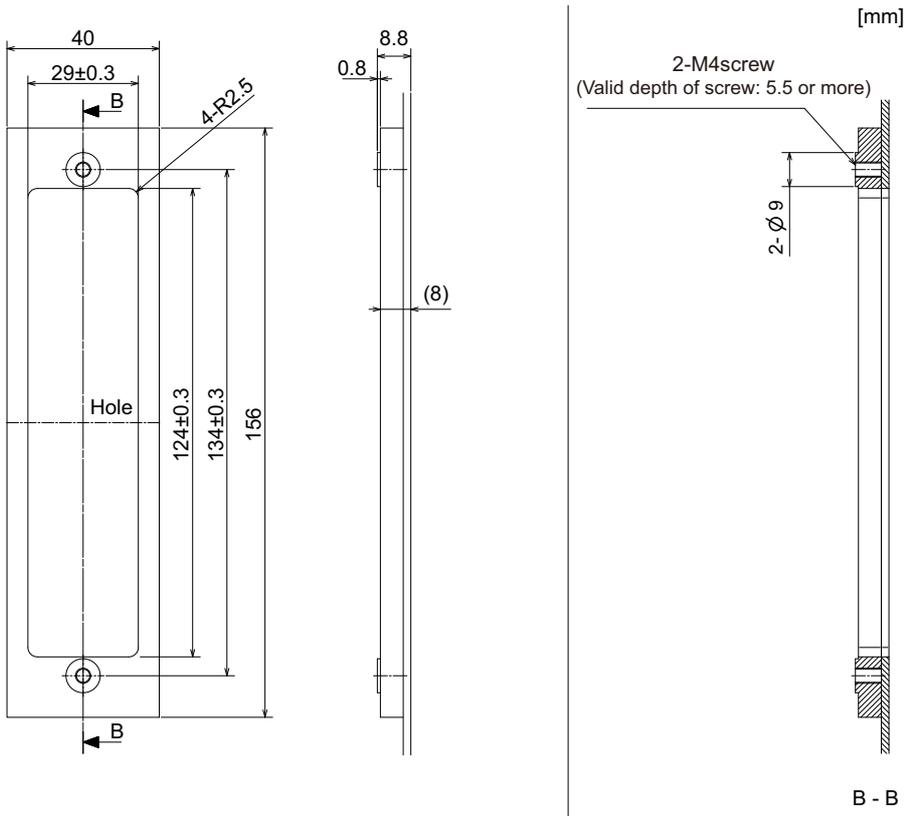


## 4.13 Manual Pulse Generator


### 4.13.1 5 V Manual Pulse Generator (UFO-01-2Z9)

■ 100 pulse/rev

#### Outline dimensions

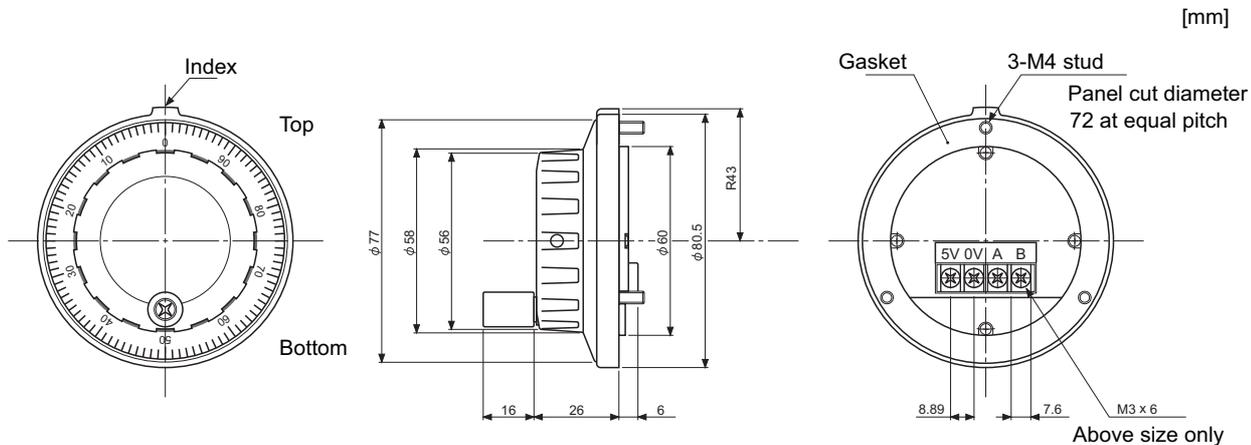

#### Panel cut dimensions

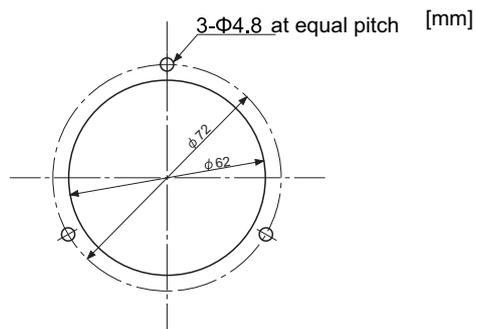


Produced by NIDEC NEMICON CORPORATION


### 4.13.2 12 V Manual Pulse Generator (HD60C)

■ 25 pulse/rev

#### Outline dimensions

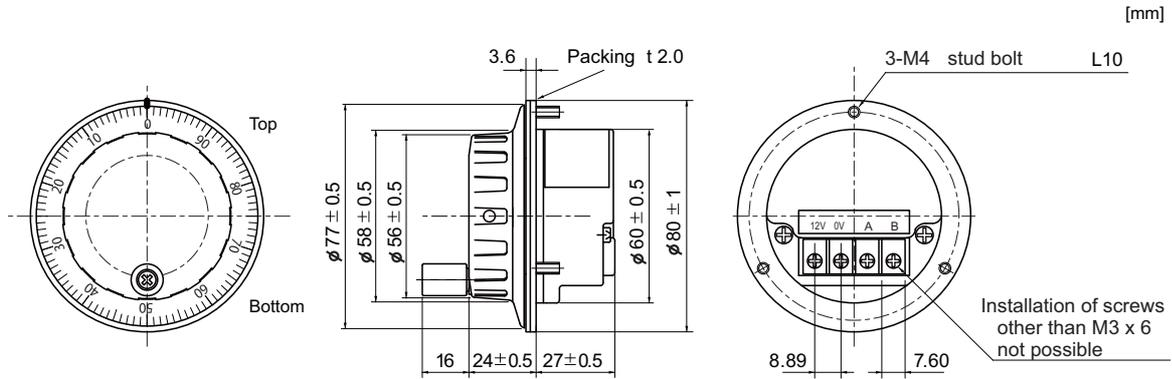

#### Panel cut dimensions



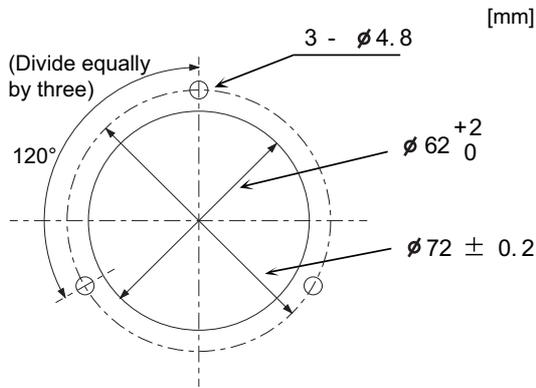


## 4.14 Synchronous Feed Encoder


### 4.14.1 Synchronous Feed Encoder (OSE-1024-3-15-68)

#### Outline dimensions

[mm]

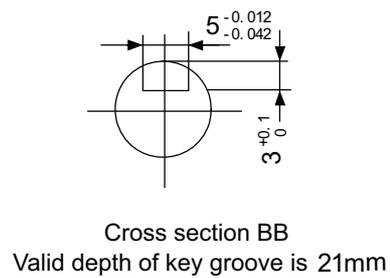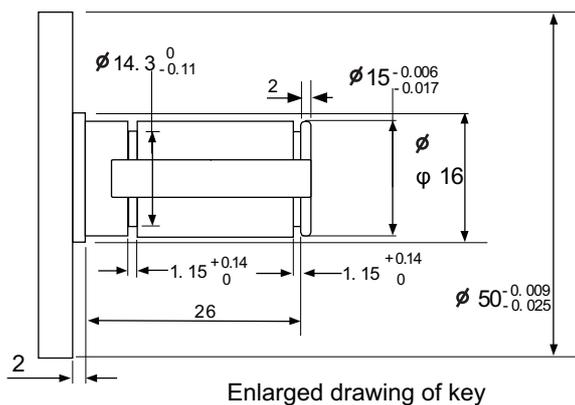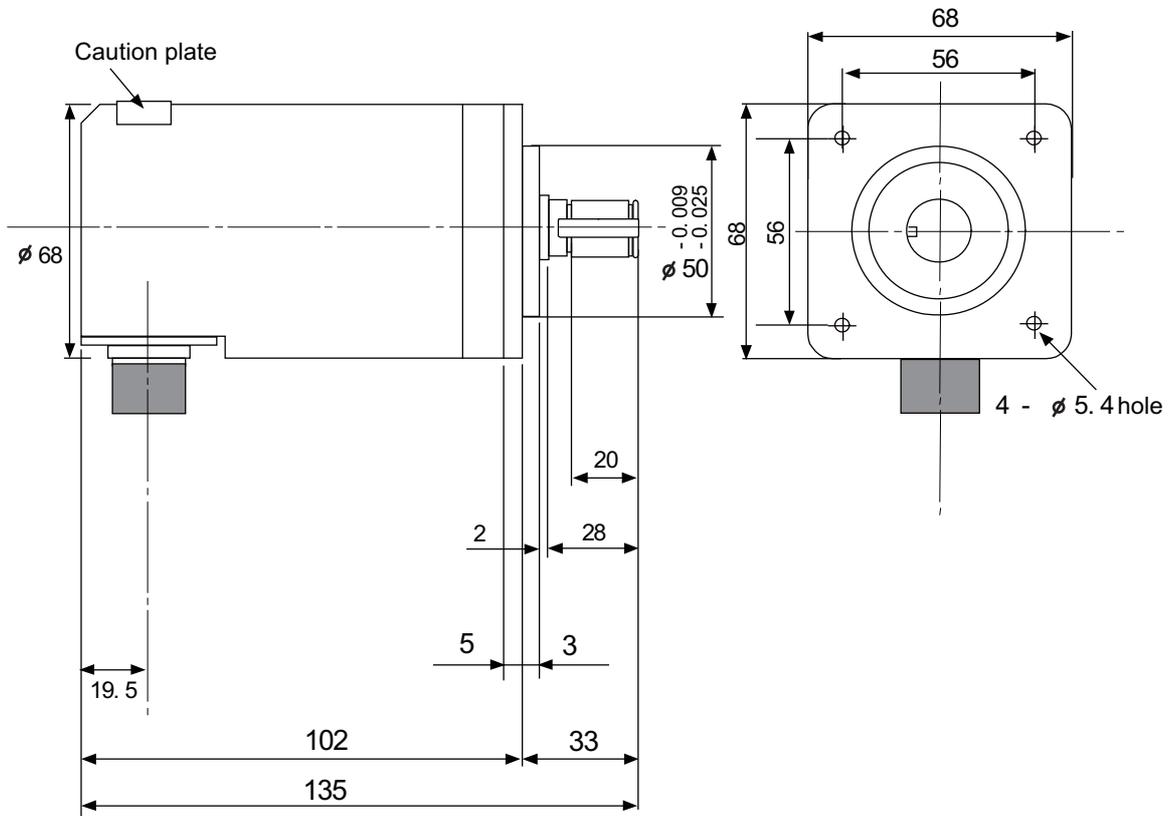

**Connector**

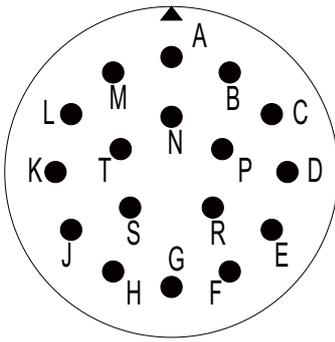

<Connector pin assignment>


Pin	Function	Pin	Function
A	A phase	K	0 V
B	Z phase	L	-
C	B phase	M	-
D	-	N	A phase reverse
E	Case grounding	P	Z phase reverse
F	-	R	B phase reverse
G	-	S	-
H	+5 V	T	-
J	-		

## 4.15 Machine Operation Panel


### 4.15.1 Main Panels A/B

(FCU8-KB921/FCU8-KB922/FCU8-KB925, FCU8-KB923/FCU8-KB924/FCU8-KB926)

**Outline dimensions: FCU8-KB921**

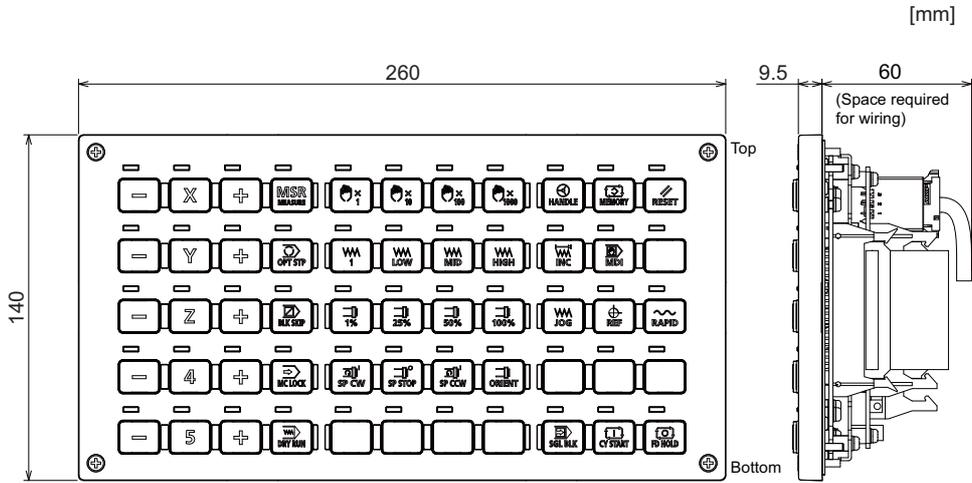


**Outline dimensions: FCU8-KB922**

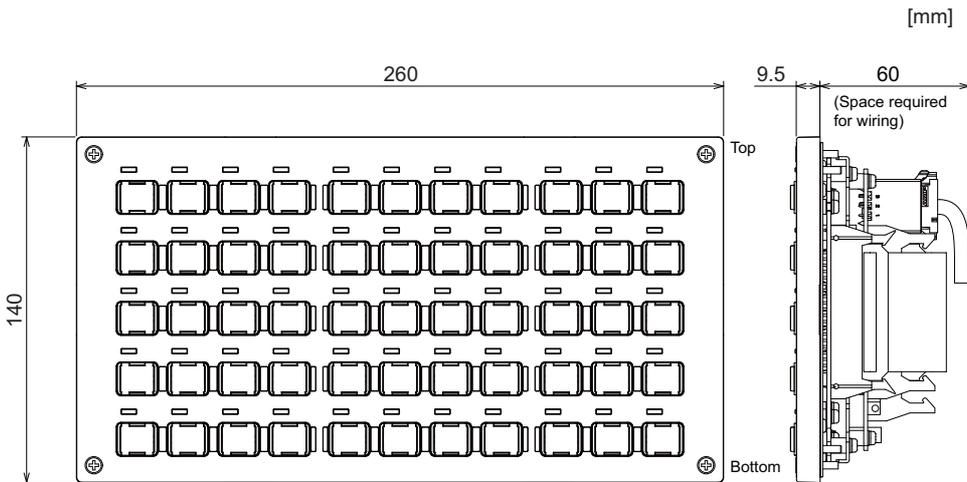




**Outline dimensions: FCU8-KB924**

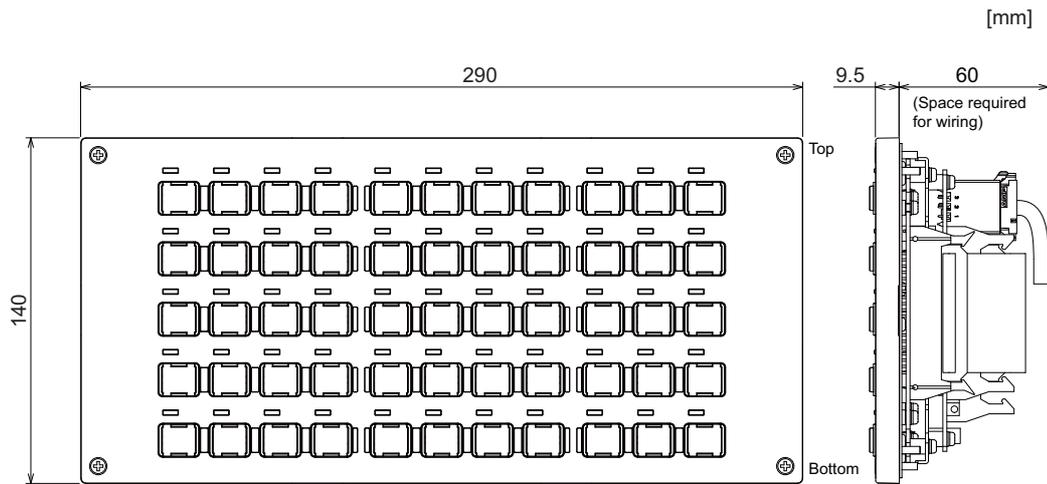


**Outline dimensions: FCU8-KB926**

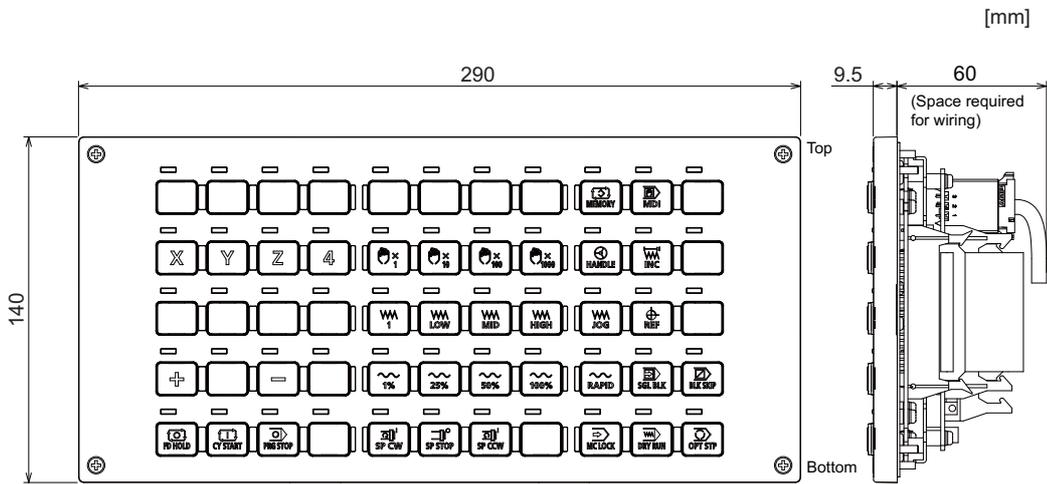


Panel cut dimensions: FCU8-KB921/FCU8-KB922/FCU8-KB925

[mm]

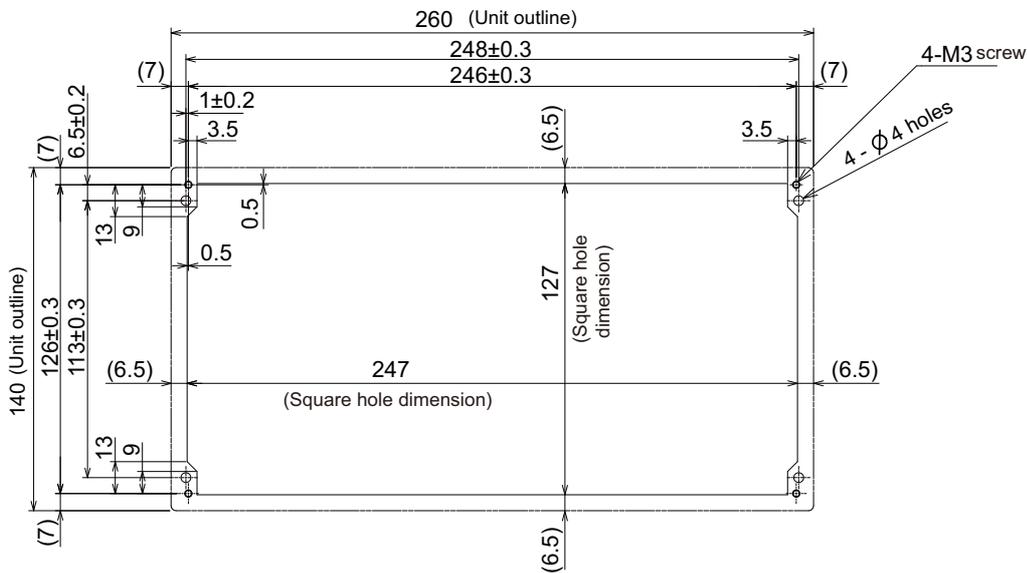


Panel cut dimensions: FCU8-KB923/FCU8-KB924/FCU8-KB926

[mm]

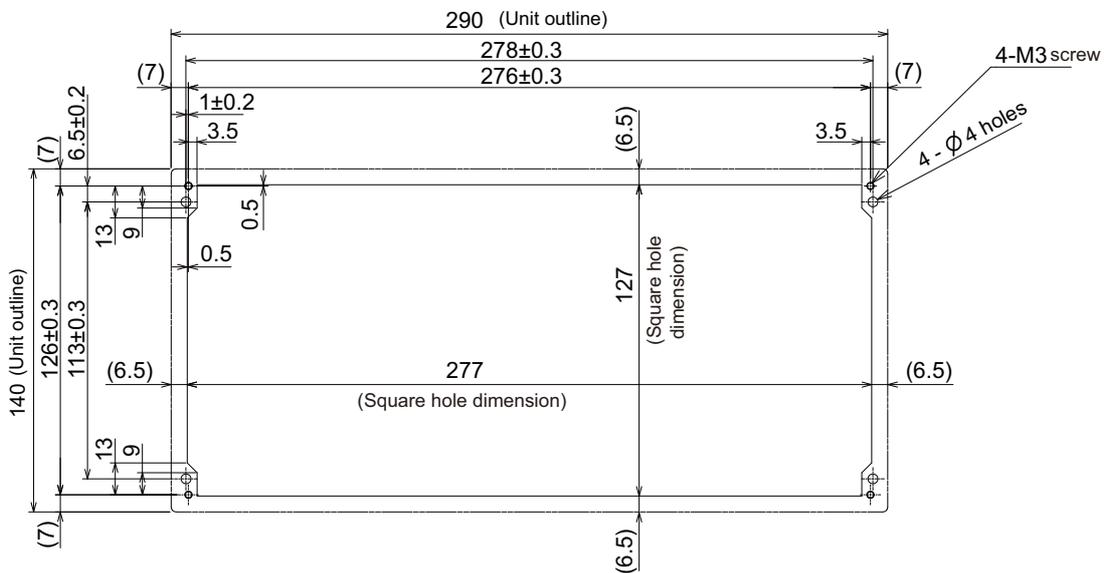


### 4.15.2 Sub Panel A (FCU8-KB931/FCU8-KB941)


#### Outline dimensions: FCU8-KB931

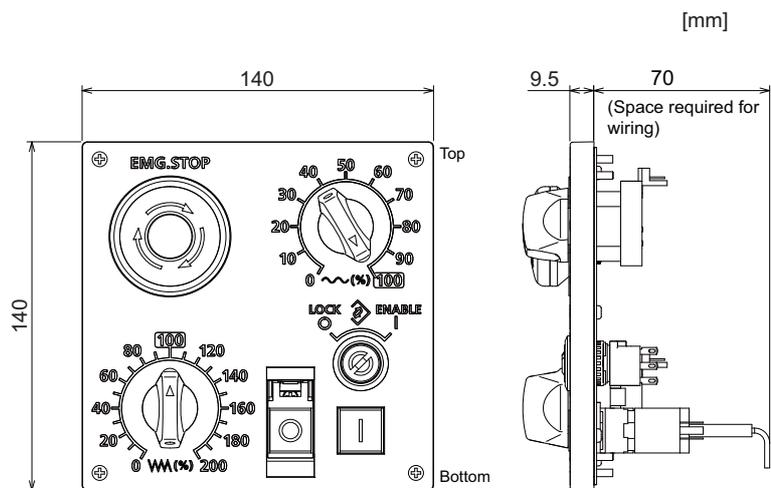

#### Outline dimensions: FCU8-KB941

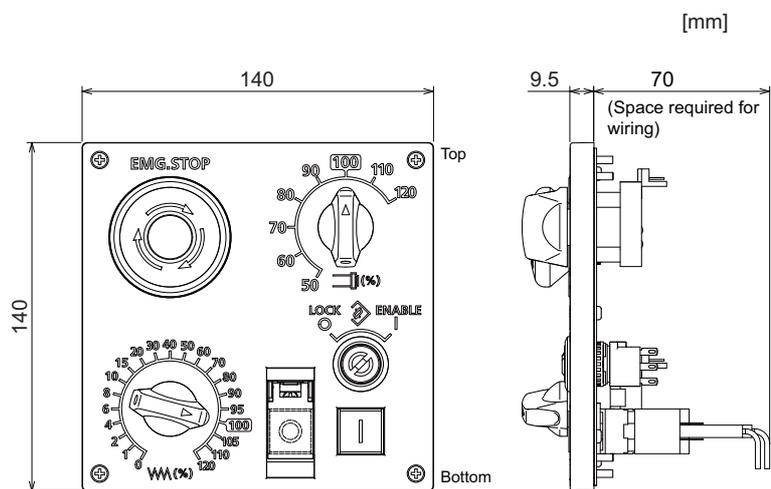

#### Panel cut dimensions: FCU8-KB931/FCU8-KB941

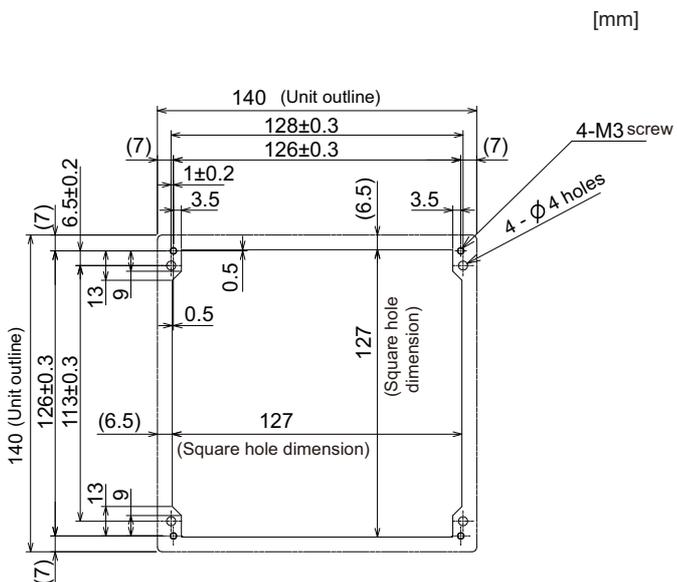

## 4.16 Handy Terminal


Item	Unit name		Handy terminal
	Type		HG1T-SB12UH-MK1346-L5
General specifications	Ambient temperature	During operation	0 to 40 °C
		During storage	-20 °C to 60 °C
	Ambient humidity		Long term: 10 to 75% RH (with no dew condensation)
			Short term: 10 to 95% RH (with no dew condensation) (*1)
	Vibration resistance	During operation	9.8 m/s <sup>2</sup> [1.0 G] or less, 10 to 55 Hz
	Shock resistance	During storage	98 m/s <sup>2</sup> [10.0 G] or less
Working atmosphere		No corrosive gases, dust or oil mist	
Power specifications	Power supply voltage		24 VDC ±5% Ripple noise 240 mV (P-P)
	Current consumption	(max.)	0.2A
	Instantaneous stop tolerance time		24 VDC : 4 ms or less
Others	Heating value		4 W (max.)
	Mass		0.6 kg

(\*1) "Short term" means within one month.

### Note

(1) The unit is an IP65F equivalent.

Dimension and names of parts

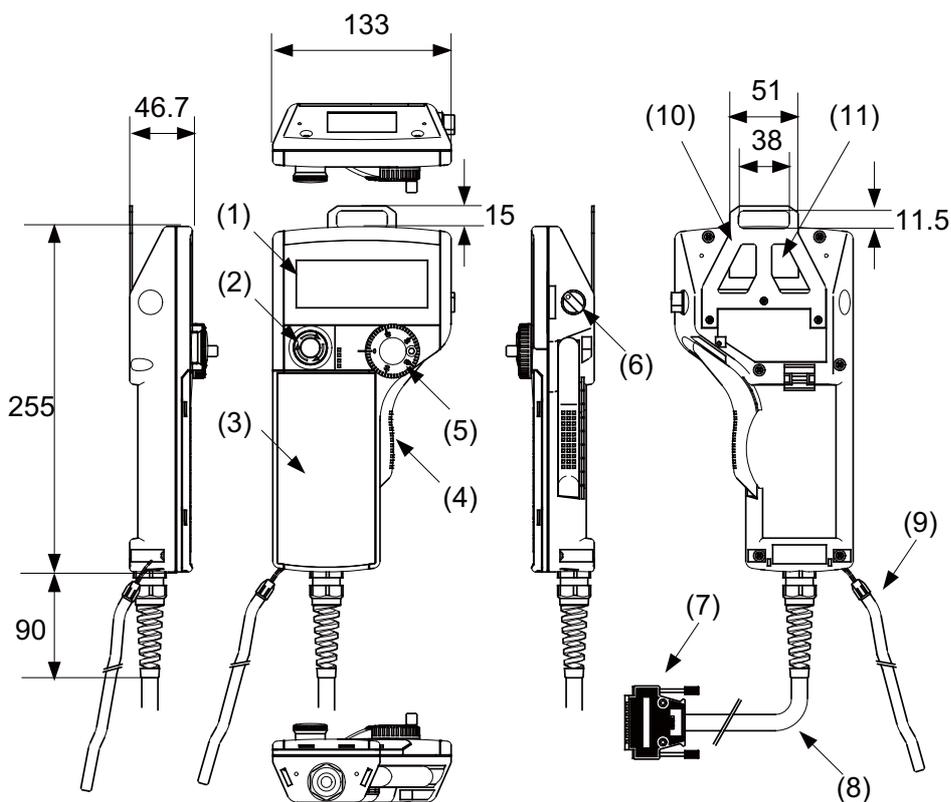


No.	Name	Function/Specification	No.	Name	Function/Specification
(1)	LCD	Monochrome display with backlight 192 (W) × 64 (H) dots	(7)	HOST	Host interface connector (DDK: 17JE-23250-02(D8A6))
(2)	SW1	Emergency stop switch Contact rating/Contact: 24 VDC, 1A Contact configuration: 2b contacts (IDEC Corporation: HA1E-V2S2VR)	(8)	-	Host interface cable (5 m)
(3)	-	Membrane switch (*1)	(9)	-	Simplified hand strap (IDEC Corporation: HG9Z-PS1)
(4)	SW2	Enable switch Contact rating/Contact: 24 VDC , 50 mA Contact configuration: 3-position contact × 2 (OFF-ON-OFF) (IDEC Corporation: HE3B-M2)	(10)	-	Panel mounting bracket (IDEC Corporation: HG9Z-TK1)
(5)	SW4	Manual Pulse Generator Output: Open collector 4.7 kΩ pull-up resistor is connected. (TOKYO SOKUTEIKIZAI CO., LTD: RE19PH50C16RR)	(11)	-	Serial number plate
(6)	SW6	Selector switch			

(\*1) Do not press multiple switches simultaneously: When three or more switches are pressed simultaneously, unpressed switches are also detected as pressed ones.

## 4.17 Thermistor

### 4.17.1 Thermistor(PT3C-51F-M2)

#### Outline dimensions

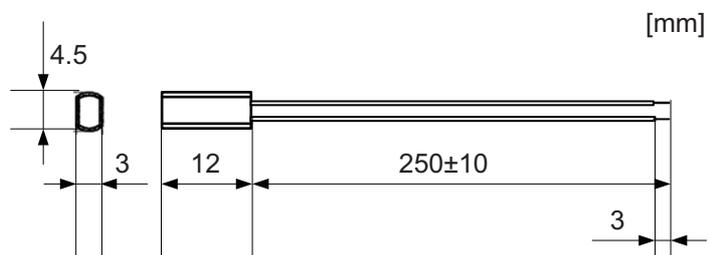

Made by SHIBAURA ELECTRONICS Co., Ltd.

Ambient temperature	-10 to + 190 °C
Insulation resistance	100 MΩ or more at 500 VDC [between case and lead wire]

## 4.18 Exclusive SD Cards

Item		FCU8-SD001G	FCU8-SD004G
Capacity		1 GB	4 GB
NAND Flash		SLC (*1)	
Ambient temperature	During operation	-25 °C to +85 °C	
	During storage	-40 °C to +85 °C	
Ambient humidity	During operation	5% to 95%RH (with no dew condensation)	
	During storage	5% to 95%RH (with no dew condensation)	

(\*1) SLC stands for Single Level Cell, and it stores one bit data in each memory cell.

This provides longer life span and high product reliability in comparison with MLC (Multi Level Cell) and TLC (Triple Level Cell), which are commonly applied to SD cards.

### Note

(1) Do not touch the terminal part with fingers, etc. when handling the SD cards.

The contamination of the terminal part of SD card causes a contact failure or a trouble.

## 4.19 Specifications and Precautions of USB/SD/LAN Interface

### 4.19.1 USB Interface (Personal Computer Unit, Side Memory I/F Unit)

Standards	USB3.0	USB2.0
Data transfer speed(*1)	Super Speed (5 Gbps) High Speed (480 Mbps) Full Speed (12 Mbps) Low Speed (1.5 Mbps)	High Speed (480 Mbps) Full Speed (12 Mbps) Low Speed (1.5 Mbps)
Power supply to USB device	Supply voltage: 5 V $\pm$ 5% Supply current: Max. 900 mA/port	Supply voltage: 5 V $\pm$ 5% Supply current: Max. 500 mA/port (However, max. 200 mA/port for side memory I/F unit)
Number of free ports	Personal computer unit $\times$ 2	Personal computer unit $\times$ 4, Side memory interface unit $\times$ 1
Max. cable length	3 m (For Super Speed. 5 m for up to High Speed)	5 m

(\*1) Data transfer speed is the theoretical value on the standard, and the actual speed will be inferior to the value listed above. The transfer speed may be restrained depending on the specification of the connected device.

#### Note

(1) Side memory I/F unit is only for 19-type display unit.

#### ■ Precautions for use of commercially available USB keyboards and mice(Only for the display unit with the computer.)

MITSUBISHI will not provide performance guarantee and maintenance for commercially available USB keyboards and mice. When any of them is to be used, careful performance check must be required by the machine tool builder.

Commercially available devices may not be compatible with Mitsubishi units or appropriate temperature- or noise-wise for the factory automation environment.

Commercially available USB keyboards/mice are susceptible to noise, etc., and may cause a malfunction in the unit that may lead to an accident. Do not use them while the machine is operated.

#### ■ Precautions for use of other commercially available USB devices(Only for the display unit with the computer.)

When connecting a commercially available USB device that requires power exceeding the maximum current, select the one of which power can be supplied from an outside source.

MITSUBISHI will not provide performance guarantee and maintenance for commercially available USB printer, USB floppy disk, USB memory, USB hub, USB-CD drive, USB-DVD drive, and other USB devices. Commercially available devices may not be compatible with Mitsubishi units or appropriate temperature- or noise-wise for the factory automation environment. In the case of using one of them, careful performance check must be required by the machine tool builder, and necessary noise countermeasures, such as executing EMI countermeasures or adding the ferrite cores, must be taken.

#### ■ Precautions for insertion/removal of USB memory

When inserting/removing an USB memory, turn the MITSUBISHI device's power OFF. Do not pull out the USB memory or turn OFF the power during access to the USB memory. Failure to observe this could cause the memory contents to be erased.

When Inserting/removing a USB memory, be sure to have enough interval to perform that (about 10 seconds or more).

In case of emergency, always perform backups by having your important data duplicate, etc. as MITSUBISHI will not guarantee the broken or lost data.

#### ■ Precaution for operation with front-side USB memory

A USB memory to be used has to be supported USB2.0 Hi-Speed (480 Mbps).

When connecting the USB memory, connect it directly without using the extension cable or USB hub.

Machine vibration may cause the USB memory to fall out depending on environment. Therefore, the operation with the front-side USB memory is required to be performed on your own responsibility.

### 4.19.2 SD Interface (Control Unit, Side Memory I/F Unit)

<b>Standards</b>	SD/SDHC (*1)
<b>Transfer speed</b>	According to the connecting SD card
<b>Maximum capacity</b>	32 GB
<b>Number of free ports</b>	Control unit × 1, Side memory I/F unit × 1

(\*1) SDXC is not supported.

#### Note

(1) Side memory I/F unit is only for 19-type display unit.

#### ■ Precautions for use of commercially available SD card

MITSUBISHI will not provide performance guarantee and maintenance for commercially available SD card, mini SD card or micro SD card (requires converting adapter). When any of them is to be used, careful performance check must be required by the machine tool builder.

Commercially available devices may not be compatible with MITSUBISHI units or suitable FA environment for temperature- or noise-wise.

#### ■ Precautions for insertion/removal of SD card

When inserting/removing an SD card, turn the MITSUBISHI device's power OFF. Do not pull out the card or turn OFF the power during access to the SD card. Failure to observe this could cause the memory contents to be erased.

In case of emergency, always perform backups by having your important data duplicate, etc. as MITSUBISHI will not guarantee the broken or lost data.

### 4.19.3 LAN Interface (Control Unit, Personal Computer Unit)

<b>Standards</b>	1000BASE-T/100BASE-TX/10BASE-T
<b>Data transfer speed(*1)</b>	1000Mbps/100Mbps/10Mbps
<b>Number of free ports</b>	Control unit × 1, Personal computer unit × 1
<b>Max. cable length</b>	100 m

(\*1) Data transfer speed is the theoretical value on the standard, and the actual speed will be inferior to the value listed above. The transfer speed may be restrained depending on the specification of the connected device.

#### Note

(1) When half-duplex communication is made, the response time may become long depending on the connected device. Use full-duplex communication to connect with the opposite device via a switching HUB.

#### ■ Precautions for selection of LAN cable

Make sure to select the LAN cables which are "category 5e or above" and "shielded". Cable wire material with double shielded, which is appropriate for FA environment., is recommended.

# **M800VS/M80V Series Hardware**






---

## **System Basic Configuration (M800VS/M80V Series)**

### 1.1 System Basic Configuration Drawing

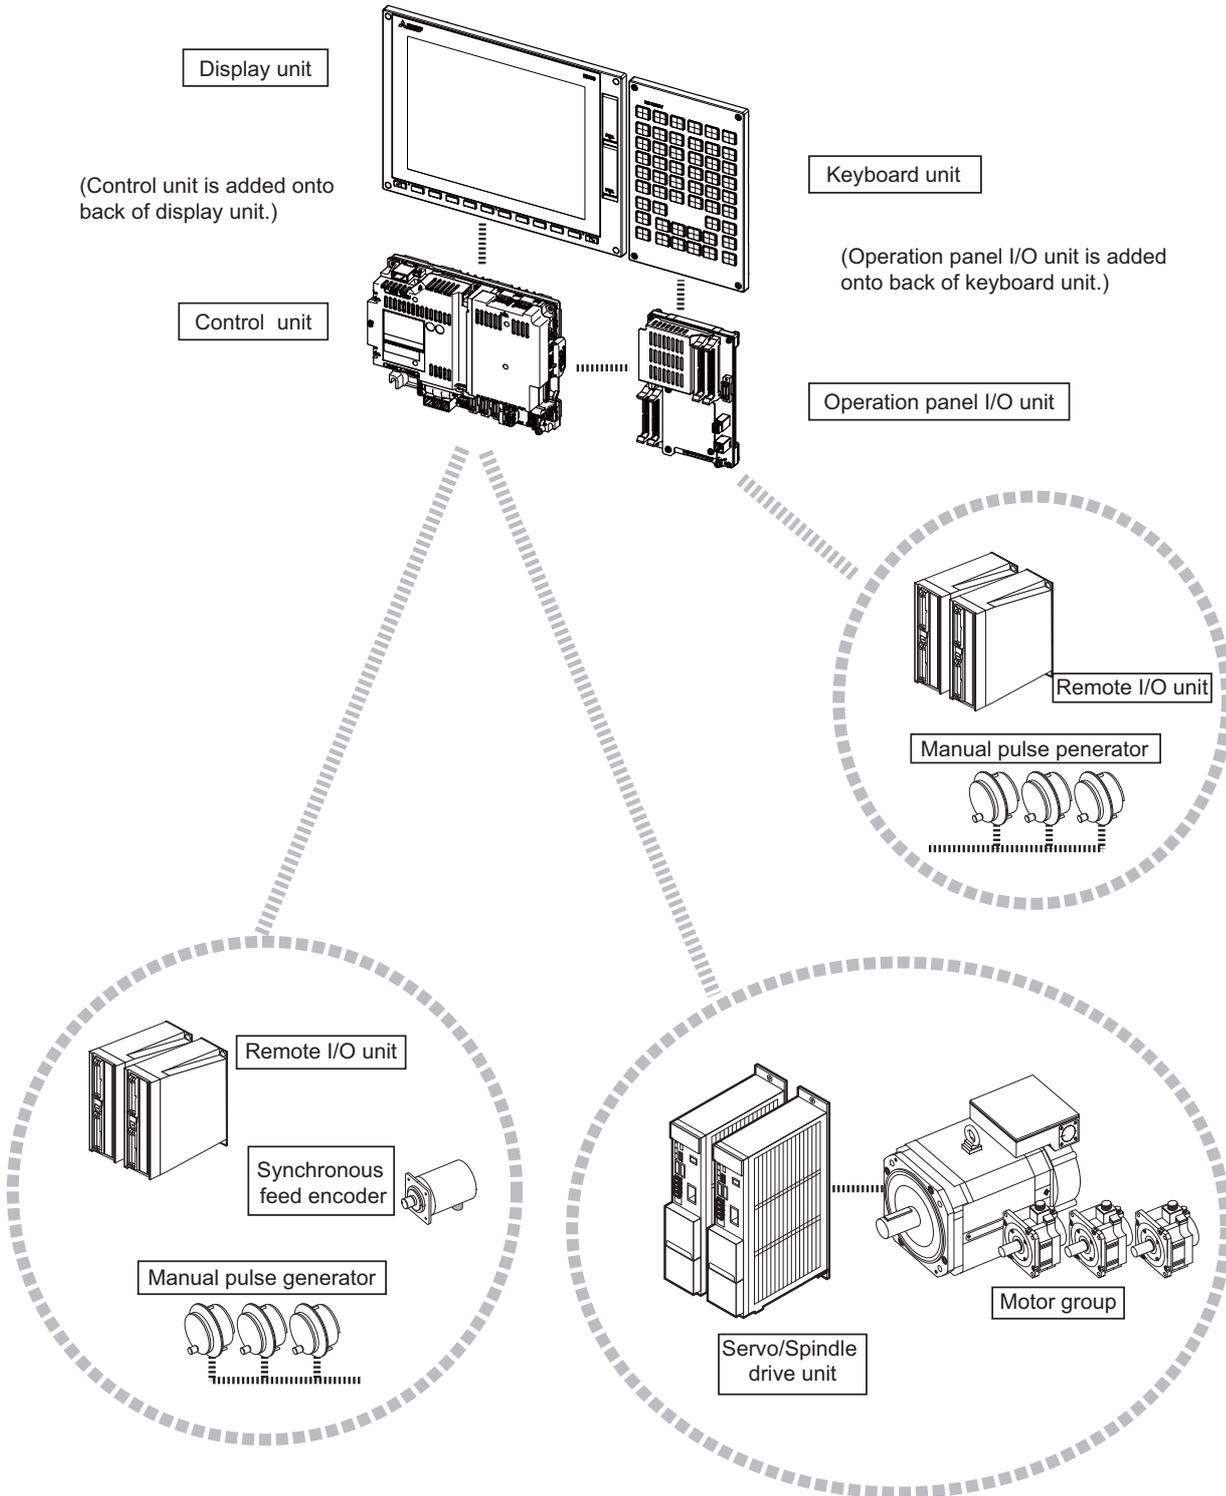

**Note**

(1) For the drive unit configuration, refer to the instruction manual of the drive unit you use.


---

## General Connection Diagram (M800VS/M80V Series)

## 2.1 General Connection Diagram [M800VS]

⋯ Dotted lines indicate the sections prepared by the machine tool builder.

<> Angle brackets indicates attached cable of unit.

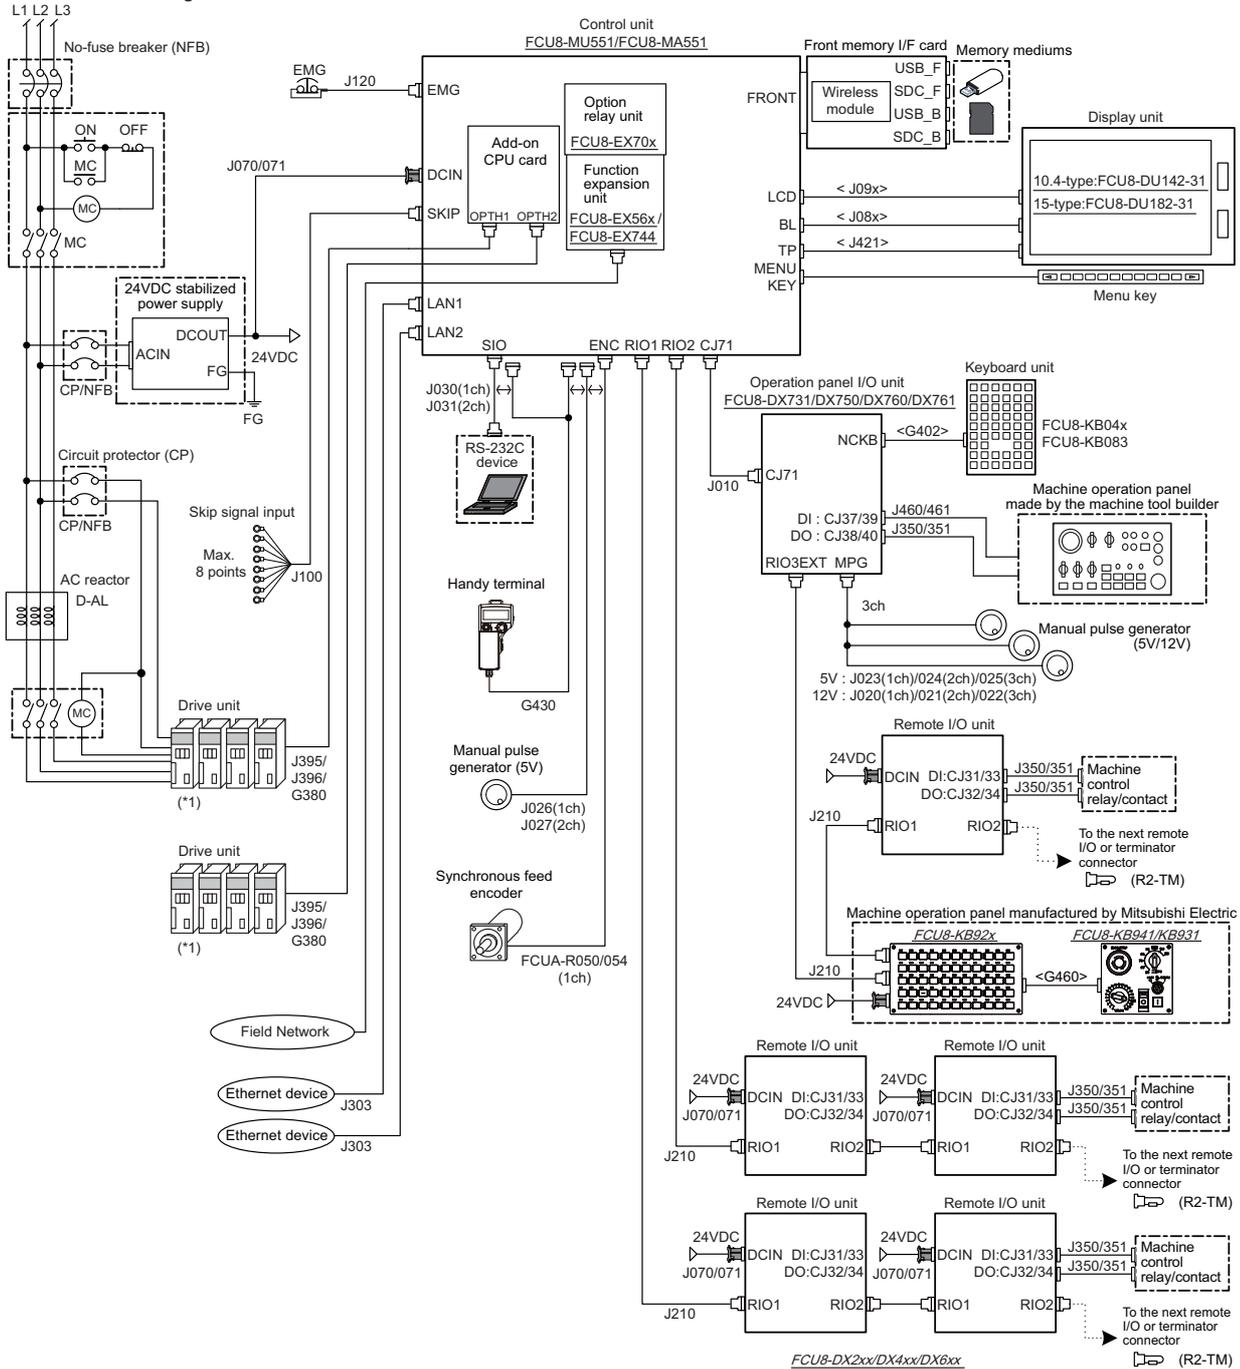


(\*1) For information on how to connect the drive unit, refer to the drive unit's manual.

## 2.2 General Connection Diagram [M80V]

### Without smart safety observation

⋯ Dotted lines indicate the sections prepared by the machine tool builder.

<> Angle brackets indicates attached cable of unit.

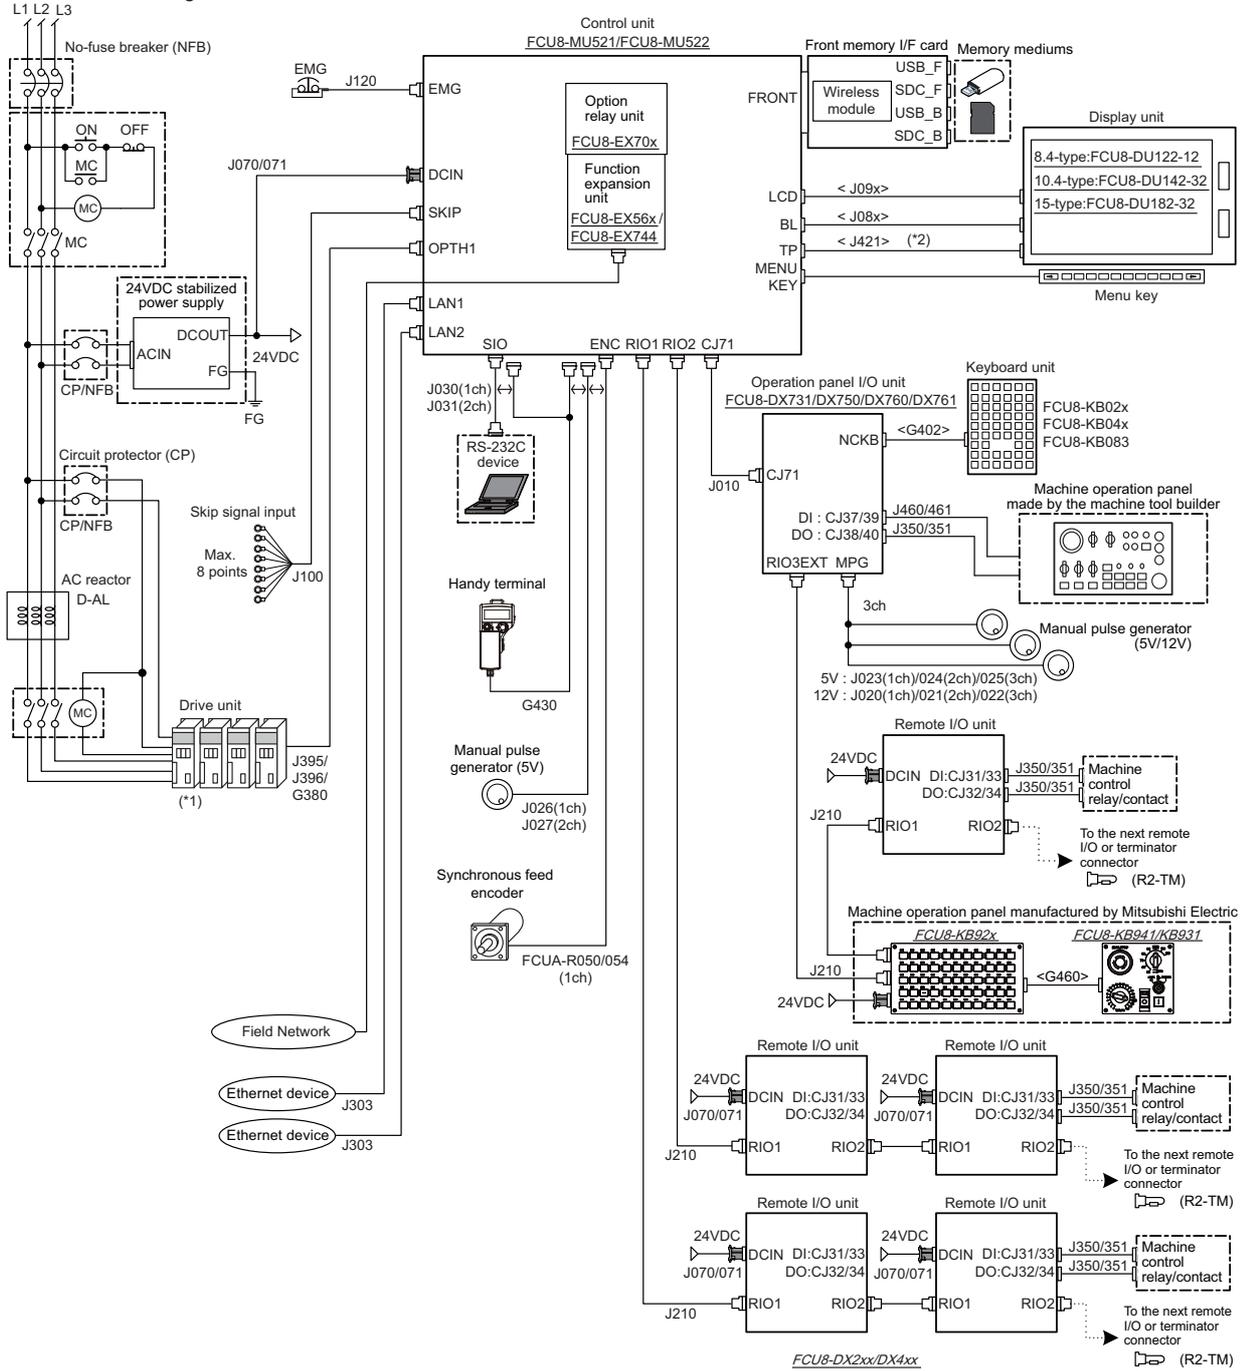


(\*1) For information on how to connect the drive unit, refer to the drive unit's manual.

(\*2) For the 8.4-type display unit, TP connector is not used.

■ With smart safety observation

⋯ Dotted lines indicate the sections prepared by the machine tool builder.  
 <> Angle brackets indicates attached cable of unit.

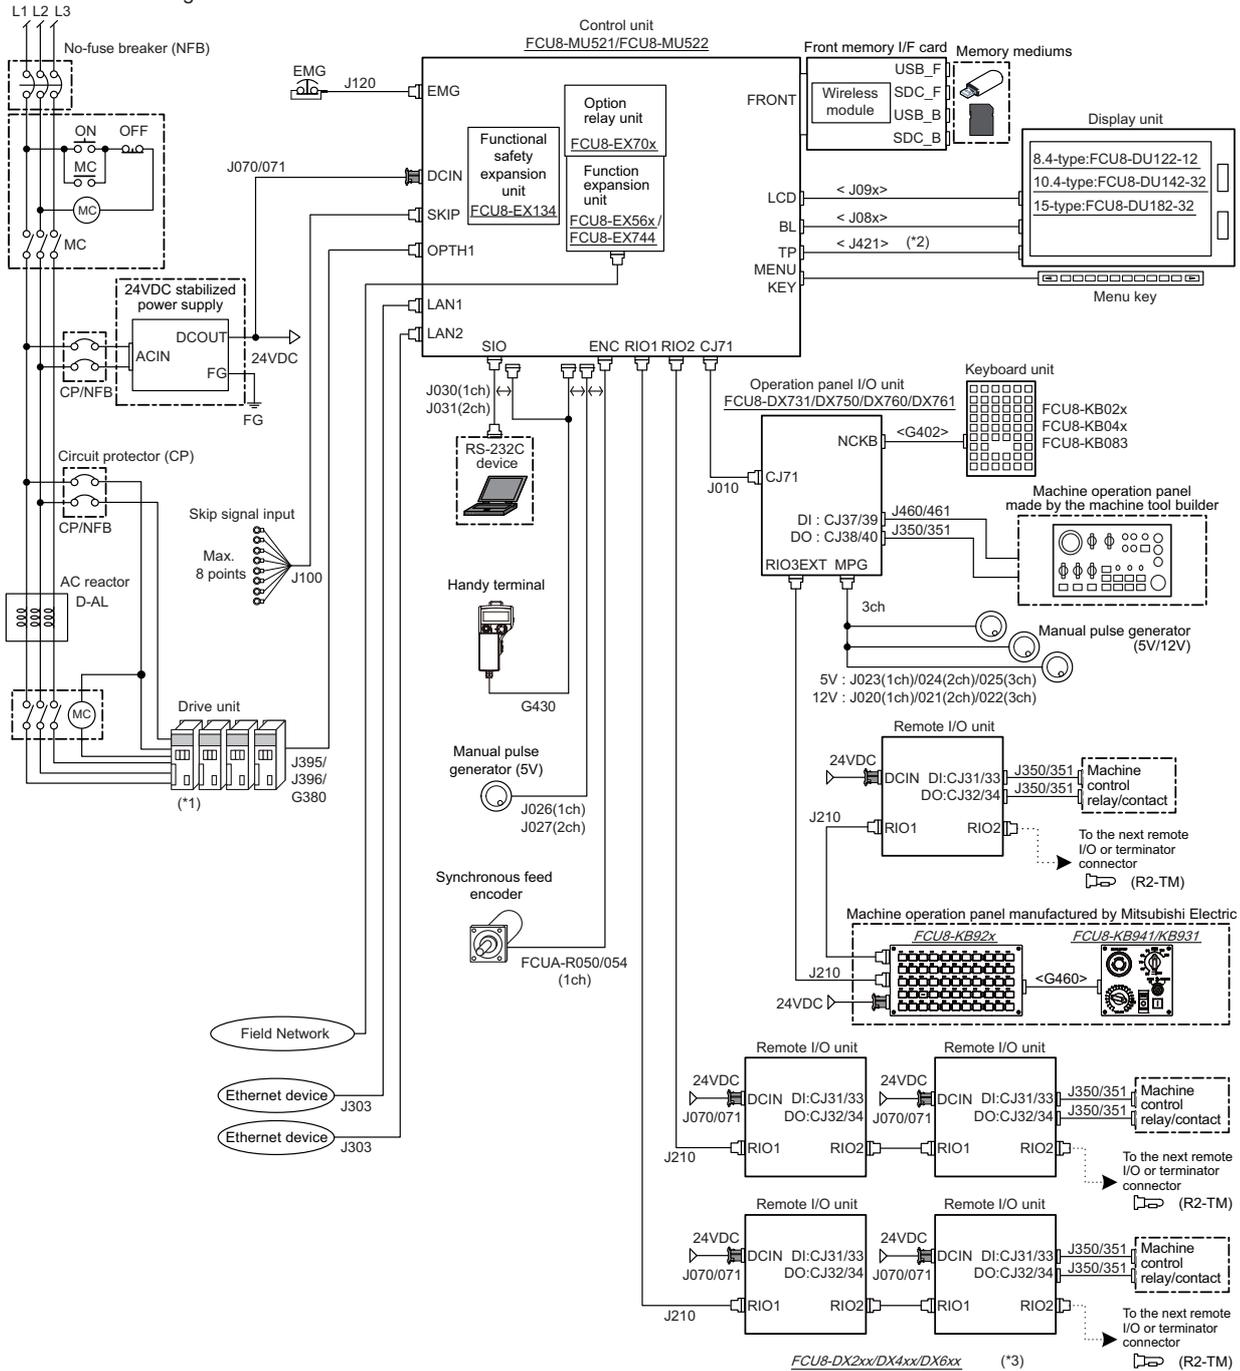

(\*1) For information on how to connect the drive unit, refer to the drive unit's manual.

(\*2) For the 8.4-type display unit, TP connector is not used.


(\*3) The safety remote I/O unit is available only when the functional safety expansion unit is mounted.

## 2.3 Differences in Connection Depending on the Operation Panel I/O Unit


There are differences in connection depending on the operation panel I/O unit.

The parts surrounded by the dotted lines in the figures below are different.

### FCU8-DX731/DX750/DX760/DX761

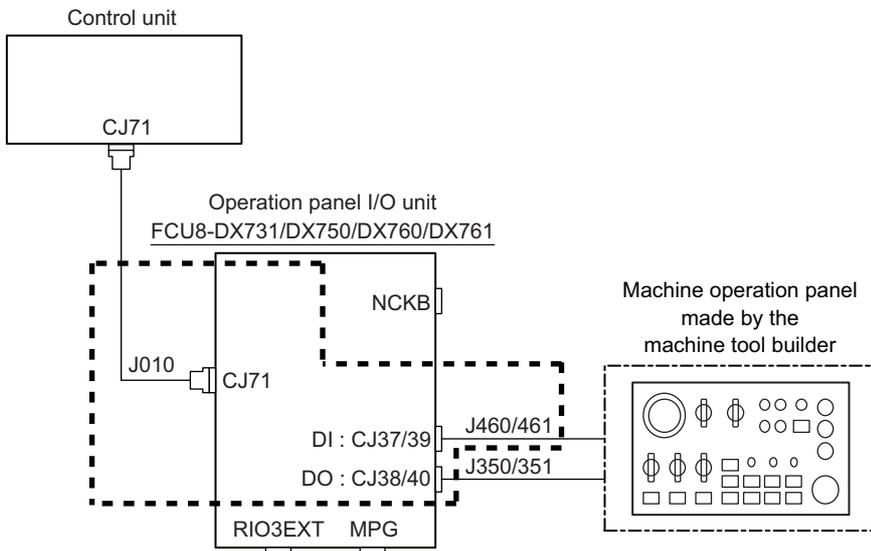


### FCU8-DX834

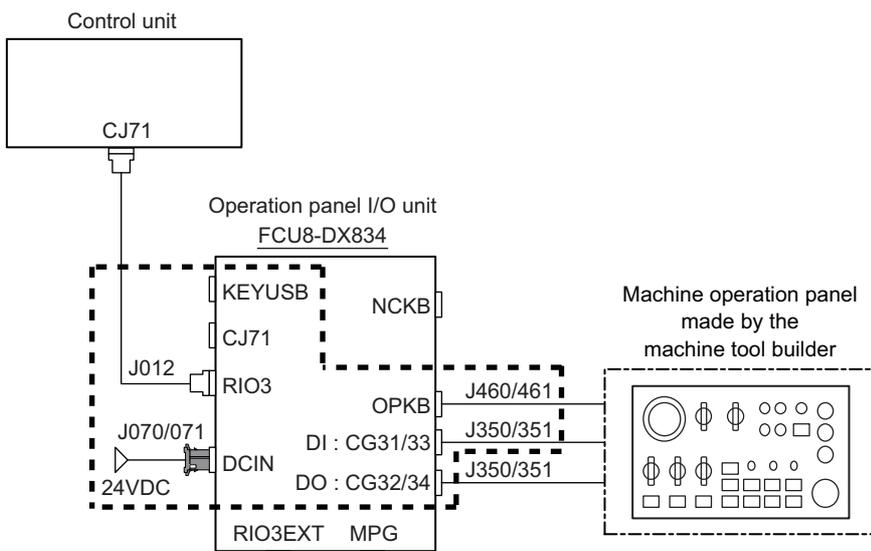

## 2.4 Connecting a Pulse-controlled Inverter [M80V]

Pulse-controlled inverter refers to an inverter capable of controlling spindle operation through pulse train input.

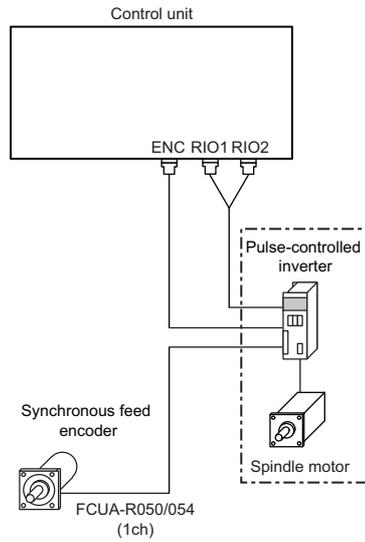

### Note

- (1) When the pulse-controlled inverter is connected, the remote I/O unit cannot be connected to either of the RIO1 connector or the RIO2 connector.

## **List of Configuration (M800VS/M80V Series)**

**3 List of Configuration (M800VS/M80V Series)**

## 3.1 Control Unit [M800VS]

**3.1 Control Unit [M800VS]**

Classification	Type	Components	Remarks
NC functions and display controller For M830VS	FCU8-MU551	Base control card Add-on CPU card Front-side memory I/F card	This unit is not compliant with both Export Trade Control Order and Foreign Exchange Order.
NC functions and display controller For M850VS	FCU8-MA551	Base control card Add-on CPU card Front-side memory I/F card	This unit is not compliant with Export Trade Control Order, and it is compliant with Foreign Exchange Order.

**3.2 Control Unit [M80V]**

Classification	Type	Components	Remarks
NC functions and display controller For M80V Type B	FCU8-MU521	Base control card Front-side memory I/F card	This unit is not compliant with both Export Trade Control Order and Foreign Exchange Order.
NC functions and display controller For M80V Type A	FCU8-MU522	Base control card Front-side memory I/F card	This unit is not compliant with both Export Trade Control Order and Foreign Exchange Order.

**3.3 Display Unit [M800VS]**

Classification	Type	Components	Remarks
10.4-type color LCD touchscreen (VGA: 640 x 480)	FCU8-DU142-31	LCD panel Menu keys Escutcheon Base metal plate Cable Screw cap set	Front side memory I/F is normally equipped with the control unit
15-type color LCD touchscreen (XGA: 1024 x 768)	FCU8-DU182-31	LCD panel Menu keys Escutcheon Base metal plate Cable Screw cap set	Front side memory I/F is normally equipped with the control unit

**3.4 Display Unit [M80V]**

Classification	Type	Components	Remarks
8.4-type color LCD (VGA: 640 x 480)	FCU8-DU122-12	LCD panel Menu keys Escutcheon Base metal plate Cable Screw cap set	Front side memory I/F is normally equipped with the control unit
10.4-type color LCD touchscreen (VGA: 640 x 480)	FCU8-DU142-32	LCD panel Menu keys Escutcheon Base metal plate Cable Screw cap set	Front side memory I/F is normally equipped with the control unit
15-type color LCD touchscreen (XGA: 1024 x 768)	FCU8-DU182-32	LCD panel Menu keys Escutcheon Base metal plate Cable Screw cap set	Front side memory I/F is normally equipped with the control unit

**3 List of Configuration (M800VS/M80V Series)**

## 3.5 Keyboard Unit [M800VS]

**3.5 Keyboard Unit [M800VS]**

Classification	Type	Components	Remarks
Keyboard for 10.4-type display unit Clear key	FCU8-KB041	Escutcheon, key switch G402 cable Screw cap set	ONG layout (for L system, XZF)
Keyboard for 10.4-type display unit Clear key	FCU8-KB046	Escutcheon, key switch G402 cable Screw cap set	ONG layout (for M system/L system, XYZ)
Keyboard for 10.4-type display unit Clear key	FCU8-KB047	Escutcheon, key switch G402 cable Screw cap set	Full keyboard (for M system/L system) (in tandem)
Keyboard for 10.4-type display unit Clear key	FCU8-KB048	Escutcheon, key switch G402 cable Screw cap set	ABC layout (for M system/L system)
Keyboard for 15-type display unit Clear key	FCU8-KB083	Escutcheon, key switch G402 cable Screw cap set	Full keyboard (for M system/L system) (in tandem)

**3.6 Keyboard Unit [M80V]**

Classification	Type	Components	Remarks
Keyboard for 8.4-type display unit Sheet keys	FCU8-KB025	Escutcheon, key switch G402 cable Screw cap set	ONG layout (for L system, XZF)
Keyboard for 8.4-type display unit Clear key	FCU8-KB026	Escutcheon, key switch G402 cable Screw cap set	ONG layout (for M system/L system, XYZ)
Keyboard for 8.4-type display unit Clear key	FCU8-KB028	Escutcheon, key switch G402 cable Screw cap set	ONG layout (for L system, XZF)
Keyboard for 8.4-type display unit Clear key	FCU8-KB029	Escutcheon, key switch G402 cable Screw cap set	ONG layout (for M system/L system) (in tandem)
Keyboard for 10.4-type display unit Clear key	FCU8-KB041	Escutcheon, key switch G402 cable Screw cap set	ONG layout (for L system, XZF)
Keyboard for 10.4-type display unit Clear key	FCU8-KB046	Escutcheon, key switch G402 cable Screw cap set	ONG layout (for M system/L system, XYZ)
Keyboard for 10.4-type display unit Clear key	FCU8-KB047	Escutcheon, key switch G402 cable Screw cap set	Full keyboard (for M system/L system) (in tandem)
Keyboard for 10.4-type display unit Clear key	FCU8-KB048	Escutcheon, key switch G402 cable Screw cap set	ABC layout (for M system/L system)
Keyboard for 15-type display unit Clear key	FCU8-KB083	Escutcheon, key switch G402 cable Screw cap set	Full keyboard (for M system/L system) (in tandem)

## 3.7 Operation Panel I/O Unit

Classification	Type	Components	Remarks
DI 24 V/0 V common input [64 points] DO Source output [48 points] AO analog output [1 point]	FCU8-DX731	Base card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 48-points source type (200 mA/point) AO: 1 point Manual pulse generator input: 2 ch Control unit I/F Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1, 3, 7 to 12, 20 to 22 RIO extensible stations: 2, 4 to 6, 13 to 19, 23 to 64
DI 24 V/0 V common input [96 points] DO Source output [64 points]	FCU8-DX750	Base card RIO 2.0 terminator connector (R2-TM)	DI: 96-points 24 V/0 V common type DO: 64-points source type (200 mA/point) Manual pulse generator input: 3 ch Control unit I/F Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 3, 7 to 12, 20 to 22 RIO extensible stations: 4 to 6, 13 to 19, 23 to 64
DI 24 V/0 V common input [96 points] DO Source output [96 points]	FCU8-DX760	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 96-points 24 V/0 V common type DO: 96-points source type (200 mA/point) Manual pulse generator input: 3 ch Control unit I/F Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 12, 20 to 22 RIO extensible stations: 5, 6, 13 to 19, 23 to 64
DI 24 V/0 V common input [96 points] DO Source output [64 points] AI Analog input [1 point] AO Analog output [1 point]	FCU8-DX761	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 96-points 24 V/0 V common type DO: 64-points source type (200 mA/point) AI: 1 points AO: 1 point Manual pulse generator input: 3 ch Control unit I/F Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 5, 7 to 12, 20 to 22 RIO extensible stations: 6, 13 to 19, 23 to 64
DI 24 V/0 V common input [64 points] DO Source output [64 points] Scan input [64 points] Scan output [64 points]	FCU8-DX834	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 64-points source type (200 mA/point) Scan input: 64 points Scan output: 64 points Manual pulse generator input: 3ch Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 14, 20 to 22 RIO extensible stations: 5, 6, 15 to 19, 23 to 64

♦ DI: Digital input signals, DO: Digital output signals

## 3.8 Remote I/O Unit

Classification	Type	Components	Remarks
DI 24 V/0 V common input [32 points] DO Source output [32 points]	FCU8-DX220	Base card RIO 2.0 connector set	DI: 32-points 24 V/0 V common type DO: 32-points source type (200 mA/point) Number of occupied stations: 1
DI 24 V/0 V common input [64 points] DO Source output [48 points]	FCU8-DX230	Base card RIO 2.0 connector set	DI: 64-points 24 V/0 V common type DO: 48-points source type (200 mA/point) Number of occupied stations: 2
DI 24 V/0 V common input [64 points] DO Source output [48 points] AO analog output [1 point]	FCU8-DX231	Base card RIO 2.0 connector set	DI: 64-points 24 V/0 V common type DO: 48-points source type (200 mA/point) AO: 1 point Number of occupied stations: 2
AI analog input [4 points] AO analog output [1 point]	FCU8-DX202	Base card RIO 2.0 connector set	AI: 4 points AO: 1 point Number of occupied stations: 1
DI 0 V common input [16 points] DO Source output (large capacity) [8 points]	FCU8-DX213	Base card RIO 2.0 connector set	DI: 16-points 0 V common type (3 mA/point) DO: 8-points source type (2 A/point) Number of occupied stations: 1
DI 0 V common input [16 points] DO Source output (large capacity) [8 points]	FCU8-DX213-1	Base card RIO 2.0 connector set	DI: 16-points 0 V common type (9 mA/point) DO: 8-points source type (2 A/point) Number of occupied stations: 1
Safety DI 0 V common input [8 points] Safety DO Source output (large capacity) [4 points]	FCU8-DX654	Base card RIO 2.0 connector set	Safety DI: 8-points 0 V common type (3 mA/point) Safety DO: 4-points source type (2 A/point) Number of occupied stations: 2
Safety DI 0 V common input [8 points] Safety DO Source output (large capacity) [4 points]	FCU8-DX654-1	Base card RIO 2.0 connector set	Safety DI: 8-points 0 V common type (9 mA/point) Safety DO: 4-points source type (2 A/point) Number of occupied stations: 2
DI 24 V/0 V common input [32 points] DO Source output [32 points] Safety DI 0 V common input [8 points] (*1) Safety relay output [4 points] (*2)	FCU8-DX651	Base card Add-on card RIO 2.0 connector set	DI: 32-points 24 V/0 V common type DO: 32-points source type (200 mA/point) Safety DI: 8-points 0 V common type Safety relay: 4 points (non-voltage contact) Relay contact welding detection Number of occupied stations: 3
Thermistor input [12 points]	FCU8-DX408	Base card RIO 2.0 connector set	Thermistor input: 12 points Number of occupied stations: 3
Multi-analog input [4 points](*3)	FCU8-DX409	Base card RIO 2.0 connector set	Multi-analog input: 4 points Number of occupied stations: 4

(\*1) Safety DI uses 16 points of terminal because of the duplication wiring.

(\*2) Safety relay output uses 8 points of terminal because of the duplication wiring.

(\*3) Voltage input, current input, thermocouple input and resistance temperature detector input are selected for each channel.

♦ DI: Digital input signals, DO: Digital output signals, AI: Analog input signals, AO: Analog output signals

### 3.9 Functional Safety Expansion Unit [M80V]

Classification	Type	Components	Remarks
Functional safety expansion unit	FCU8-EX134	Add-on card	Smart safety observation

### 3.10 Function Expansion Unit

Classification	Type	Components	Remarks
CC-Link expansion unit	FCU8-EX561	CC-Link I/F PCB	CC-Link 1 ch
PROFIBUS-DP master unit	FCU8-EX563	PROFIBUS-DP I/F PCB	PROFIBUS-DP 1 ch
CC-Link IE Field Master/local unit	FCU8-EX564	Base card Add-on card	CC-Link IE Field 2 ch
EtherNet/IP scanner/adaptor unit	FCU8-EX565	Base card Add-on card	EtherNet/IP 1 ch (LAN1 only; LAN2 unavailable)
FL-net expansion unit	FCU8-EX568	Base card Add-on card	FL-net 1 ch (LAN1 only; LAN2 unavailable)
Vibration cutting expansion unit	FCU8-EX744	Base card	Vibration cutting function

Classification	Type	Components	Remarks
Option relay unit	FCU8-EX704	Relay PCB	Function expansion unit for 1 slot
Option relay unit	FCU8-EX705	Relay PCB	Function expansion unit for 2 slots

- ♦ To use the function expansion unit, the option relay unit (FCU8-EX70x) is required.

### 3.11 Manual Pulse Generator

Classification	Type	Components	Remarks
5 V manual pulse generator	UFO-01-2Z9	UFO-01-2Z9 (Produced by NIDEC NEMICON)	Input: 5 VDC 100 pulse/rev
12 V manual pulse generator	HD60C	HD60C	Input: 12 VDC 25 pulse/rev

### 3.12 Synchronous feed encoder

Classification	Type	Components	Remarks
Synchronous feed encoder	OSE1024-3-15-68	OSE1024-3-15-68	Input: 5 VDC 1024 pulse/rev 6000 rpm, 68-square flange
Synchronous feed encoder	OSE1024-3-15-68-8	OSE1024-3-15-68-8	Input: 5 VDC 1024 pulse/rev 8000 rpm, 68-square flange
Synchronous feed encoder	OSE1024-3-15-160	OSE1024-3-15-160	Input: 5 VDC 1024 pulse/rev 6000 rpm, 160-square flange

**3 List of Configuration (M800VS/M80V Series)**

## 3.13 Machine Operation Panel

**3.13 Machine Operation Panel**

Classification	Type	Components	Remarks
Main panel A (For 8.4-type/15-type display unit)	FCU8-KB921	Escutcheon, key switch Control card G054 cable, screw cap set	Mitsubishi Electric standard key layout (55 keys) (Standard specification A)
Main panel A (For 8.4-type/15-type display unit)	FCU8-KB922	Escutcheon, key switch Control card G054 cable, screw cap set	Custom specification, 55-key layout (Clear key top cover sold separately)
Main panel B (For 10.4-type display unit)	FCU8-KB923	Escutcheon, key switch Control card G054 cable, screw cap set	Mitsubishi Electric standard key layout (55 keys) (Standard specification A)
Main panel B (For 10.4-type display unit)	FCU8-KB924	Escutcheon, key switch Control card G054 cable, screw cap set	Custom specification, 55-key layout (Clear key top cover sold separately)
Main panel A (For 8.4-type/15-type display unit)	FCU8-KB925	Escutcheon, key switch Control card G054 cable, screw cap set	Mitsubishi Electric standard key layout (55 keys) (Standard specification B)
Main panel B (For 10.4-type display unit)	FCU8-KB926	Escutcheon, key switch Control card G054 cable, screw cap set	Mitsubishi Electric standard key layout (55 keys) (Standard specification B)
Sub panel A (Common for all display units)	FCU8-KB931	Escutcheon Emergency stop switch, override switch ON/OFF switch, screw cap set	Mitsubishi Electric standard switch specification (Standard specification A)
Sub panel A (Common for all display units)	FCU8-KB941	Escutcheon Emergency stop switch, override switch ON/OFF switch, screw cap set	Mitsubishi Electric standard switch specification (Standard specification B)
Clear key top set	N030C975G51/ N030C975G55	Clear key top cover (20 pieces/60 pieces)	
Set of labels for M7 standard key layout	N939A169G51	Labels for M7 standard key layout (1 sheet)	

**3.14 Handy Terminal**

Classification	Type	Components	Remarks
Handy terminal	HG1T-SB12UH- MK1346-L5		

**3 List of Configuration (M800VS/M80V Series)**

## 3.15 Cable Connector Sets

**3.15 Cable Connector Sets**

Classification	Type	Components	Remarks
General I/O (For SKIP, SIO, MPG, AIO)	FCUA-CS000	Connector (10120-3000PE, 2 pcs.) Shell kit (10320-52F0-008, 2 pcs.)	
Emergency stop connector (For EMG)	005057-9403 0016020103 x 3 pcs.	Connector (50-57-9403), Contact (0016020103, 3 pcs.)	
Connector kit for RIO 2.0 unit	RIO2 CON	Connector (1-1318119-3, 2 pcs.), Contact (1318107-1, 8 pcs.), Connector (2-178288-3), Contact (1-175218-5, 3 pcs.)	
24 VDC power supply connector (For DCIN)	FCUA-CN220	Connector (2-178288-3), Contact (1-175218-5, 3 pcs.)	
DI/DO connector (For operation panel I/O unit) (For remote I/O unit)	7940-6500SC x 4 pcs. 3448-7940 x 4 pcs.	Connector (7940-6500SC, 4 pcs.), Strain relief (3448-7940, 4 pcs.)	FCU8-DX731
DI connector (For operation panel I/O unit)	7950-6500SC x 2 pcs. 3448-7950 x 2 pcs.	Connector (7950-6500SC, 2 pcs.), Strain relief (3448-7950, 2 pcs.)	FCU8-DX750/760/761
Connector for CJ71	2-1318119-4 1318107-1 x 8 pcs.	Connector (2-1318119-4), Contact (1318107-1, 8 pcs.)	
THERMISTOR connector	37104-2165- 000FL 10P	Connector (37104-2165-000FL, 10 pcs.)	

**3.16 Thermistor Set**

Classification	Type	Components	Remarks
Thermistor	PT3C-51F-M2 10P	Thermistor (PT3C-51F-M2, 10 pieces)	

**3.17 Genuine Memory Card**

Classification	Type	Components	Remarks
Exclusive SD cards for 1 GB	FCU8-SD001G	FCU8-SD001G	1 GB capacity
Exclusive SD cards for 4 GB	FCU8-SD004G	FCU8-SD004G	4 GB capacity

**3.18 Durable Parts**

Durable parts	Part type
Battery for control unit	Q6BAT

- Contact the Service Center, Sales Office or dealer for repairs or part replacement.

**3.19 Replacements**

Replacements	Part type	Manufacturer
Protection fuse for operation panel I/O unit	LM50	Daito Communication Apparatus Co., Ltd.
Protection fuse for FCU8-DX220/230/231/651	LM50	Daito Communication Apparatus Co., Ltd.
Protection fuse for FCU8-DX213/654/213-1/654-1	MP63	Daito Communication Apparatus Co., Ltd.
Pair of SD/USB covers for display unit	N031C089G51	-

## 3 List of Configuration (M800VS/M80V Series)

## 3.20 List of Cables

## 3.20 List of Cables

[Cable relating to NC]

Type	Application	Available cable length (m)	Max. cable length
FCUA-R050-xM	Wiring between synchronous encoder and control unit (straight, with connector)	5	30 m
FCUA-R054-xM	Wiring between synchronous encoder and control unit (right angle, with connector)	3, 5, 10, 15, 20	30 m
G071 LxM	24 VDC relay cable for machine operation panel	0.12, 0.5, 1	1 m
G123	Cable for emergency stop release	-	-
G430 LxM	Cable for connection to handy terminal	3, 5, 10	10 m
G460 LxM	Cable for machine operation panel (Cable between main panel and sub panel)	0.5	0.5 m
J010 LxM	Operation panel I/O interface cable	0.5, 1	1 m
J012 LxM	Operation panel I/O interface cable (for FCU8-DX834)	0.5, 1	1 m
J020 LxM	Manual pulse generator cable (12 V): 1 ch	1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J021 LxM	Manual pulse generator cable (12 V): 2 ch	1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J022 LxM	Manual pulse generator cable (12 V): 3 ch	1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J023 LxM	Manual pulse generator cable (5 V): 1 ch	1, 2, 3, 5, 7, 10, 15, 20	20 m
J024 LxM	Manual pulse generator cable (5 V): 2 ch	1, 2, 3, 5, 7, 10, 15, 20	20 m
J025 LxM	Manual pulse generator cable (5 V): 3 ch	1, 2, 3, 5, 7, 10, 15, 20	20 m
J026 LxM	Manual pulse generator cable (5 V): 1 ch (For connection to control unit)	1, 2, 3, 5, 7, 10, 15, 20	20 m (*)
J027 LxM	Manual pulse generator cable (5 V): 2 ch (For connection to control unit)	1, 2, 3, 5, 7, 10, 15, 20	20 m (*)
J030 LxM	RS-232C I/F cable: 1 ch	1, 2, 3, 5, 7, 10	15 m (*)
J031 LxM	RS-232C I/F cable: 2 ch	1, 2, 3, 5, 7, 10	15 m (*)
J070 LxM	24 VDC power cable	1, 2, 3, 5, 7, 10, 15	15 m
J071 LxM	24 VDC power cable (for long distance)	20	20 m
J100 LxM	SKIP input cable	1, 2, 3, 5, 7, 10, 15, 20	20 m
J120 LxM	Emergency stop cable	1, 2, 3, 5, 7, 10, 15, 20, 30	30 m
J121 LxM	Emergency stop cable for machine operation panel	1, 2, 3, 5, 7, 10, 15, 20, 30	30 m
J210 LxM	Remote I/O 2.0 communication cable	0.3, 1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J221 LxM	Analog input/output cable (for remote I/O unit)	2, 3, 7	30 m
J224 LxM	Analog input/output cable (for operation panel I/O unit)	1, 2, 3, 5, 7, 10, 15, 20	30 m
J225 LxM	Analog output cable (for operation panel I/O unit)	1, 2, 3, 5, 7, 10, 15, 20	30 m
J303 LxM	LAN straight cable	1, 2, 3, 5, 7, 10, 15, 20, 30	50 m
J350 LxM	DI/DO cable (connectors at both ends)	1, 2, 3, 5	50 m
J351 LxM	DI/DO cable (connector at one end)	3	50 m
J460 LxM	DI/DO cable (connectors at both ends)	1, 2, 3, 5	50 m
J461 LxM	DI/DO cable (connector at one end)	3	50 m
R2-TM	Terminator for remote I/O interface	-	-

**Note**

- (1) "x" in type columns indicate cable length (unit: m).
- (2) Lengths indicated with an asterisk (\*) in the "Max. cable length" column indicate the maximum cable length when connecting via other unit.

## [Cable Relating to Drive Unit]

Type	Application	Available cable length (m)	Max. cable length
CNP2E-1-xM	Motor side PLG cable Spindle side accuracy encoder TS5690 cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNP3EZ-2P-xM	Spindle side detector cable OSE-1024 cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNP3EZ-3P-xM	Spindle side detector cable OSE-1024 cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNV2E-8P-xM	For HG/HG-H, HQ/HQ-H motor side encoder cable (for D48/D51/D74)	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNV2E-9P-xM	For HG/HG-H, HQ/HQ-H motor side encoder cable (for D48/D51/D74)	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNV2E-D-xM	MDS-B-SD unit cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
CNV2E-HP-xM	MDS-B-HR unit cable	2, 3, 4, 5, 7, 10, 15, 20, 25, 30	30 m
DG30-xM	Battery cable (for wiring between drive unit and battery box, between drive units)	0.3, 0.5, 1, 2, 3, 5, 7, 10	10 m
G380 LxM	Optical communication cable Wiring between drive units (outside panel)	5, 10, 12, 15, 20, 25, 30	30 m
J395 LxM	Optical communication cable Wiring between drive units (outside panel) Wiring between NC and-drive unit	3, 5, 7, 10	10 m
J396 LxM	Optical communication cable Wiring between drive units (inside panel)	0.2, 0.3, 0.5, 1, 2, 3, 5	10 m
MR-BKS1CBLx-MA1-H	<200V Series> Brake cable for HG96 load side angle	2, 3, 5, 7, 10	10 m
MR-BKS1CBLx-MA2-H	<200V Series> Brake cable for HG96 reverse load side angle	2, 3, 5, 7, 10	10 m
MR-BT6V2CBL LxM	Battery cable (MDS-EJ/EJH) (for wiring between drive units)	0.3, 1	1 m
MR-D05UDL3M-B	STO cable	3	3 m
MR-PWS1CBLx-MA1-H	<200V Series> Power cable for HG96 load side angle	2, 3, 5, 7, 10	10 m
MR-PWS1CBLx-MA2-H	<200V Series> Power cable for HG96 reverse load side angle	2, 3, 5, 7, 10	10 m
SH21 LxM	Power supply communication cable Backup unit communication cable	0.35, 0.5, 1, 2, 3	30 m

### Note

- (1) "x" in type columns indicate cable length (unit: m).
- (2) Lengths indicated with an asterisk (\*) in the "Max. cable length" column indicate the maximum cable length when connecting via other unit.

## 3.21 System Type

Series	Model name	System type	Control unit	Display unit
M800VS Series	M850VS	FCA850H-8SV	FCU8-MA551-001	FCU8-DU182-31 (15-type color LCD touchscreen)
		FCA850H-4SV		FCU8-DU142-31 (10.4-type color LCD touchscreen)
	M830VS	FCA830H-8SV	FCU8-MU551-001	FCU8-DU182-31 (15-type color LCD touchscreen)
		FCA830H-4SV		FCU8-DU142-31 (10.4-type color LCD touchscreen)
M80V Series	M80V TypeA	FCA80H-8AV	FCU8-MU522-001	FCU8-DU182-32 (15-type color LCD touchscreen)
		FCA80H-4AV		FCU8-DU142-32 (10.4-type color LCD touchscreen)
		FCA80P-2AV		FCU8-DU122-12 (8.4-type color LCD)
	M80V TypeB	FCA80H-8BV	FCU8-MU521-001	FCU8-DU182-32 (15-type color LCD touchscreen)
		FCA80H-4BV		FCU8-DU142-32 (10.4-type color LCD touchscreen)
		FCA80P-2BV		FCU8-DU122-12 (8.4-type color LCD)



## General Specifications (M800VS/M80V Series)

## 4.1 Environment Conditions [M800VS]

### 4.1.1 Installation Environment Conditions

Item	Unit name		Control unit	Display unit
	Type		FCU8-MU551/MA551	FCU8-DU142-31: (10.4-type) FCU8-DU182-31: (15-type)
General specifications	Ambient temperature	During operation	0 °C to 58 °C	
		During storage	-20 °C to 60 °C	
	Ambient humidity	Long term	10% to 75% RH (with no dew condensation)	
		Short term	10% to 95% RH (with no dew condensation) (*1)	
	Vibration resistance		4.9 m/s <sup>2</sup> or less	
	Shock resistance		29.4 m/s <sup>2</sup> or less	
	Working atmosphere		No corrosive gases, dust or oil mist	
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level	
	Power supply voltage		24 VDC	FCU8-DU142-31: 12 VDC/5 VDC/3.3 VDC FCU8-DU182-31: 12 VDC/5 VDC/3.3 VDC (Supply from control unit)
	Current consumption		24 V, 2.5 A	- (*2)
	Maximum heating value	(W)	16	FCU8-DU142-31: 10 FCU8-DU182-31: 14
	Mass	(kg)	1.1	FCU8-DU142-31: 1.7 FCU8-DU182-31: 3.9
	Outline dimensions W × H or W × H × D	(mm)	239.1 × 173.4 × 75	FCU8-DU142-31: 290 × 220 FCU8-DU182-31: 400 × 320

(\*1) "Short term" means roughly within one month.

(\*2) The current consumption of the display unit is included in that of the control unit.

#### Note

- For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.  
Refer to the manual of drive unit for details.
- When the display unit is mounted on an incline, the inclination angle to place the unit should be 30 degrees or less from the vertical direction.

4 General Specifications (M800VS/M80V Series)

4.1 Environment Conditions [M800VS]

Item	Unit name		Keyboard unit	Operation panel I/O unit		Machine operation panel	
	Type		FCU8-KB041/KB046: (10.4-type) FCU8-KB047: (10.4-type/vertical arrangement) FCU8-KB048: (10.4-type) FCU8-KB083: (15-type/vertical arrangement)	FCU8-DX731 FCU8-DX750 FCU8-DX760 FCU8-DX761	FCU8-DX834	FCU8-KB921/KB922/ KB925 FCU8-KB923/KB924/ KB926 FCU8-KB931/KB941	
General specifications	Ambient temperature	During operation	0 °C to 58 °C				
		During storage	-20 °C to 60 °C				
	Ambient humidity	Long term	10% to 75% RH (with no dew condensation)				
		Short term	10% to 95% RH (with no dew condensation) (*1)				
	Vibration resistance		4.9 m/s <sup>2</sup> or less				
	Shock resistance		29.4 m/s <sup>2</sup> or less				
	Working atmosphere		No corrosive gases, dust or oil mist				
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level				
	Power supply voltage		5 VDC (Supply from control unit)	5 VDC/3.3 VDC	24 VDC	24 VDC (*4)	
	Current consumption		- (*2)		24 V, 0.3 A (*5)	0.3 A (*4)	
	Maximum heating value	(W)	1	4 (*3)	8 (*3)	7.2	
	Mass	(kg)	FCU8-KB041/KB046: 0.8 FCU8-KB047: 1.3 FCU8-KB048: 1.4 FCU8-KB083: 1.5	FCU8-DX731: 0.3 FCU8-DX750: 0.4 FCU8-DX760: 0.5 FCU8-DX761: 0.5	0.4	FCU8-KB921/KB922/ KB925: 1.1 FCU8-KB923/KB924/ KB926: 1.2 FCU8-KB931/KB941: 0.5	
	Outline dimensions W × H	(mm)	FCU8-KB041/KB046: 140 × 220 FCU8-KB047: 290 × 160 FCU8-KB048: 230 × 220 FCU8-KB083: 400 × 140	116 × 179		FCU8-KB921/KB922/ KB925: 260 × 140 FCU8-KB923/KB924/ KB926: 290 × 140 FCU8-KB931/KB941: 140 × 140	

(\*1) "Short term" means roughly within one month.

(\*2) The current consumption of the keyboard unit and the operation panel I/O unit (control section) are included in that of the control unit. Current consumption for the I/O circuit needs to be separately calculated based on the number of points used and its load.

(\*3) For the heating value of the I/O circuit, calculate with the number of points used.

(\*4) 24 V power input is not required for FCU8-KB931/KB941.

(\*5) Current consumption for the I/O circuit needs to be separately calculated based on the number of points used and its load.

**Note**

- (1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.  
Refer to the manual of drive unit for details.

## 4 General Specifications (M800VS/M80V Series)

## 4.1 Environment Conditions [M800VS]

Item	Unit name		Remote I/O unit					
	Type		FCU8-DX220/ DX230/ DX231	FCU8-DX202	FCU8-DX213/ DX213-1/ DX654/ DX654-1	FCU8-DX408	FCU8-DX409	FCU8-DX651
General specifications	Ambient temperature	During operation	0 to 58 °C					
		During storage	-20 to 60 °C					
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)					
		Short term	10 to 95% RH (with no dew condensation) (*1)					10 to 85% RH (with no dew condensation) (*1)
	Vibration resistance		4.9 m/s <sup>2</sup> or less					
	Shock resistance		29.4 m/s <sup>2</sup> or less					
	Working atmosphere		No corrosive gases, dust or oil mist					
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level					
	Power supply voltage		24 VDC					
	Current consumption		3.5 A (*2)	0.3 A	0.3A (*3)	0.1 A	0.2A	3.7 A (*2)
	Maximum heating value	(W)	8 (*4)			3	6 (*5)	8 (*4)
	Mass	(kg)	0.4			0.2	0.3	0.8
	Outline dimensions W × H × D	(mm)	40 × 175 × 133	40 × 175 × 119	40 × 175 × 130	40 × 175 × 109	40 × 175 × 130	104 × 175 × 115

(\*1) "Short term" means roughly within one month.

(\*2) This value includes the maximum value of DO external load current (3.2A).

(\*3) This value does not include DO external load current.

(\*4) For the heating value of the I/O circuit, calculate with the number of points used.

(\*5) The maximum value including the heating value of analog input circuit.

### Note

(1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.

Refer to the manual of drive unit for details.

### 4.1.2 24 VDC Stabilized Power Supply Selecting Conditions

Consider the following characteristics for the stabilized power supply, and select the power supply that complies with laws, regulations, or safety standards of the country where the machine will be installed.

	Item	Specifications	Remarks
Output	Voltage	24 VDC	When the stabilized power supply and 24 VDC input unit are distant, select the stabilized power supply which is possible to set output voltage 24 VDC or more allowing for the influence of voltage down by the cable.
	Voltage fluctuation	±5%	
	Current	-	Calculate the current value as a reference of maximum current consumption for the unit which uses the power supply.
	Ripple noise	0.2 V (P-P)	
	Output holding time	min 20 ms	Output holding time is decided by loading ratio; however, the stabilized power supply which complies with the specification on the left must be selected during maximum loading.
	Overcurrent output shutoff function	-	Use a power supply having the overcurrent output shutoff function.

#### CAUTION

Using a stabilized power supply without overcurrent protection may cause the unit's failure due to miswiring of 24 V.

## 4.2 Environment Conditions [M80V]

### 4.2.1 Installation Environment Conditions

Item	Unit name		Control unit	Display unit	
	Type		FCU8-MU521/MU522	FCU8-DU122-12: (8.4-type) FCU8-DU142-32: (10.4-type) FCU8-DU182-32: (15-type)	
General specifications	Ambient temperature	During operation	0 °C to 58 °C		
		During storage	-20 °C to 60 °C		
	Ambient humidity	Long term	10% to 75% RH (with no dew condensation)		
		Short term	10% to 95% RH (with no dew condensation) (*1)		
	Vibration resistance		4.9 m/s <sup>2</sup> or less		
	Shock resistance		29.4 m/s <sup>2</sup> or less		
	Working atmosphere		No corrosive gases, dust or oil mist		
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level		
	Power supply voltage		24 VDC	FCU8-DU122-12: 12 VDC/3.3 VDC FCU8-DU142-32: 12 VDC/5 VDC/3.3 VDC FCU8-DU182-32: 12 VDC/5 VDC/3.3 VDC (Supplied from control unit)	
	Current consumption		24 V, 2.5 A	- (*2)	
	Maximum heating value	(W)	12	FCU8-DU122-12: 8 FCU8-DU142-32: 10 FCU8-DU182-32: 14	
	Mass	(kg)	1.1	FCU8-DU122-12: 1.2 FCU8-DU142-32: 1.7 FCU8-DU182-32: 3.9	
	Outline dimensions W × H or W × H × D	(mm)	239.1 × 173.4 × 75	FCU8-DU122-12: 260 × 200 FCU8-DU142-32: 290 × 220 FCU8-DU182-32: 400 × 320	

(\*1) "Short term" means roughly within one month.

(\*2) The current consumption of the display unit is included in that of the control unit.

#### Note

(1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.

Refer to the manual of drive unit for details.

(2) When the display unit is mounted on an incline, the inclination angle to place the unit should be 30 degrees or less from the vertical direction.

4 General Specifications (M800VS/M80V Series)

4.2 Environment Conditions [M80V]

Item	Unit name		Keyboard unit	Operation panel I/O unit		Machine operation panel	
	Type		FCU8-KB025: (8.4-type) FCU8-KB026/KB028: (8.4-type) FCU8-KB029: (8.4-type/vertical arrangement) FCU8-KB041/KB046: (10.4-type) FCU8-KB047: (10.4-type/vertical arrangement) FCU8-KB048: (10.4-type) FCU8-KB083: (15-type/vertical arrangement)	FCU8-DX731 FCU8-DX750 FCU8-DX760 FCU8-DX761	FCU8-DX834	FCU8-KB921/KB922/KB925 FCU8-KB923/KB924/KB926 FCU8-KB931/KB941	
General specifications	Ambient temperature	During operation	0 °C to 58 °C				
		During storage	-20 °C to 60 °C				
	Ambient humidity	Long term	10% to 75% RH (with no dew condensation)				
		Short term	10% to 95% RH (with no dew condensation) (*1)				
	Vibration resistance		4.9 m/s <sup>2</sup> or less				
	Shock resistance		29.4 m/s <sup>2</sup> or less				
	Working atmosphere		No corrosive gases, dust or oil mist				
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level				
	Power supply voltage		5 VDC (Supply from control unit)	5 VDC/3.3 VDC	24 VDC	24 VDC (*4)	
	Current consumption		- (*2)		24 V, 0.3 A (*5)	0.3 A (*4)	
	Maximum heating value	(W)	1	4 (*3)	8 (*3)	7.2	
	Mass	(kg)	FCU8-KB025: 0.75 FCU8-KB026/KB028: 0.75 FCU8-KB029: 1.0 FCU8-KB041/KB046: 0.8 FCU8-KB047: 1.3 FCU8-KB048: 1.4 FCU8-KB083: 1.5	FCU8-DX731: 0.3 FCU8-DX750: 0.4 FCU8-DX760: 0.5 FCU8-DX761: 0.5	0.4	FCU8-KB921/KB922/KB925: 1.1 FCU8-KB923/KB924/KB926: 1.2 FCU8-KB931/KB941: 0.5	
	Outline dimensions W × H	(mm)	FCU8-KB025: 140 × 200 FCU8-KB026/KB028: 140 × 200 FCU8-KB029: 260 × 140 FCU8-KB041/KB046: 140 × 220 FCU8-KB047: 290 × 160 FCU8-KB048: 230 × 220 FCU8-KB083: 400 × 140	116 × 179		FCU8-KB921/KB922/KB925: 260 × 140 FCU8-KB923/KB924/KB926: 290 × 140 FCU8-KB931/KB941: 140 × 140	

(\*1) "Short term" means roughly within one month.

(\*2) The current consumption of the keyboard unit and the operation panel I/O unit (control section) are included in that of the control unit. Current consumption for the I/O circuit needs to be separately calculated based on the number of points used and its load.

(\*3) For the heating value of the I/O circuit, calculate with the number of points used.

(\*4) 24 V power input is not required for FCU8-KB931/KB941.

(\*5) Current consumption for the I/O circuit needs to be separately calculated based on the number of points used and its load.

**Note**

(1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.

Refer to the manual of drive unit for details.

## 4 General Specifications (M800VS/M80V Series)

## 4.2 Environment Conditions [M80V]

Item	Unit name		Remote I/O unit					
	Type		FCU8-DX220/ DX230/ DX231	FCU8-DX202	FCU8-DX213/ DX213-1/ DX654/ DX654-1	FCU8-DX408	FCU8-DX409	FCU8-DX651
General specifications	Ambient temperature	During operation	0 to 58 °C					
		During storage	-20 to 60 °C					
	Ambient humidity	Long term	10 to 75% RH (with no dew condensation)					
		Short term	10 to 95% RH (with no dew condensation) (*1)					10 to 85% RH (with no dew condensation) (*1)
	Vibration resistance		4.9 m/s <sup>2</sup> or less					
	Shock resistance		29.4 m/s <sup>2</sup> or less					
	Working atmosphere		No corrosive gases, dust or oil mist					
	Altitude		Operation/Storage: 1000 meters or less above sea level, Transportation: 13000 meters or less above sea level					
	Power supply voltage		24 VDC					
	Current consumption		3.5 A (*2)	0.3 A	0.3A (*3)	0.1 A	0.2A	3.7 A (*2)
	Maximum heating value	(W)	8 (*4)			3	6 (*5)	8 (*4)
	Mass	(kg)	0.4			0.2	0.3	0.8
	Outline dimensions W × H × D	(mm)	40 × 175 × 133	40 × 175 × 119	40 × 175 × 130	40 × 175 × 109	40 × 175 × 130	104 × 175 × 115

(\*1) "Short term" means roughly within one month.

(\*2) This value includes the maximum value of DO external load current (3.2A).

(\*3) This value does not include DO external load current.

(\*4) For the heating value of the I/O circuit, calculate with the number of points used.

(\*5) The maximum value including the heating value of analog input circuit.

### Note

(1) For the whole NC system, consider the characteristics of the drive units when the altitude is more than 1000 meters above sea level.

Refer to the manual of drive unit for details.

### 4.2.2 24 VDC Stabilized Power Supply Selecting Conditions

Consider the following characteristics for the stabilized power supply, and select the power supply that complies with laws, regulations, or safety standards of the country where the machine will be installed.

	Item	Specifications	Remarks
Output	Voltage	24 VDC	When the stabilized power supply and 24 VDC input unit are distant, select the stabilized power supply which is possible to set output voltage 24 VDC or more allowing for the influence of voltage down by the cable.
	Voltage fluctuation	±5%	
	Current	-	Calculate the current value as a reference of maximum current consumption for the unit which uses the power supply.
	Ripple noise	0.2 V (P-P)	
	Output holding time	min 20 ms	Output holding time is decided by loading ratio; however, the stabilized power supply which complies with the specification on the left must be selected during maximum loading.
	Overcurrent output shutoff function	-	Use a power supply having the overcurrent output shutoff function.


#### CAUTION

Using a stabilized power supply without overcurrent protection may cause the unit's failure due to miswiring of 24 V.

## 4.3 Control Unit [M800VS]

### 4.3.1 FCU8-MU551 / FCU8-MA551


#### Outline dimensions

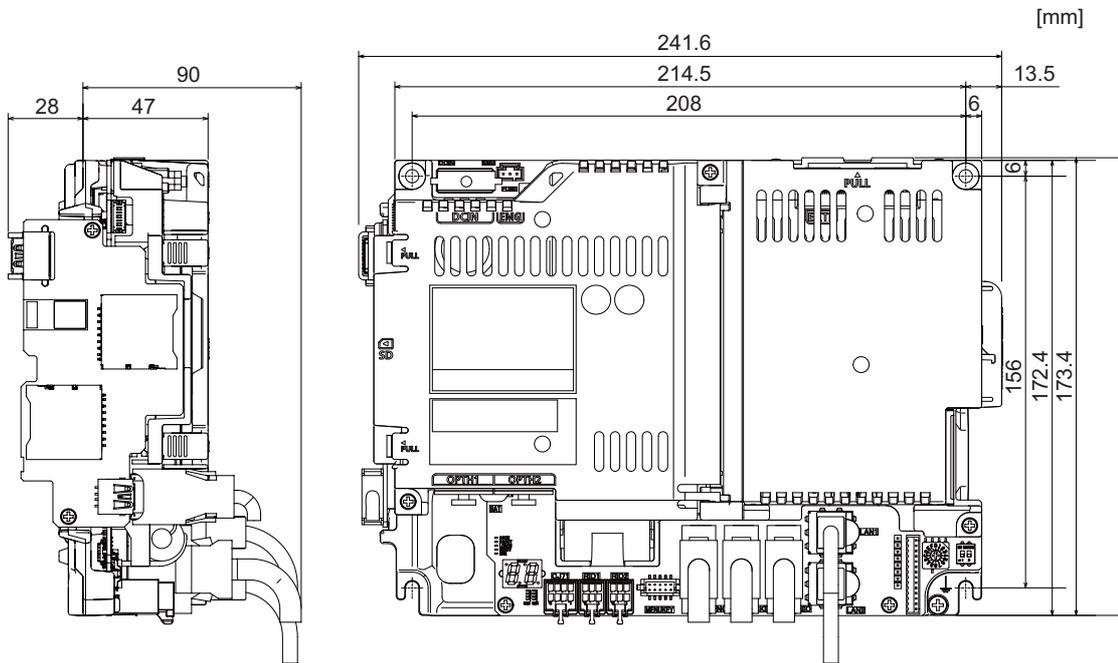

## 4.4 Control Unit [M80V]

### 4.4.1 FCU8-MU521 / FCU8-MU522


#### Outline dimensions

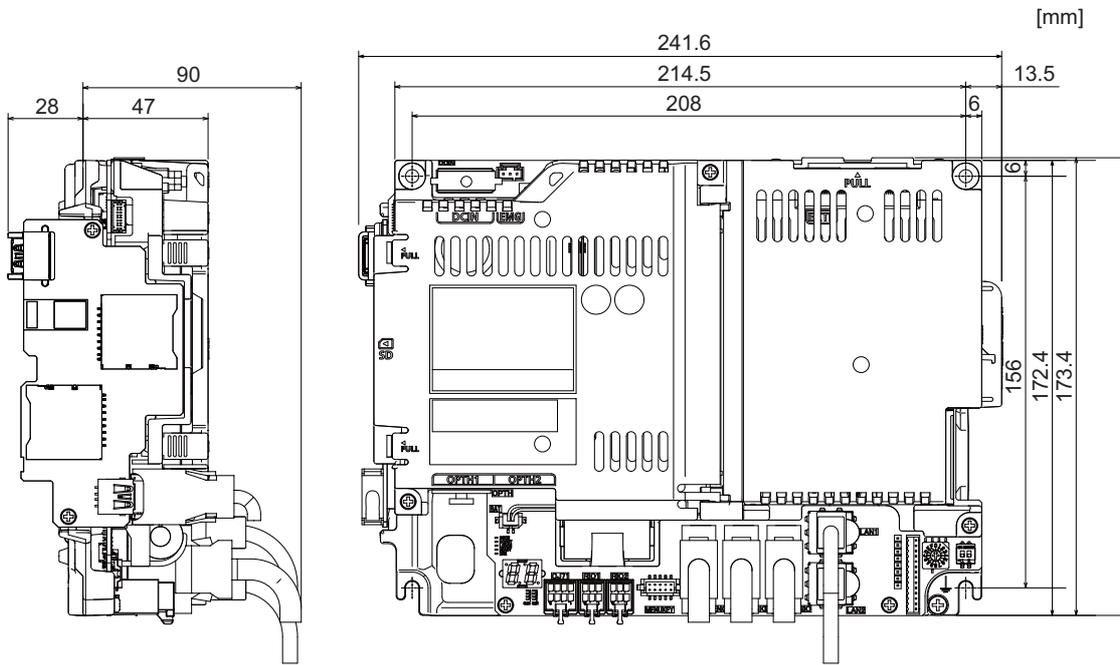

## 4.5 Display Unit [M800VS]

### 4.5.1 10.4-type (FCU8-DU142-31)

#### Outline dimensions

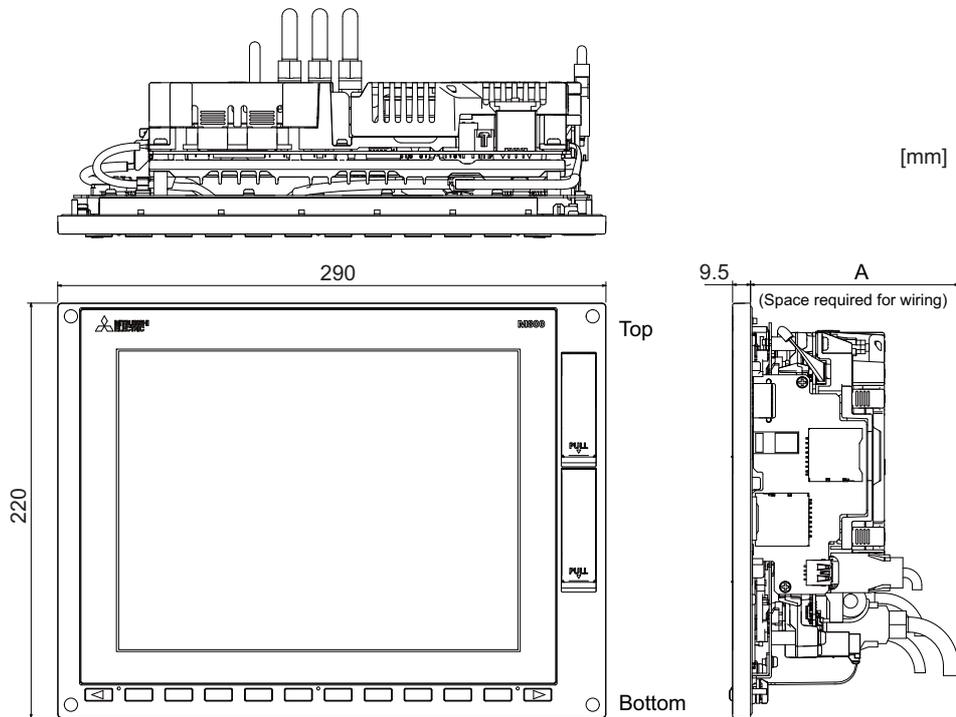

	Option relay unit not mounted	Option relay unit FCU8-EX704 mounted	Option relay unit FCU8-EX705 mounted
A (Space required for wiring)	110	114	114


#### Note

(1) The figure above shows the state with the control unit mounted.



### 4.5.2 15-type (FCU8-DU182-31)

#### Outline dimensions

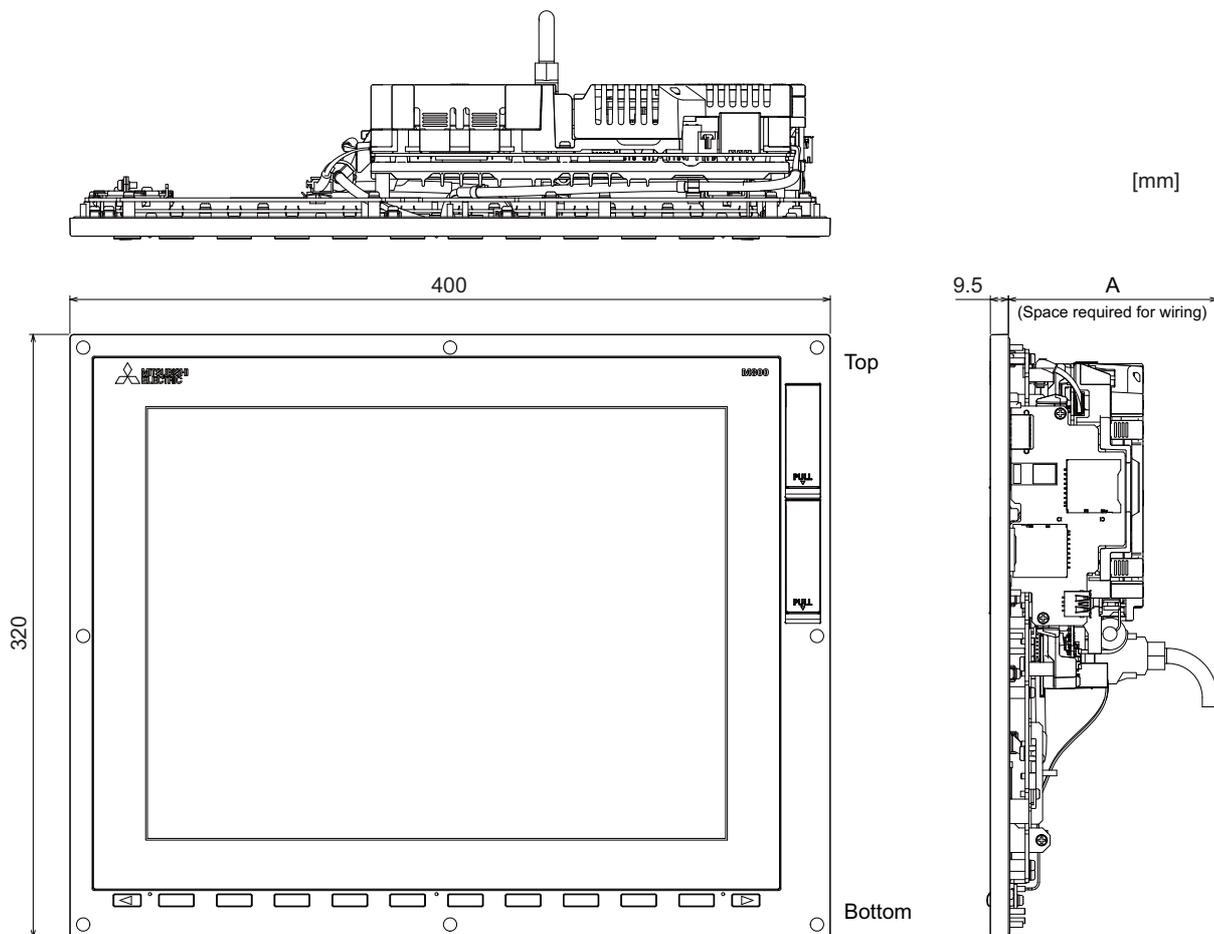


	Option relay unit not mounted	Option relay unit FCU8-EX704 mounted	Option relay unit FCU8-EX705 mounted
<b>A</b> (Space required for wiring)	110		114

#### Note

(1) The figure above shows the state with the control unit mounted.


Panel cut dimensions

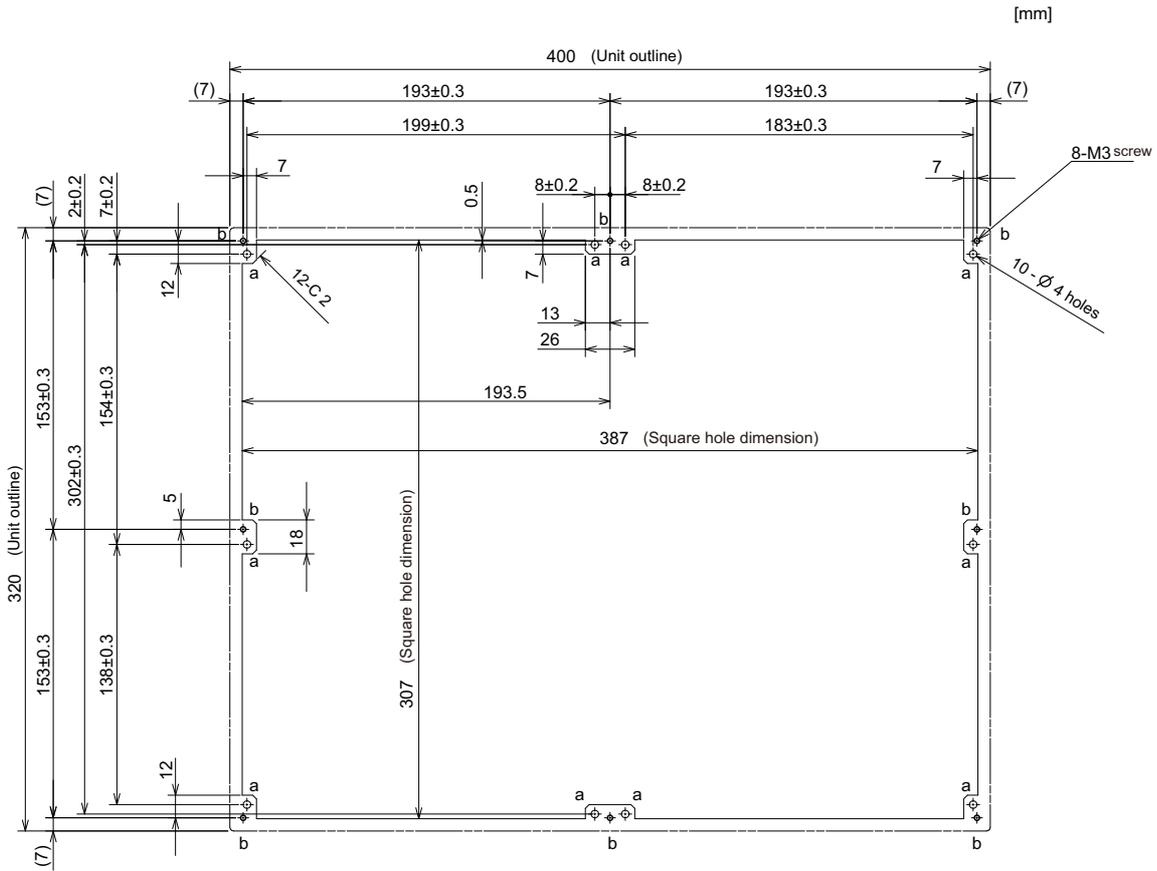

## 4.6 Display Unit [M80V]

### 4.6.1 8.4-type (FCU8-DU122-12)

#### Outline dimensions

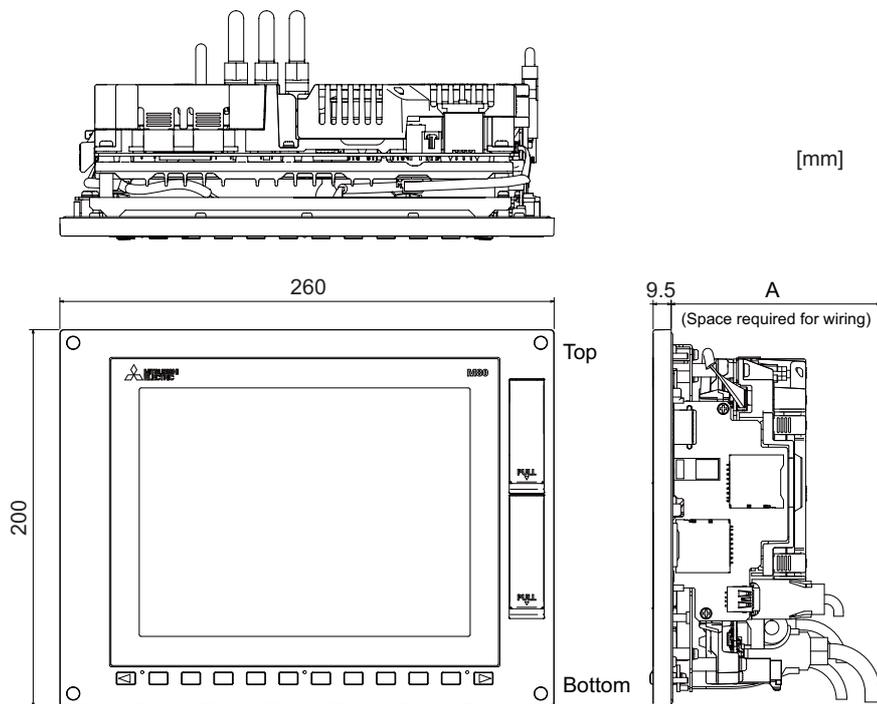


	Option relay unit not mounted	Option relay unit FCU8-EX704 mounted	Option relay unit FCU8-EX705 mounted
<b>A</b> (Space required for wiring)	110		114

#### Note


- (1) The 8.4-type display unit is incompatible with the touchscreen.
- (2) The figure above shows the state with the control unit mounted.

Panel cut dimensions

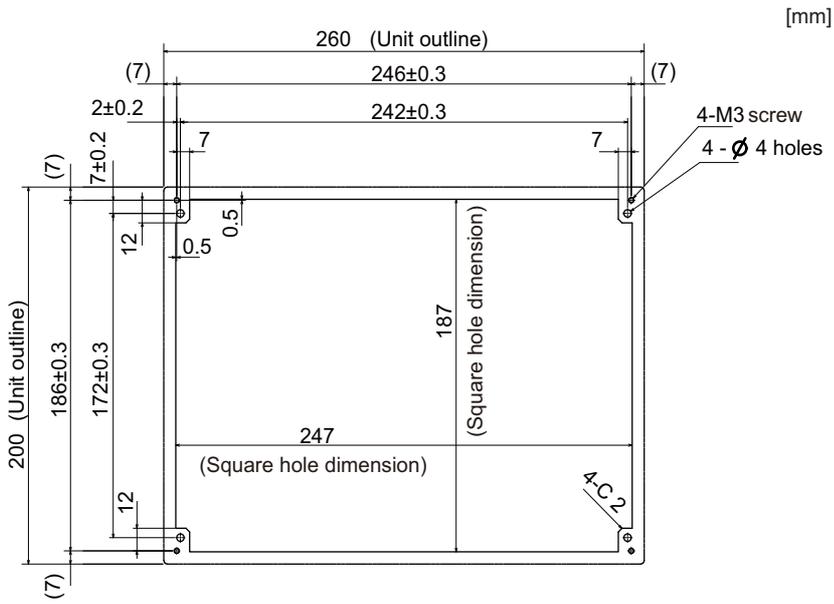

4.6.2 10.4-type (FCU8-DU142-32)

Outline dimensions

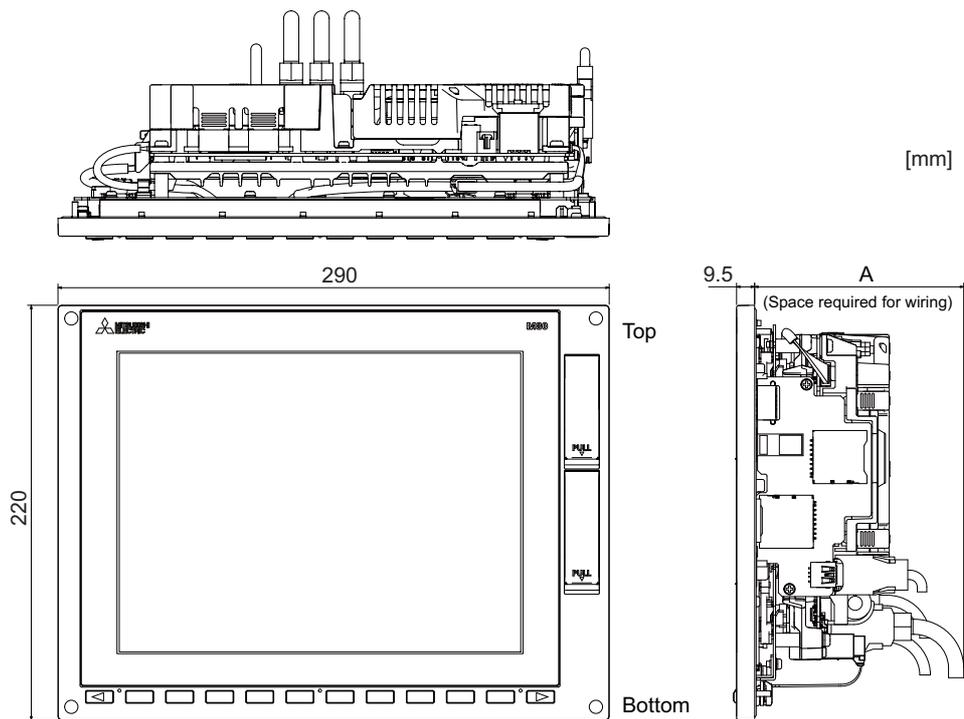


	Option relay unit not mounted	Option relay unit FCU8-EX704 mounted	Option relay unit FCU8-EX705 mounted
<b>A</b> (Space required for wiring)	110	114	114

**Note**


(1) The figure above shows the state with the control unit mounted.

Panel cut dimensions

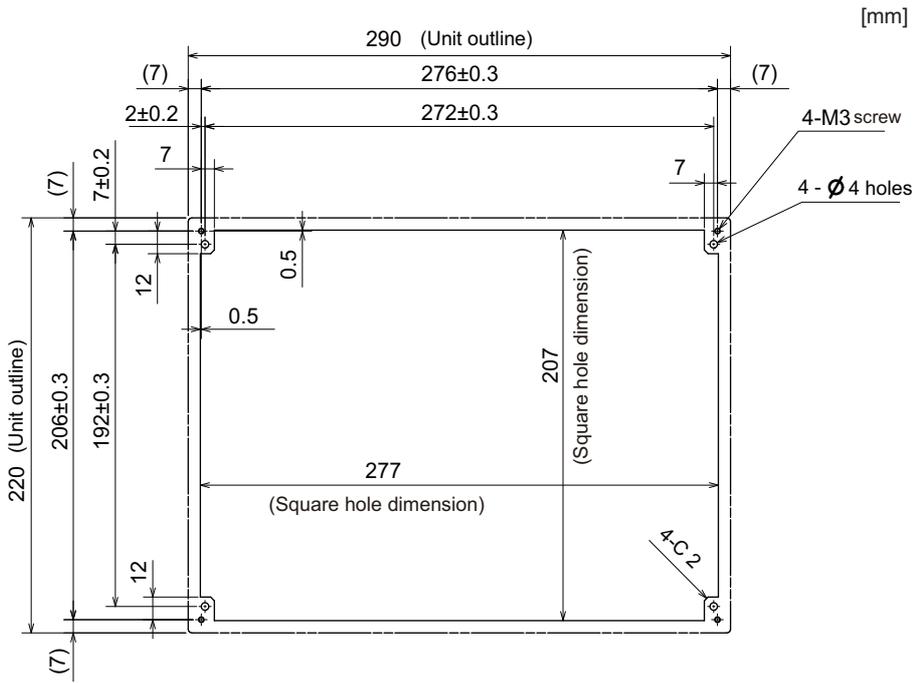

### 4.6.3 15-type (FCU8-DU182-32)

#### Outline dimensions

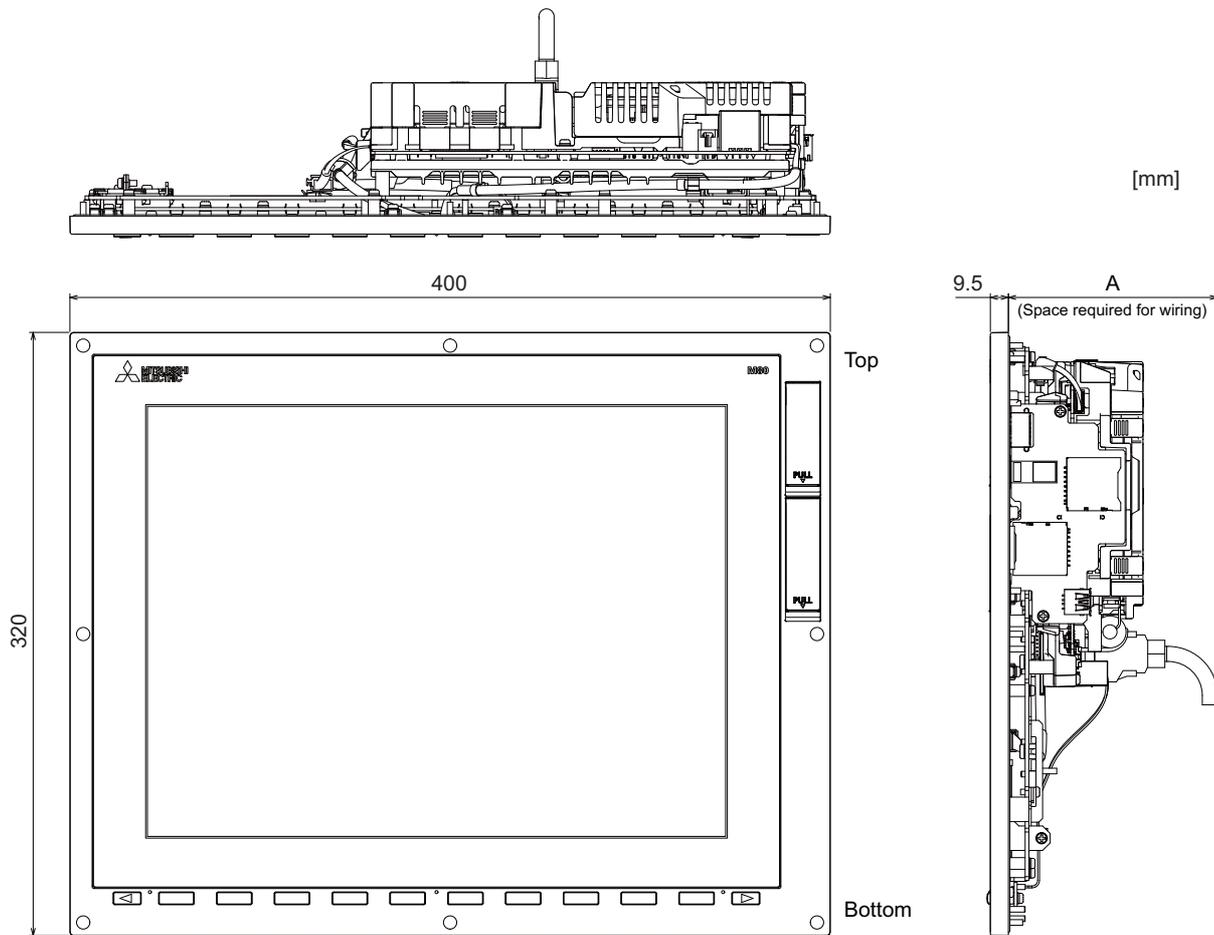


	Option relay unit not mounted	Option relay unit FCU8-EX704 mounted	Option relay unit FCU8-EX705 mounted
<b>A</b> (Space required for wiring)	110		114

#### Note

(1) The figure above shows the state with the control unit mounted.


Panel cut dimensions

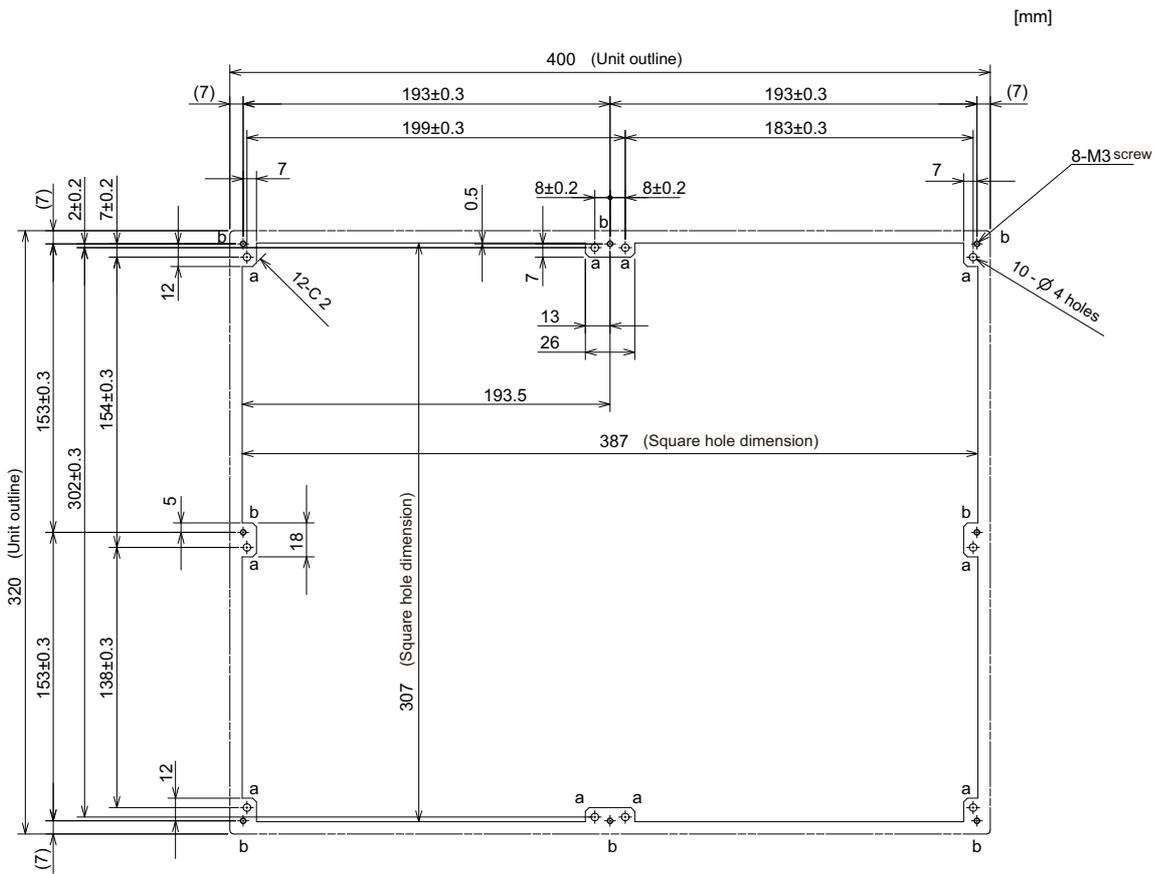

## 4.7 Keyboard Unit

### 4.7.1 Keyboard for 8.4-type Display Unit (FCU8-KB025)


#### Outline dimensions

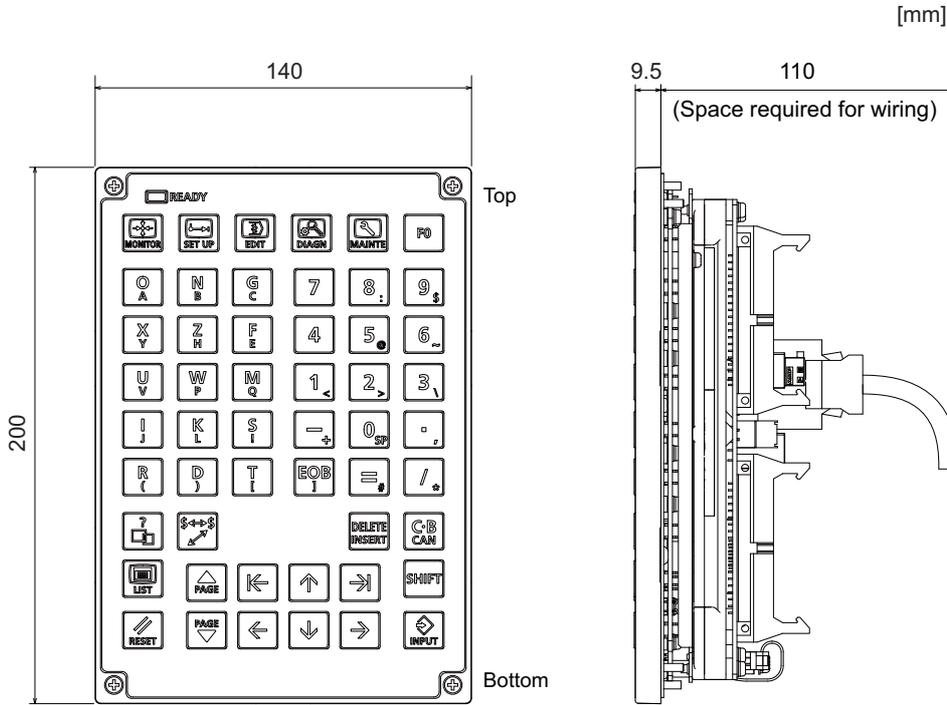

#### Note


(1) The above side view shows the state with the operation panel I/O unit mounted.

#### Panel cut dimensions

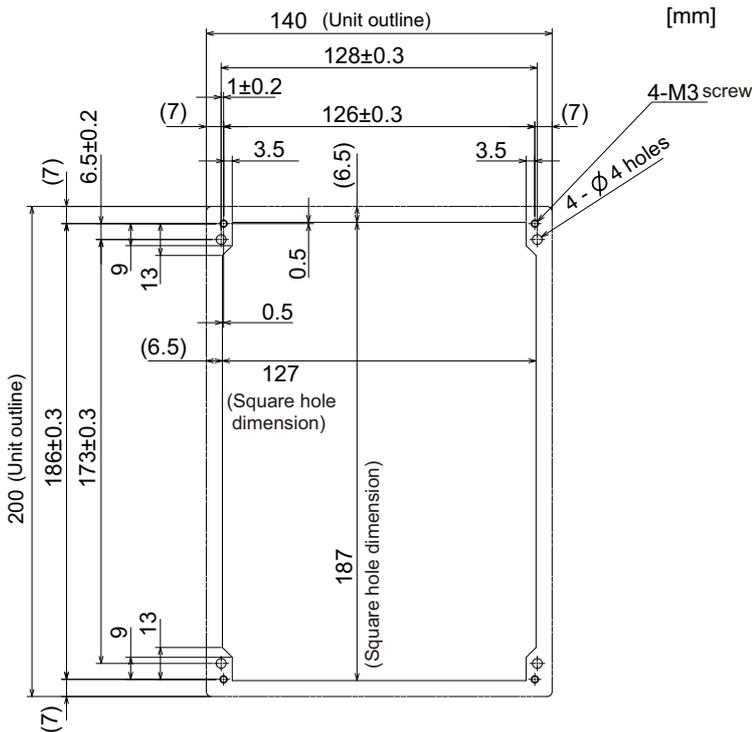

### 4.7.2 Keyboard for 8.4-type Display Unit (FCU8-KB026)


#### Outline dimensions

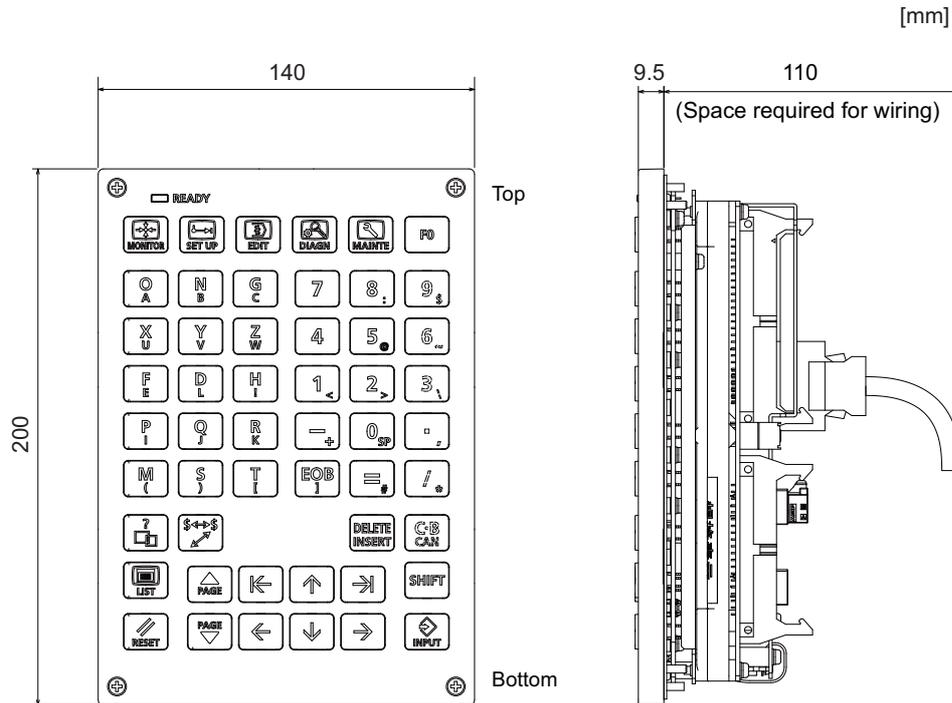

#### Note


- (1) The above side view shows the state with the operation panel I/O unit mounted.

#### Panel cut dimensions

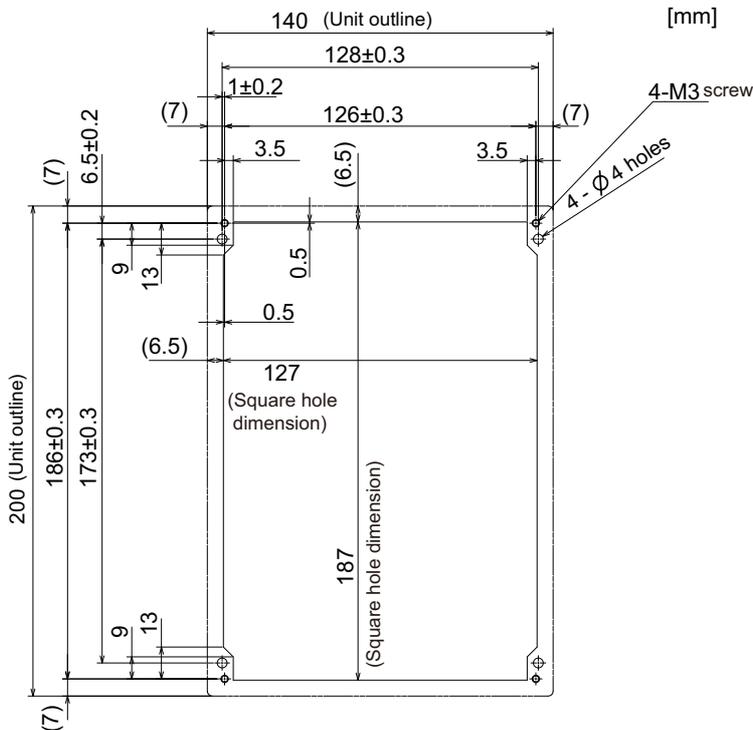

4.7.3 Keyboard for 8.4-type Display Unit (FCU8-KB028)


Outline dimensions

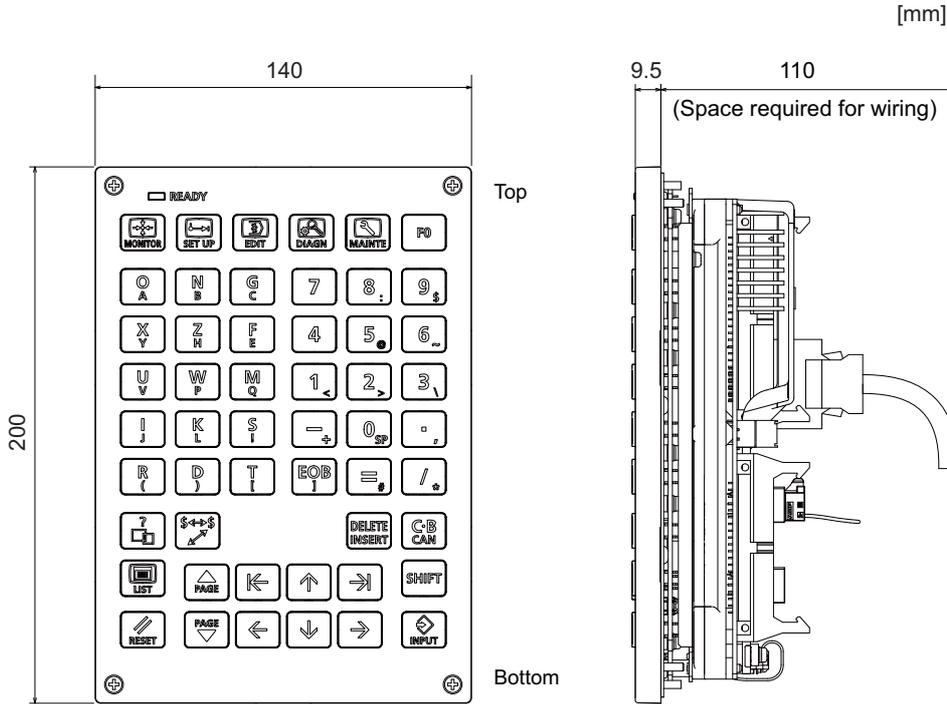

Note

(1) The above side view shows the state with the operation panel I/O unit mounted.


Panel cut dimensions

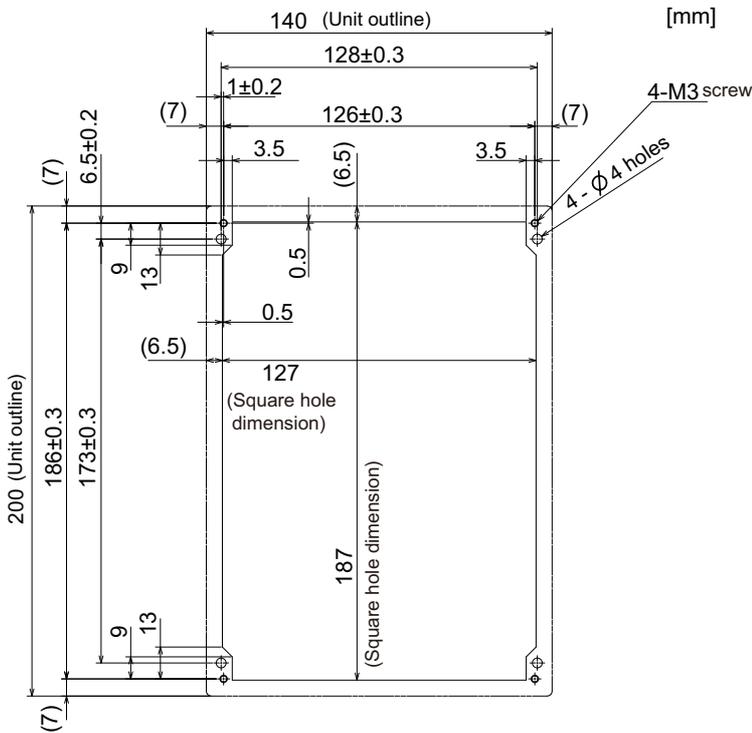



### 4.7.5 Keyboard for 10.4-type Display Unit (FCU8-KB041)


#### Outline dimensions

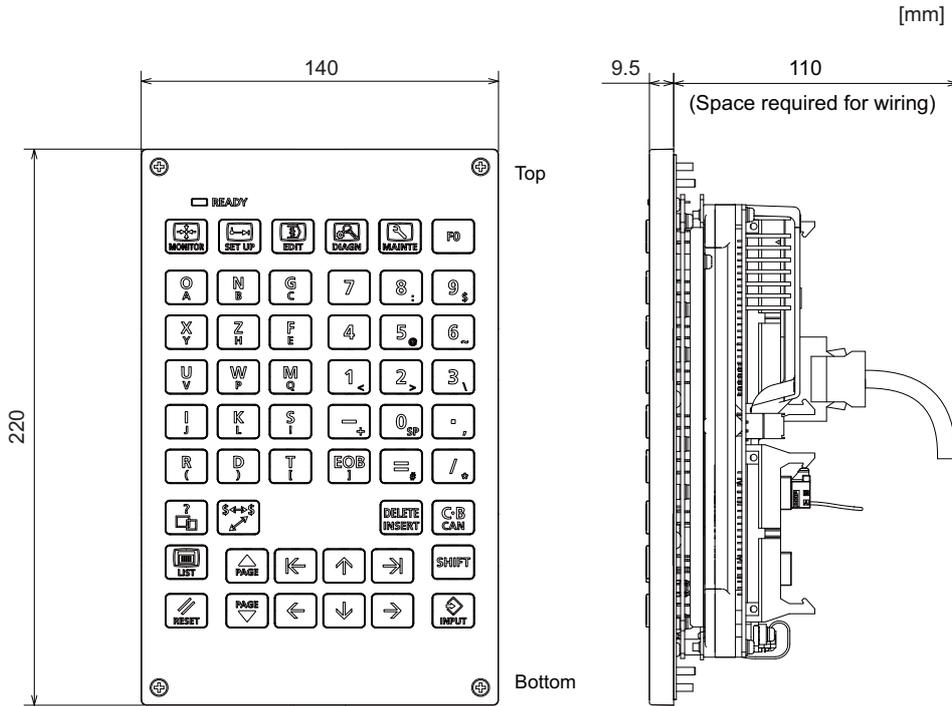

#### Note


(1) The above side view shows the state with the operation panel I/O unit mounted.

#### Panel cut dimensions

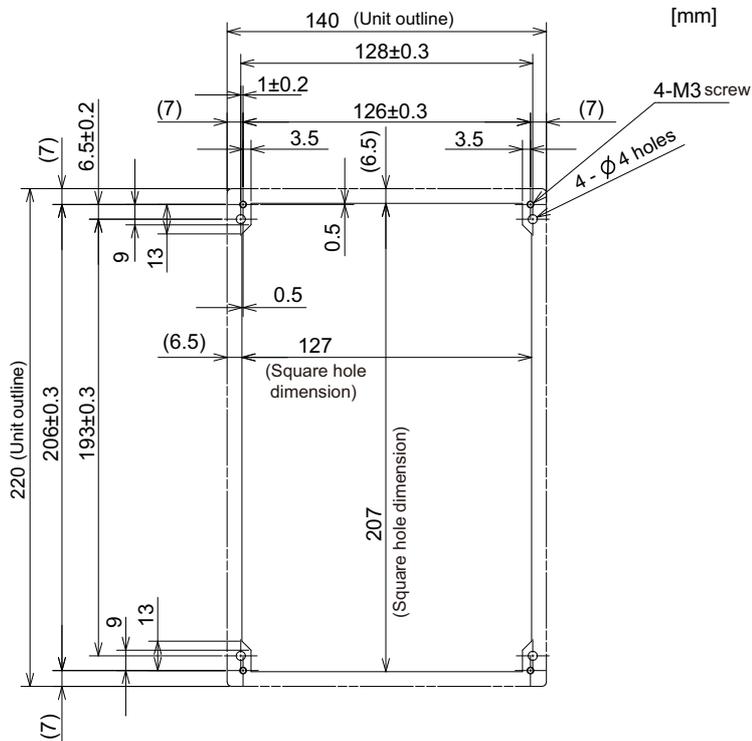

### 4.7.6 Keyboard for 10.4-type Display Unit (FCU8-KB046)


#### Outline dimensions

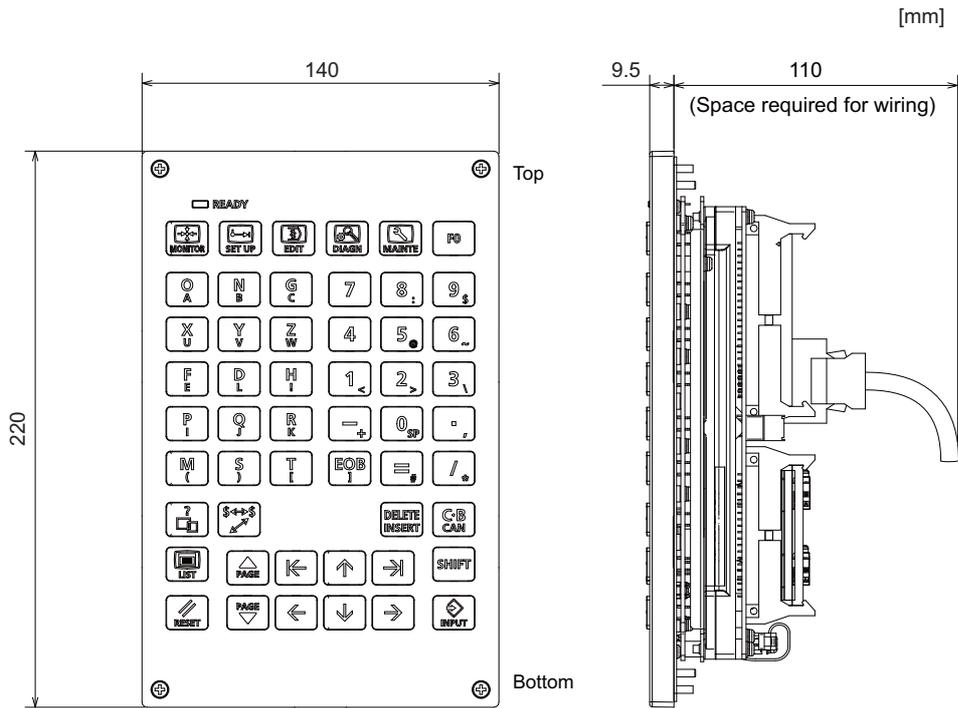

#### Note


- (1) The above side view shows the state with the operation panel I/O unit mounted.

#### Panel cut dimensions

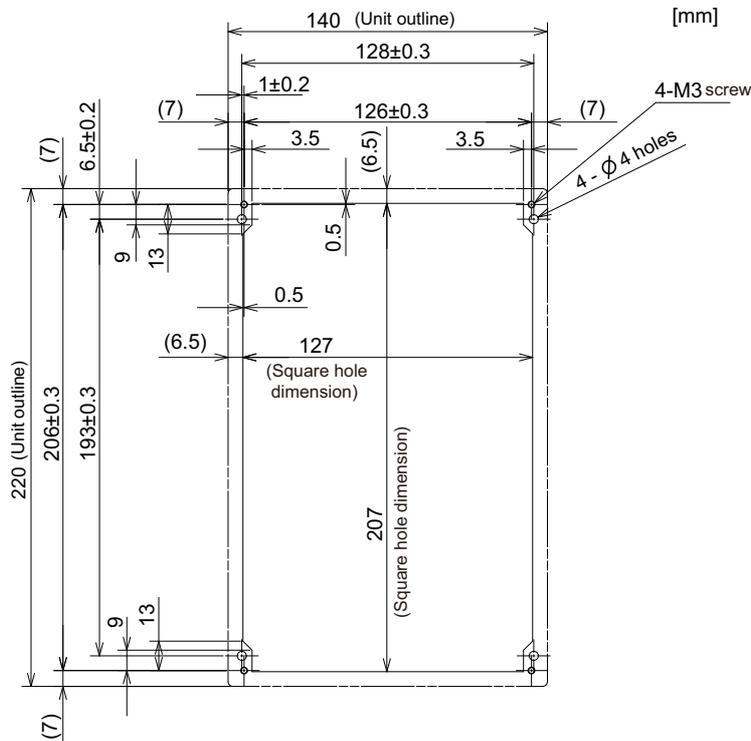

### 4.7.7 Keyboard for 10.4-type Display Unit (FCU8-KB047)


#### Outline dimensions

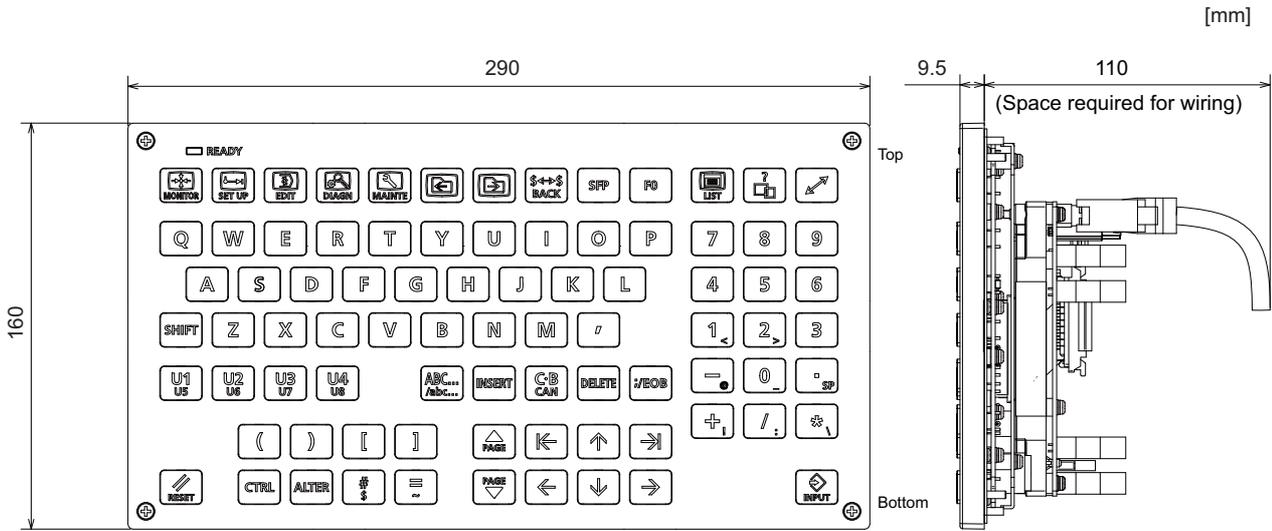

#### Note


(1) The above side view shows the state with the operation panel I/O unit mounted.

#### Panel cut dimensions

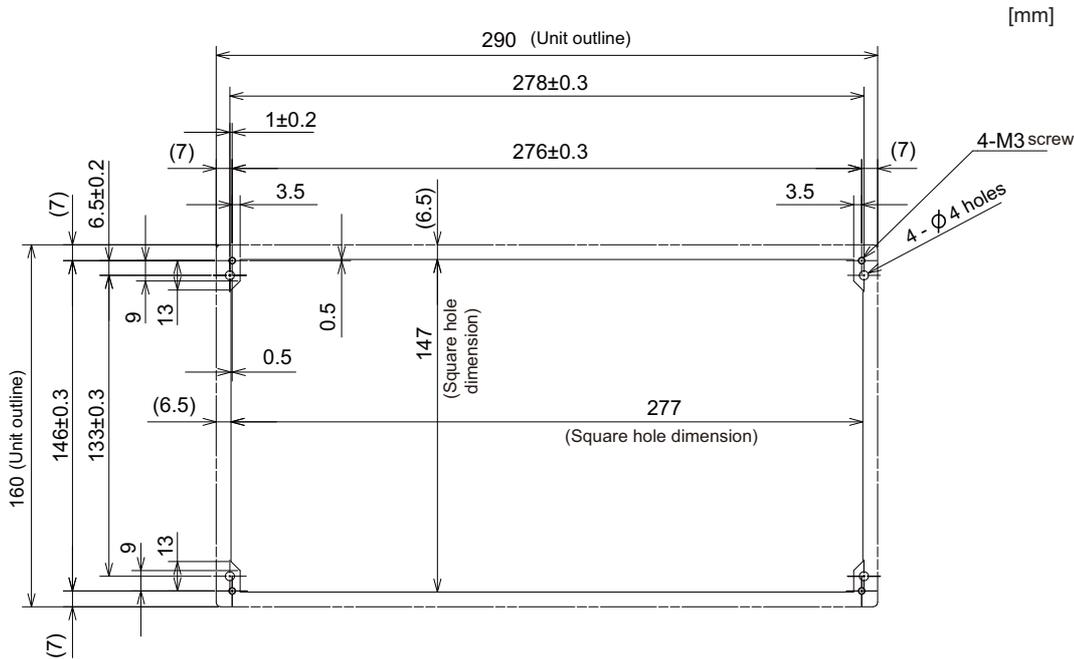

4.7.8 Keyboard for 10.4-type Display Unit (FCU8-KB048)


Outline dimensions

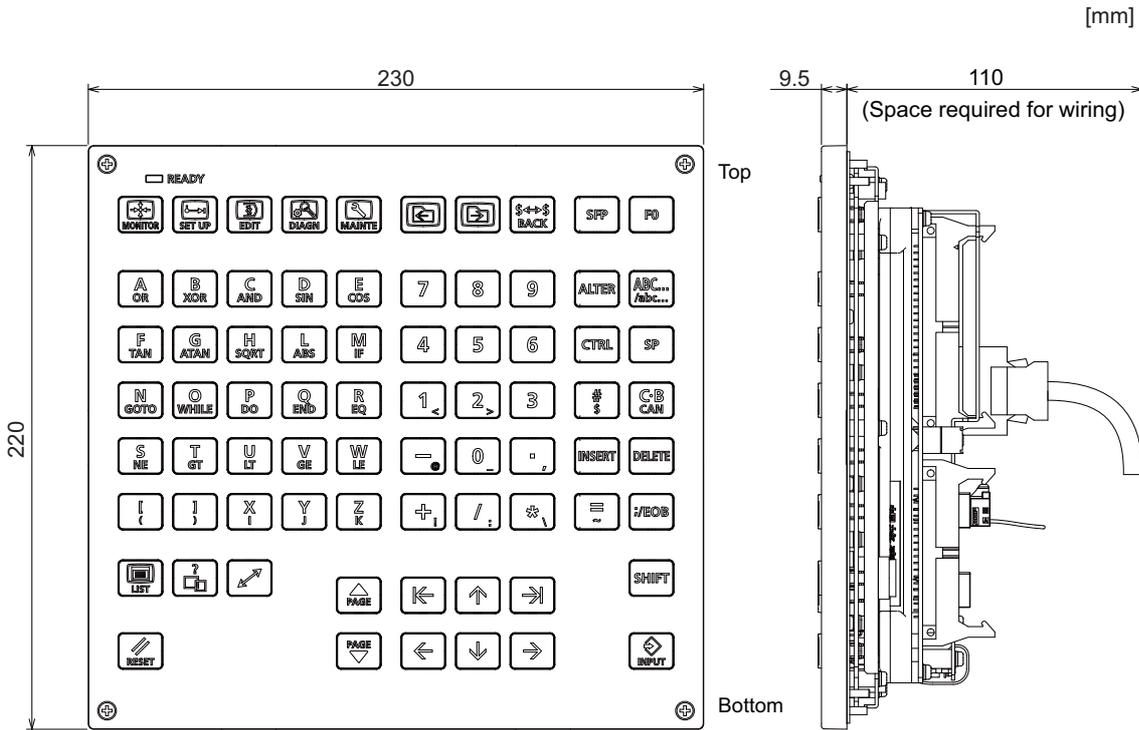

Note


- (1) The above side view shows the state with the operation panel I/O unit mounted.

Panel cut dimensions

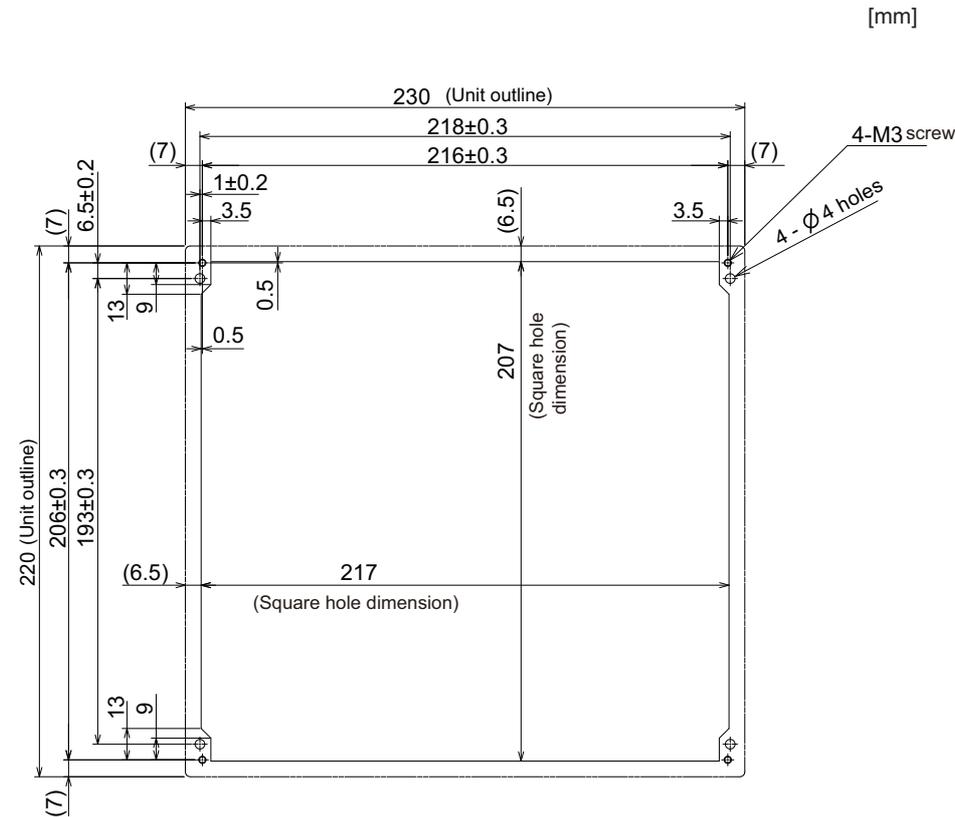

### 4.7.9 Keyboard for 15-type Display Unit (FCU8-KB083)

#### Outline dimensions

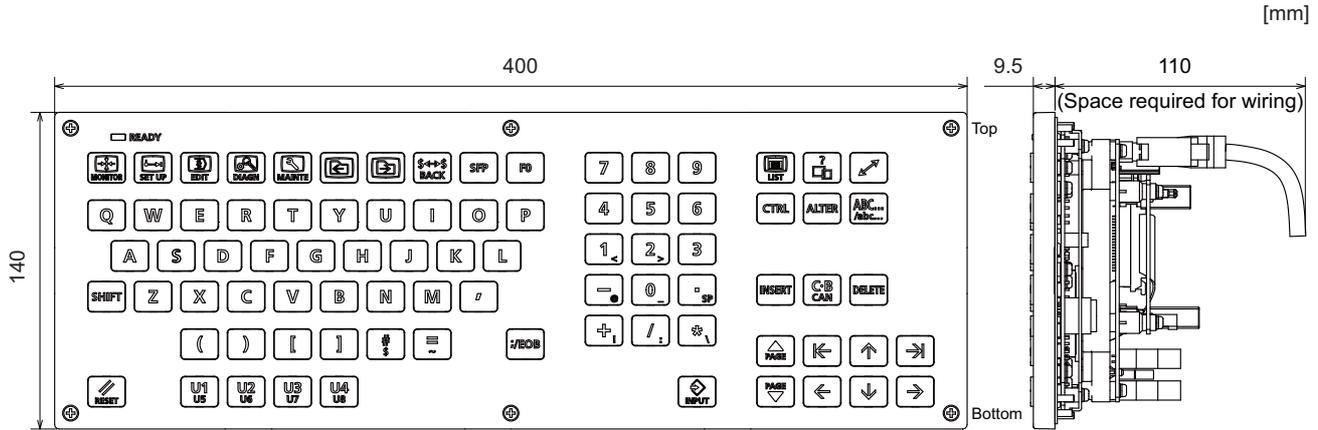


[mm]

#### Note

(1) The above side view shows the state with the operation panel I/O unit mounted.

#### Panel cut dimensions

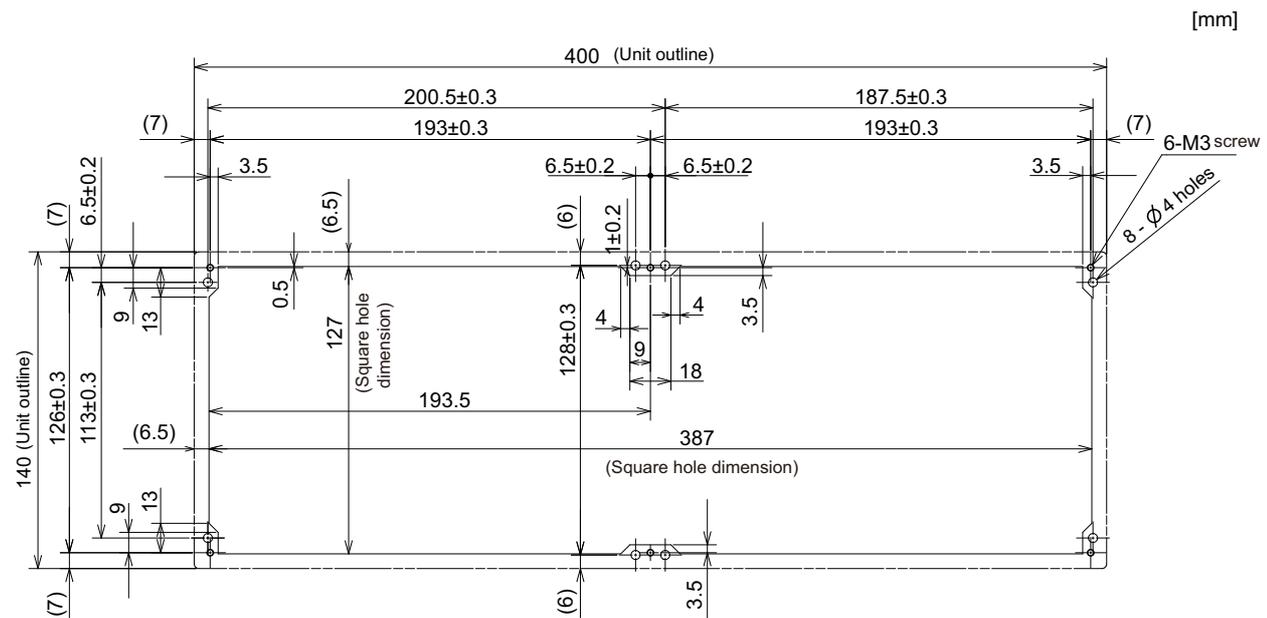

[mm]

## 4.8 Operation Panel I/O Unit

### 4.8.1 List of Units


Classification	Type	Components	Remarks
DI 24 V/0 V common input [64 points] DO Source output [48 points] AO analog output [1 point]	FCU8-DX731 (*1)	Base card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 48-points source type (200 mA/point) AO: 1 point Manual pulse generator input: 2 ch Control unit I/F Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1, 3, 7 to 12, 20 to 22 RIO extensible stations: 2, 4 to 6, 13 to 19, 23 to 64
DI 24 V/0 V common input [96 points] DO Source output [64 points]	FCU8-DX750	Base card RIO 2.0 terminator connector (R2-TM)	DI: 96-points 24 V/0 V common type DO: 64-points source type (200 mA/point) Manual pulse generator input: 3 ch Control unit I/F Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 3, 7 to 12, 20 to 22 RIO extensible stations: 4 to 6, 13 to 19, 23 to 64
DI 24 V/0 V common input [96 points] DO Source output [96 points]	FCU8-DX760	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 96-points 24 V/0 V common type DO: 96-points source type (200 mA/point) Manual pulse generator input: 3 ch Control unit I/F Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 12, 20 to 22 RIO extensible stations: 5, 6, 13 to 19, 23 to 64
DI 24 V/0 V common input [96 points] DO Source output [64 points] AI Analog input [1 point] AO Analog output [1 point]	FCU8-DX761	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 96-points 24 V/0 V common type DO: 64-points source type (200 mA/point) AI: 1 points AO: 1 point Manual pulse generator input: 3 ch Control unit I/F Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 5, 7 to 12, 20 to 22 RIO extensible stations: 6, 13 to 19, 23 to 64
DI 24 V/0 V common input [64 points] DO Source output [64 points] Scan input [64 points] Scan output [64 points]	FCU8-DX834 (*2)	Base card Add-on card RIO 2.0 terminator connector (R2-TM)	DI: 64-points 24 V/0 V common type DO: 64-points source type (200 mA/point) Scan input: 64 points Scan output: 64 points Manual pulse generator input: 3 ch Keyboard unit I/F Remote I/O 2.0 I/F RIO occupied stations (fixed): 1 to 4, 7 to 14, 20 to 22 RIO extensible stations: 5, 6, 15 to 19, 23 to 64

(\*1) The form of the CG31/CG32/CG35/CG36 connectors on FCU8-DX731 are the same as that of CJ38/CJ40/CJ42 connectors on other units. Be careful not to connect to a wrong connector. See the descriptions mentioned in the later section for more specific explanation on connections.


(\*2) The connection method of DO (CG32/CG34) of FCU8-DX834 is different from other operation panel I/O units. Be careful not to connect to a wrong connector. See the descriptions mentioned in the later section for more specific explanation on connections.

### 4.8.2 FCU8-DX731/FCU8-DX750/FCU8-DX760/FCU8-DX761/FCU8-DX834


#### Outline dimensions: FCU8-DX731

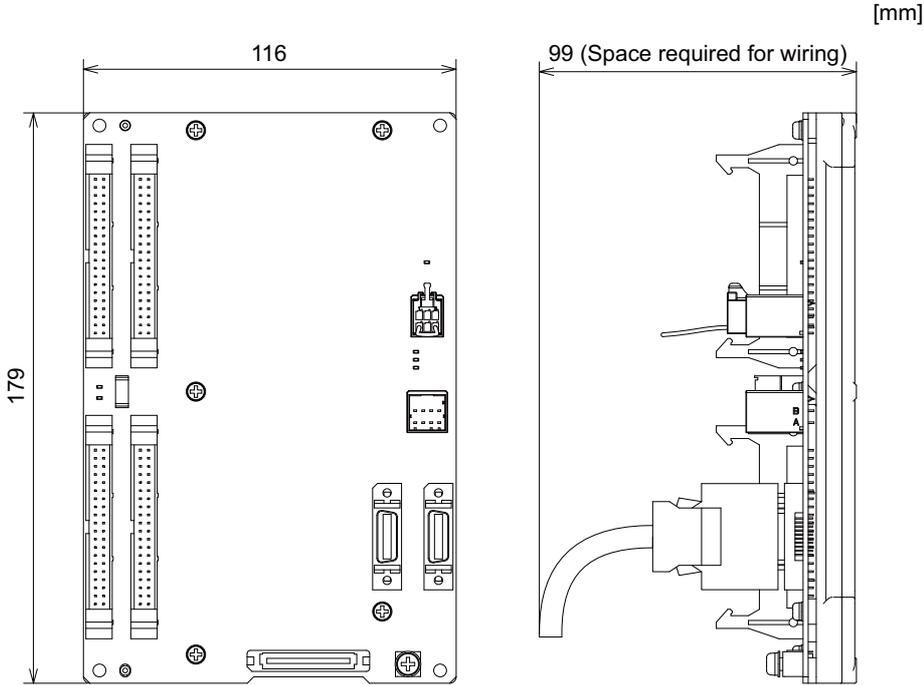


#### Outline dimensions: FCU8-DX750

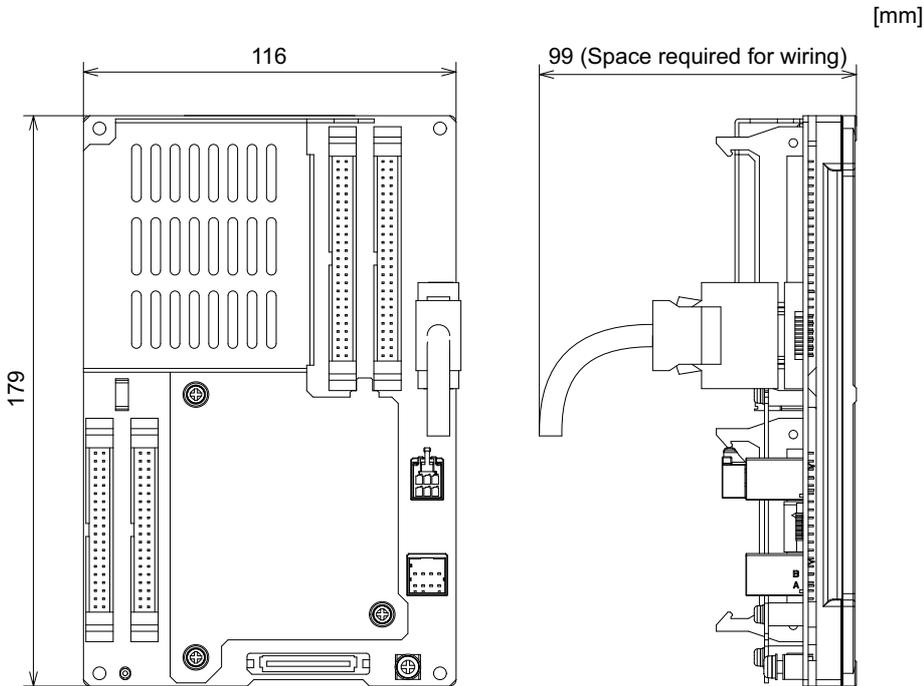


**Outline dimensions: FCU8-DX760**

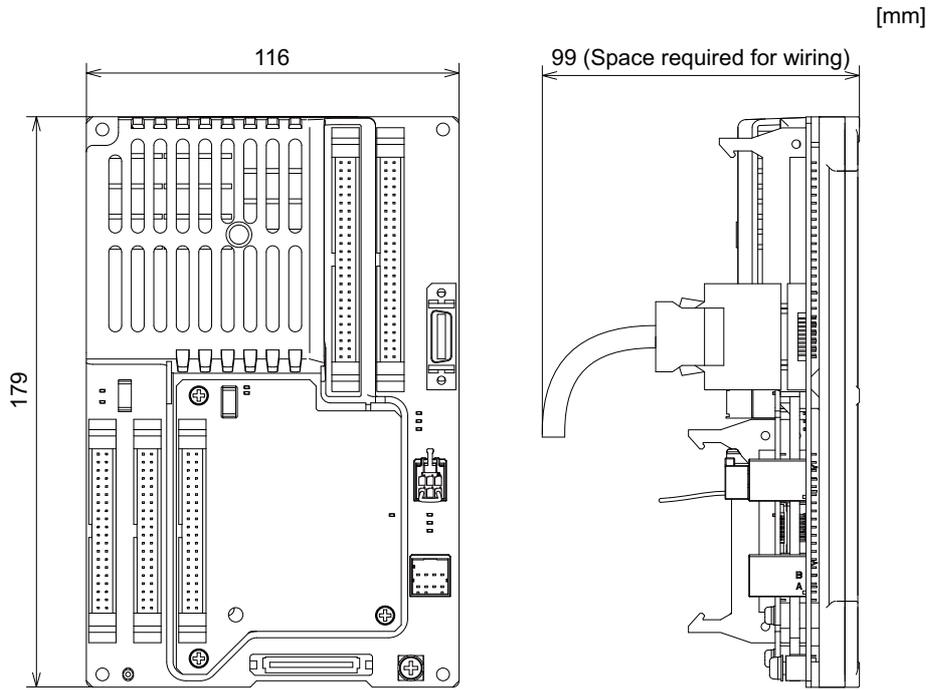


**Outline dimensions: FCU8-DX761**

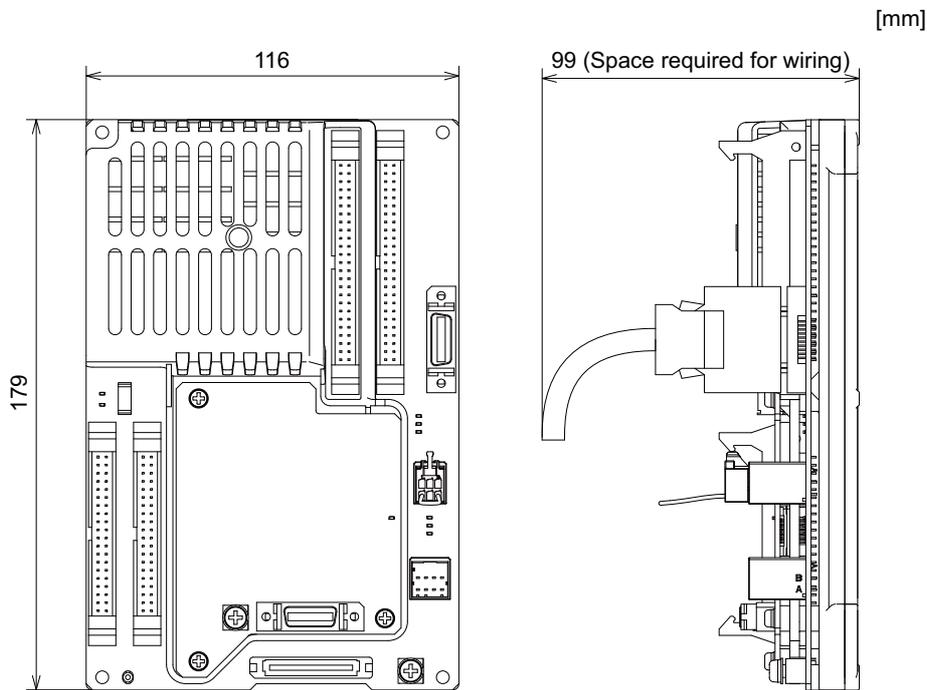

Outline dimensions: FCU8-DX834

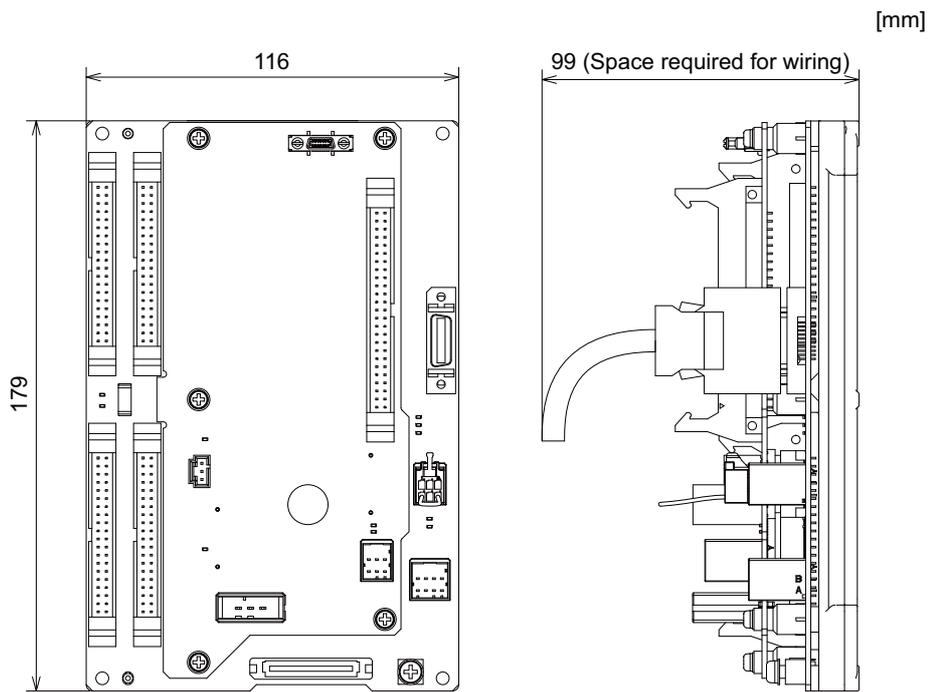

Installation dimension: FCU8-DX731/FCU8-DX750/FCU8-DX760/FCU8-DX761/FCU8-DX834

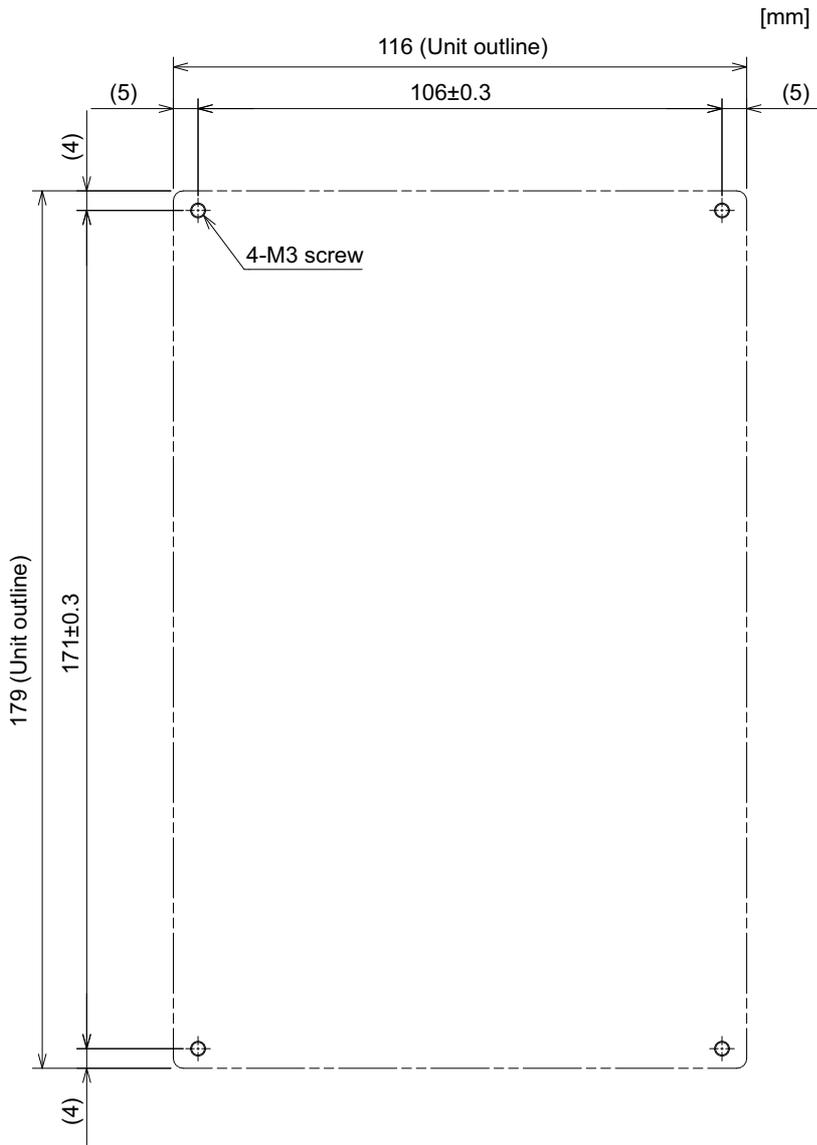

**Note**

- The unit thickness of the fixed part with screws is 16.6 mm.  
Select the fixing screws having the length suitable for the thickness.

## 4.9 Remote I/O Unit

Types of signals described on the list of units can be input/output from the remote I/O unit (FCU8-DXxxx) according to the type and No. of contacts. Remote I/O units are used by being connected to the control unit or the operation panel I/O unit. Multiple remote I/O units can be used as long as the total number of occupied stations is 64 or less.

### Note

(1) The maximum connectable number of remote I/O units is 32.

### 4.9.1 List of Units

Classification	Type	Components	Remarks
DI 24 V/0 V common input [32 points] DO Source output [32 points]	FCU8-DX220	Base card RIO 2.0 connector set	DI: 32-point 24 V/0 V common type DO: 32-point source type (200 mA/point) Number of occupied stations: 1
DI 24 V/0 V common input [64 points] DO Source output [48 points]	FCU8-DX230	Base card RIO 2.0 connector set	DI: 64-point 24 V/0 V common type DO: 48-point source type (200 mA/point) Number of occupied stations: 2
DI 24 V/0 V common input [64 points] DO Source output [48 points] AO analog output [1 point]	FCU8-DX231	Base card RIO 2.0 connector set	DI: 64-point 24 V/0 V common type DO Source type [48 points] (200 mA/point) AO: 1 point Number of occupied stations: 2
AI analog input [4 points] AO analog output [1 point]	FCU8-DX202	Base card RIO 2.0 connector set	AI: 4 points AO: 1 point Number of occupied stations: 1
DI 0 V common input [16 points] DO Source output (large capacity) [8 points]	FCU8-DX213	Base card RIO 2.0 connector set	DI: 16-point 0 V common type (3 mA/point) DO: 8-point source type (2 A/point) Number of occupied stations: 1
DI 0 V common input [16 points] DO Source output (large capacity) [8 points]	FCU8-DX213-1	Base card RIO 2.0 connector set	DI: 16-point 0 V common type (9 mA/point) DO: 8-point source type (2 A/point) Number of occupied stations: 1
Safety DI 0 V common input [8 points] Safety DO Source output (large capacity) [4 points]	FCU8-DX654	Base card RIO 2.0 connector set	Safety DI: 8-point 0 V common type (3 mA/point) Safety DO: 4-point source type (2 A/point) Number of occupied stations: 2
Safety DI 0 V common input [8 points] Safety DO Source output (large capacity) [4 points]	FCU8-DX654-1	Base card RIO 2.0 connector set	Safety DI: 8-point 0 V common type (9 mA/point) Safety DO: 4-point source type (2 A/point) Number of occupied stations: 2
DI 24 V/0 V common input [32 points] DO Source output [32 points] Safety DI 0V common input [8 points] (*1) Safety relay output [4 points] (*2)	FCU8-DX651	Base card Add-on card RIO 2.0 connector set	DI: 24 V/0 V common type [32 points] DO: 32-point source type (200 mA/point) Safety DI: 8-point 0 V common type Safety relay: 4 points (non-voltage contact) Relay contact welding detection Number of occupied stations: 3
Thermistor input (12 points)	FCU8-DX408	Base card RIO 2.0 connector set	Thermistor input: 12 points Number of occupied stations: 3
Multi-analog input [4 points] (*3)	FCU8-DX409	Base card RIO 2.0 connector set	Multi-analog input: 4 points Number of occupied stations: 4


(\*1) Safety DI uses 16 points of terminal because of the duplication wiring.

(\*2) Safety relay output uses 8 points of terminal because of the duplication wiring.


(\*3) Voltage input, current input, thermocouple input and resistance temperature detector input are selected for each CH.

**4.9.2 FCU8-DX220/FCU8-DX230/FCU8-DX231/FCU8-DX202/FCU8-DX213/  
FCU8-DX213-1/FCU8-DX654/FCU8-DX654-1/FCU8-DX651/FCU8-DX408/  
FCU8-DX409**


**Outline dimensions: FCU8-DX220**

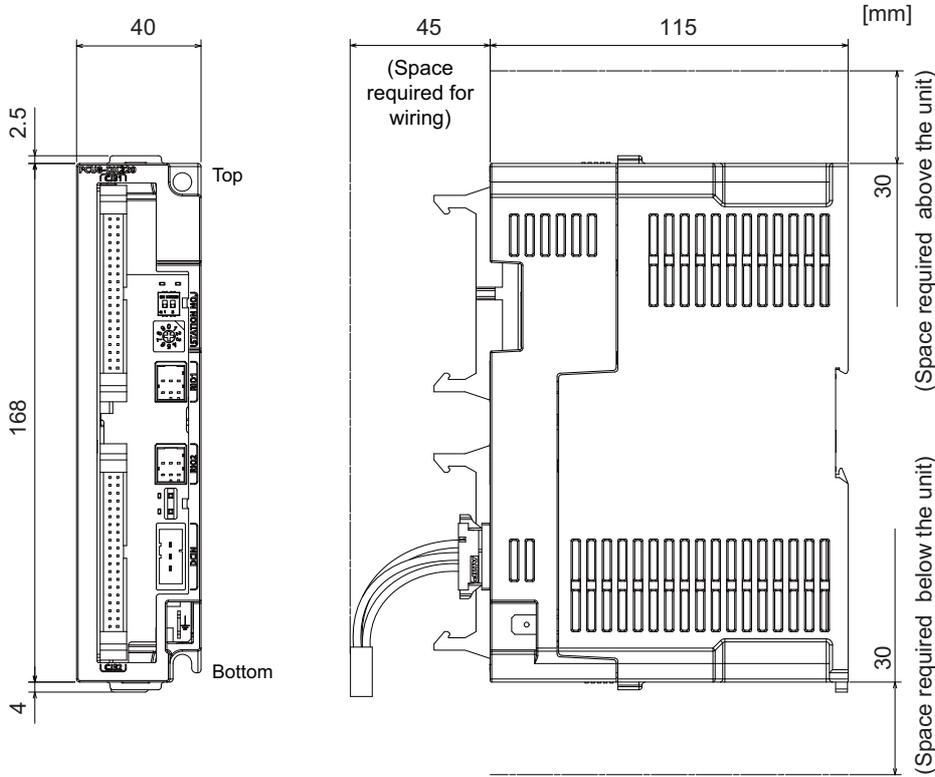


**Outline dimensions: FCU8-DX230**

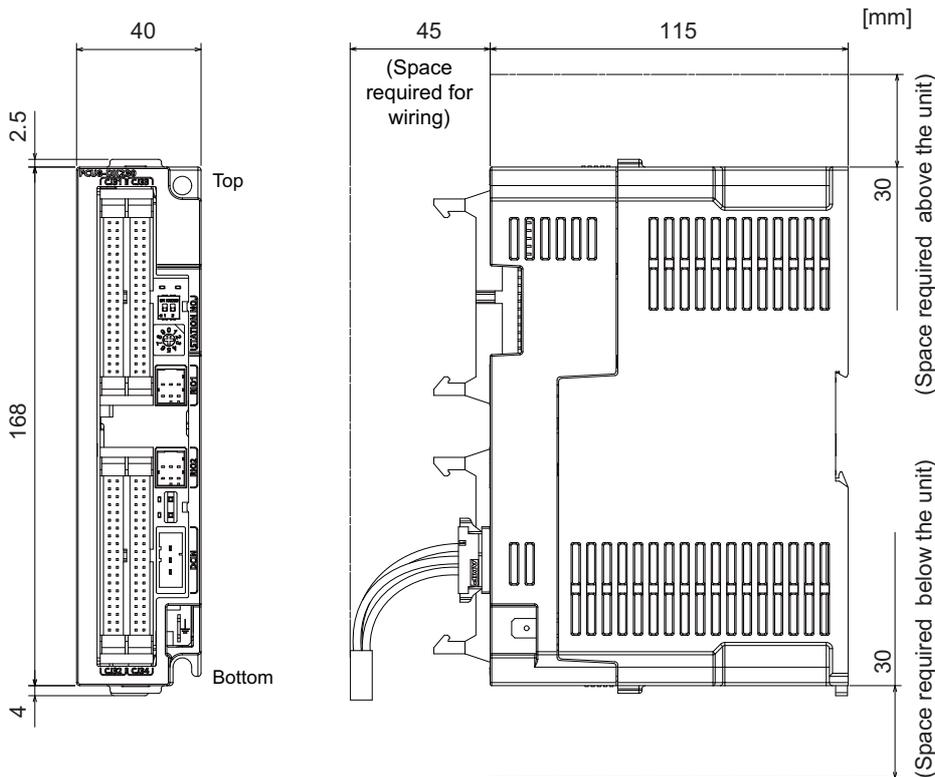


**Outline dimensions: FCU8-DX231**

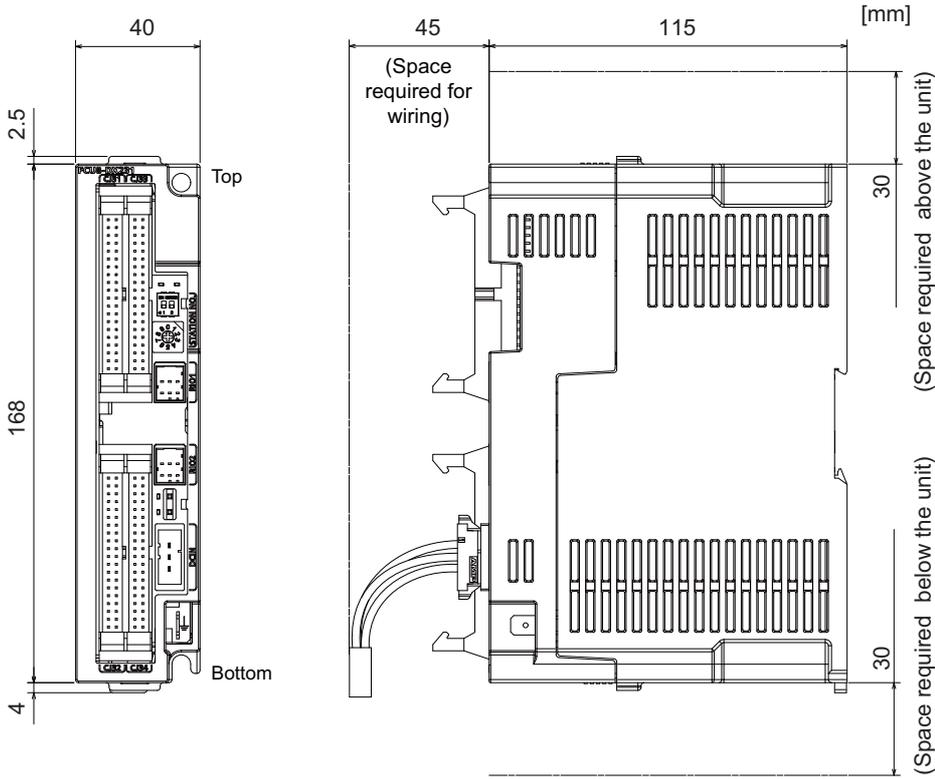


**Outline dimensions: FCU8-DX202**

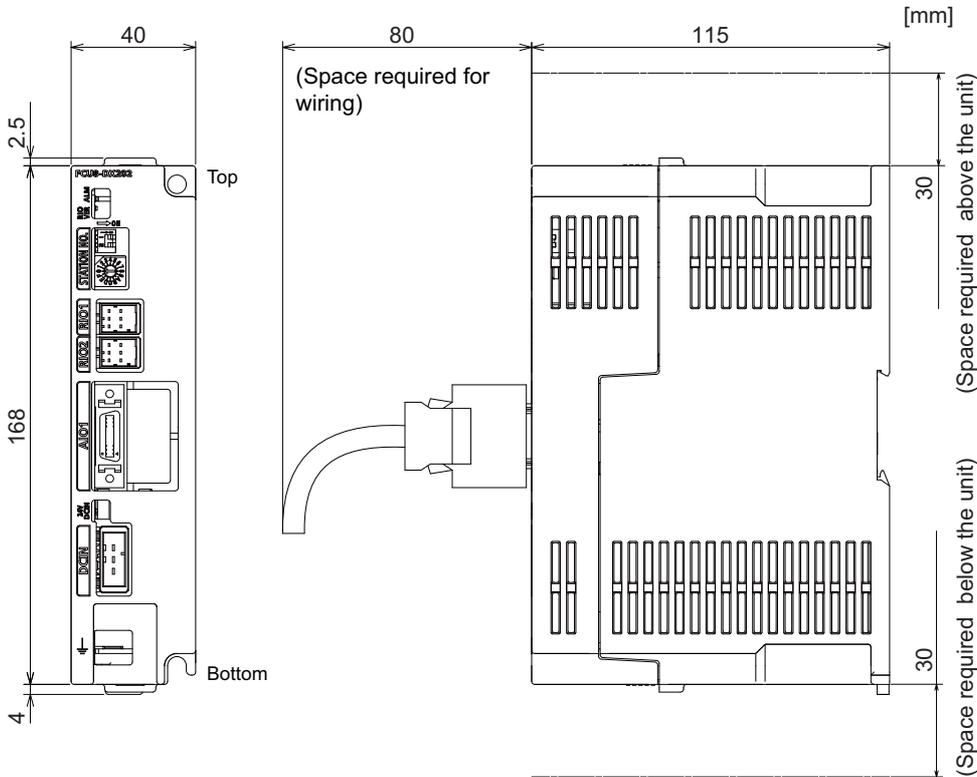


**Outline dimensions: FCU8-DX213**

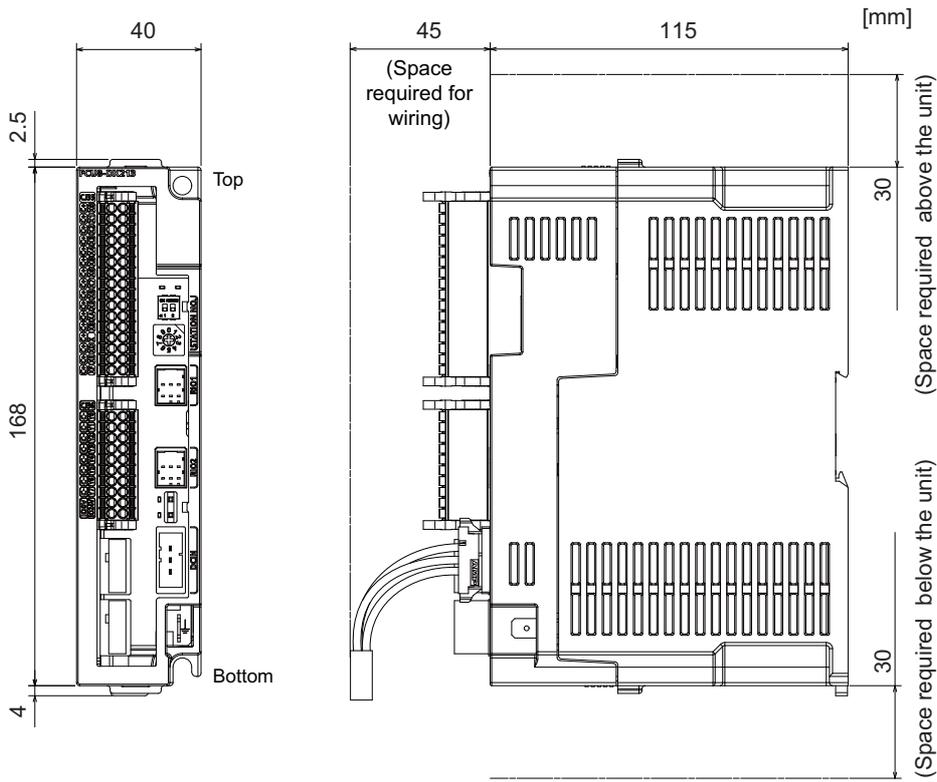


**Outline dimensions: FCU8-DX213-1**

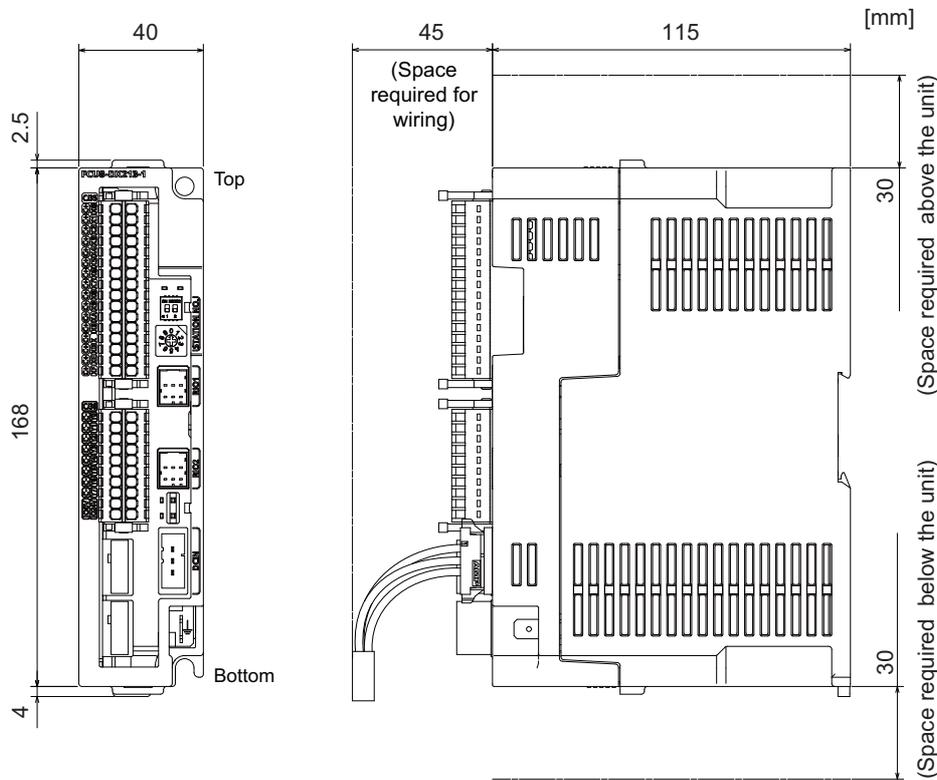

**Outline dimensions: FCU8-DX654**

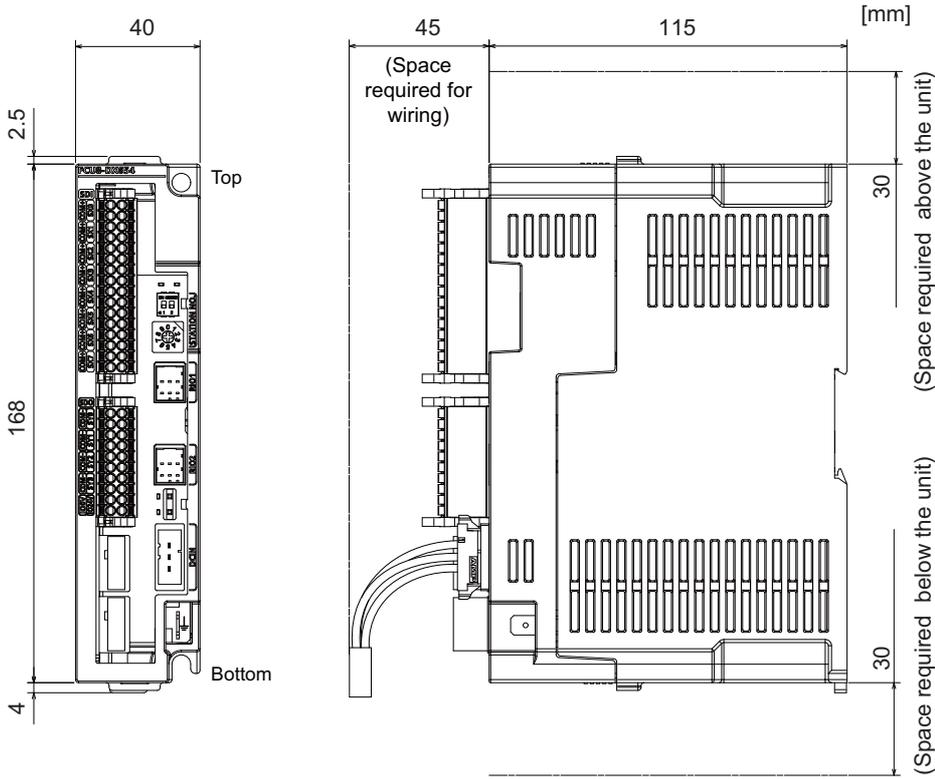


**Outline dimensions: FCU8-DX654-1**

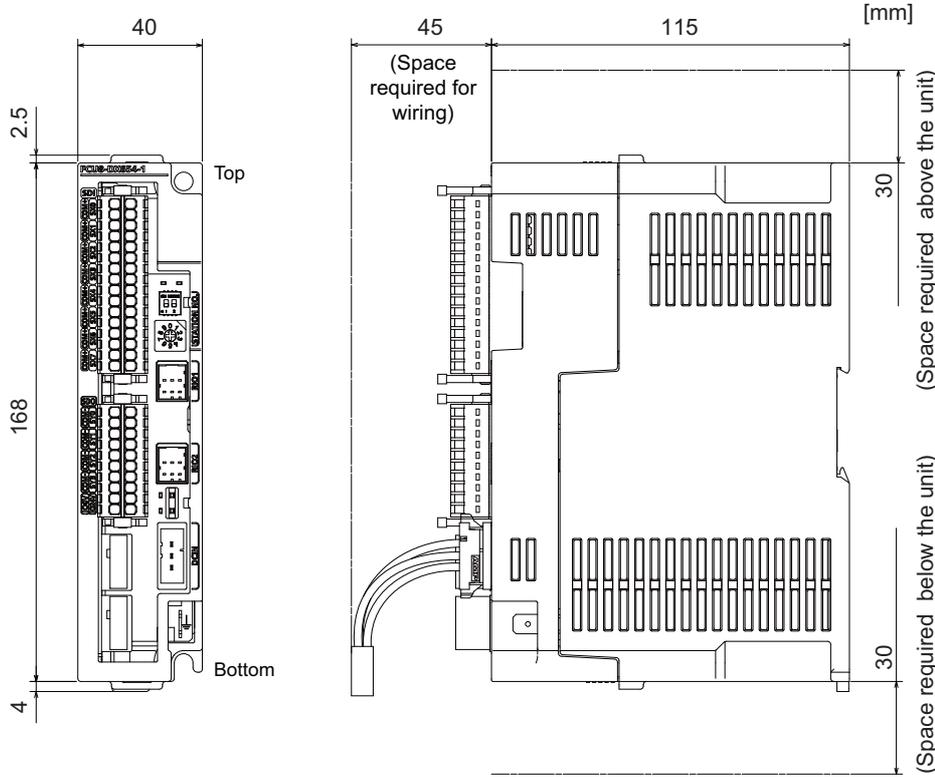





Outline dimensions: FCU8-DX409

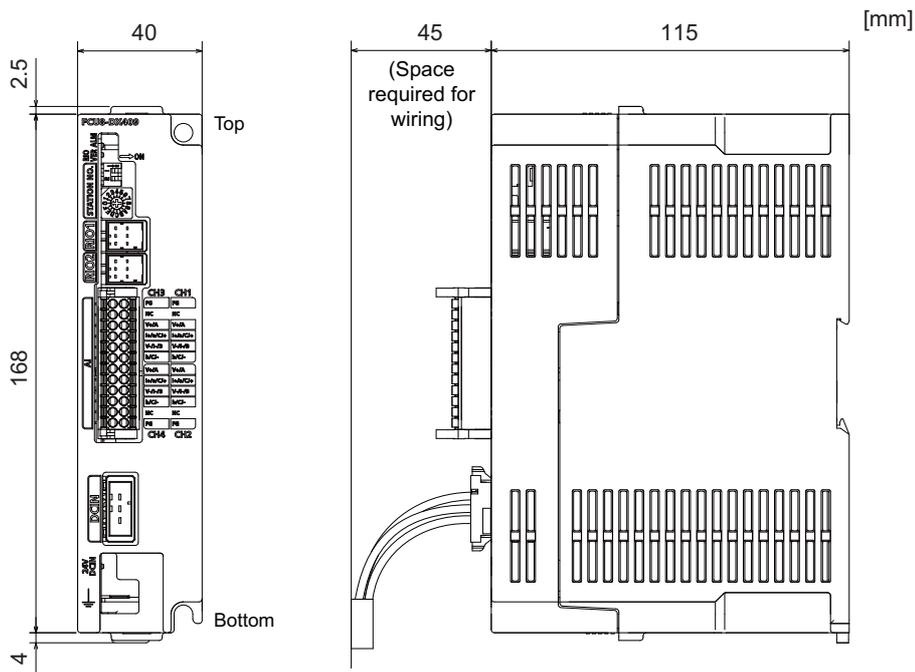

**Installation dimensions: FCU8-DX220/FCU8-DX230/FCU8-DX231/FCU8-DX202/FCU8-DX213/  
FCU8-DX213-1/FCU8-DX654/FCU8-DX654-1/FCU8-DX408/FCU8-DX409**

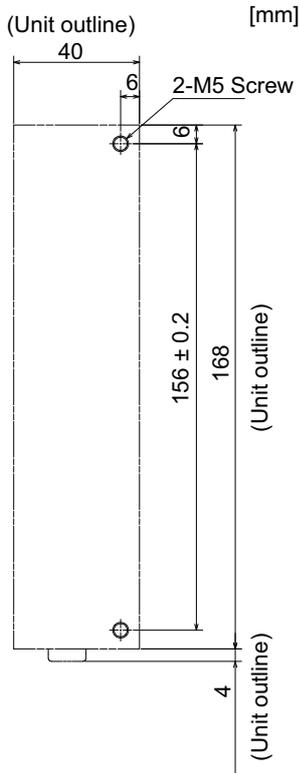


**Installation dimensions: FCU8-DX651**

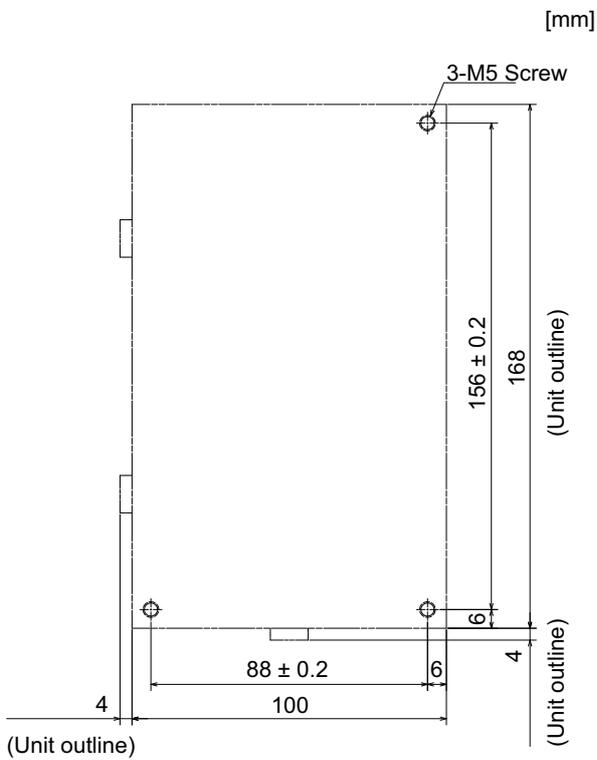

## 4.10 Functional Safety Expansion Unit

### 4.10.1 Functional Safety Expansion Unit (FCU8-EX134)


#### Outline dimensions

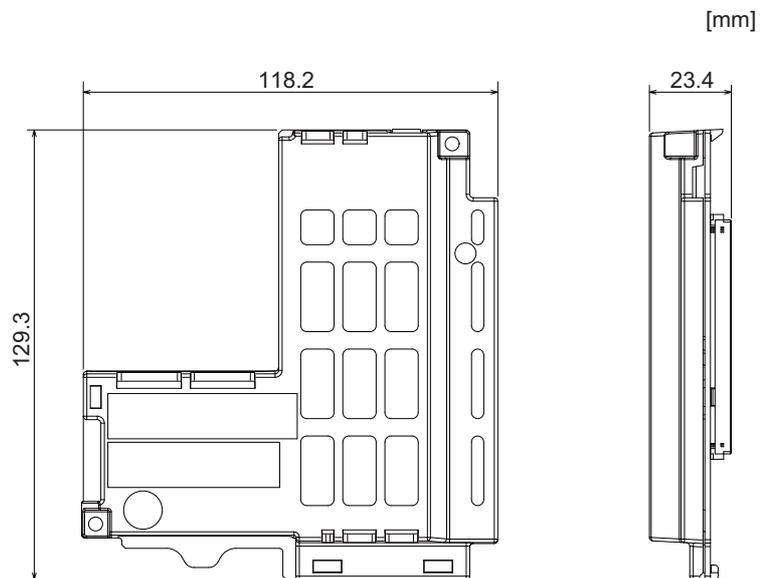

## 4.11 Function Expansion Unit


### 4.11.1 CC-Link (FCU8-EX561)

#### Outline dimensions

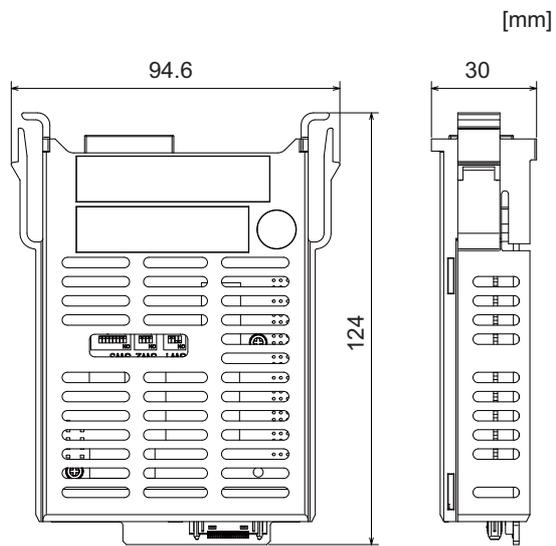


### 4.11.2 PROFIBUS-DP (FCU8-EX563)

#### Outline dimensions

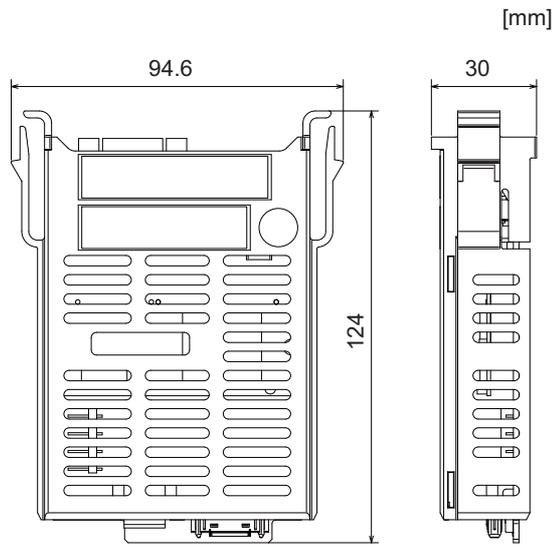

### 4.11.3 CC-Link IE Field (FCU8-EX564)


#### Outline dimensions

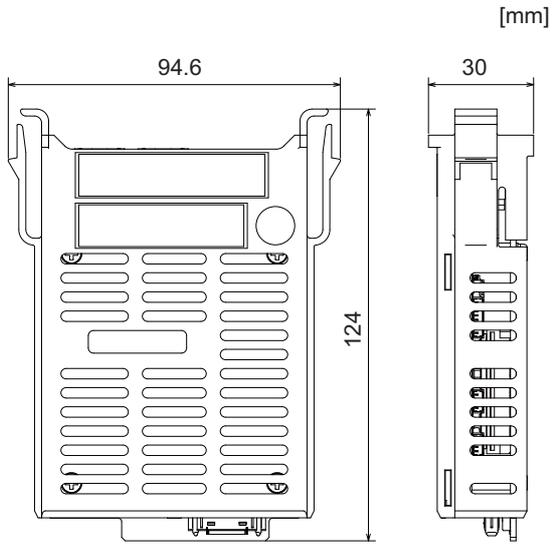

### 4.11.4 EtherNet/IP (FCU8-EX565)


#### Outline dimensions

[mm]

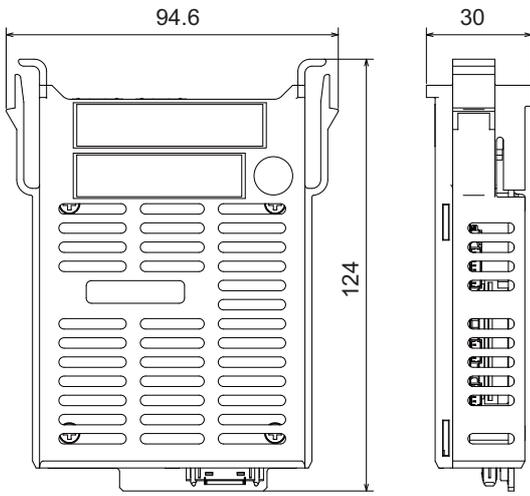


### 4.11.5 FL-net (FCU8-EX568)

#### Outline dimensions

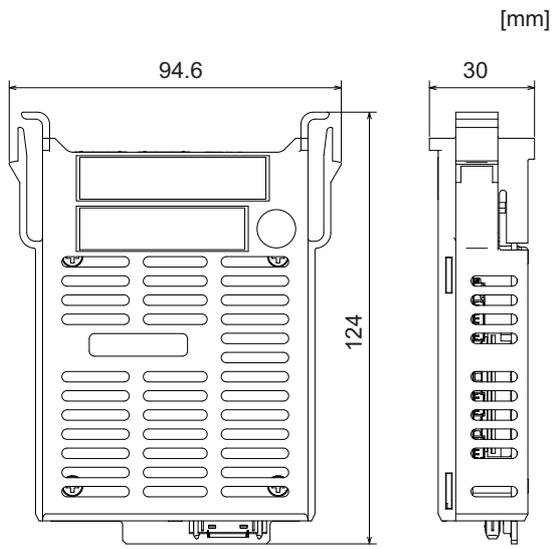


### 4.11.6 Vibration Cutting Expansion Unit (FCU8-EX744)

#### Outline dimensions

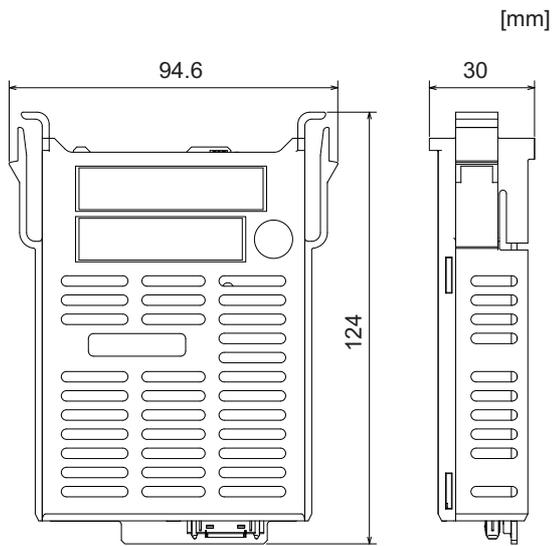


### 4.11.7 Option Relay Unit (FCU8-EX704)

#### Outline dimensions

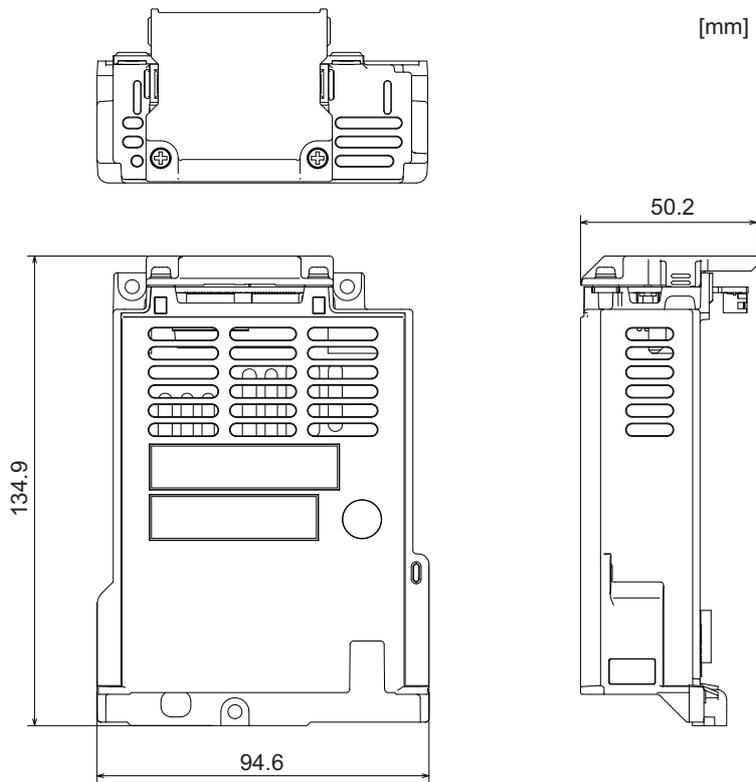

### 4.11.8 Option Relay Unit (FCU8-EX705)

#### Outline dimensions

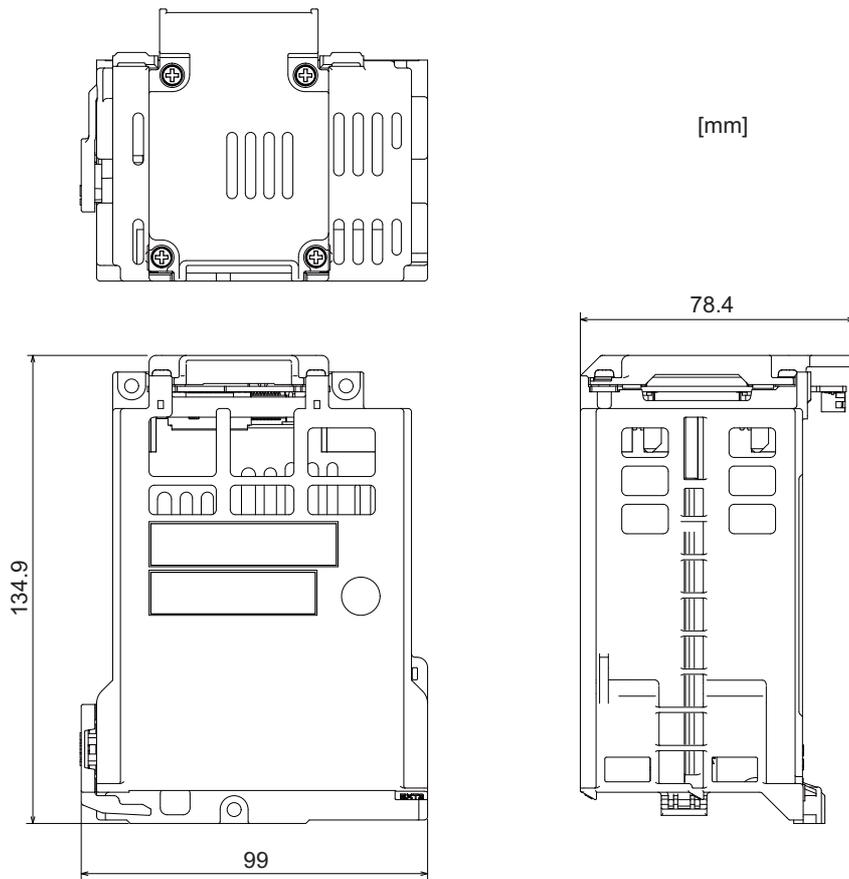


## 4.12 Manual Pulse Generator


### 4.12.1 5 V Manual Pulse Generator (UFO-01-2Z9)

- 100 pulse/rev

#### Outline dimensions

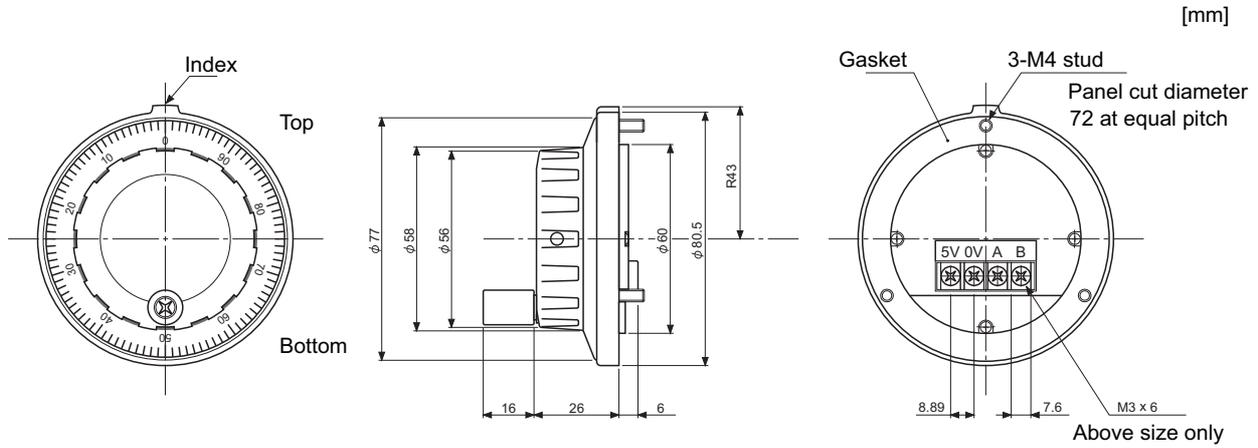

#### Panel cut dimensions

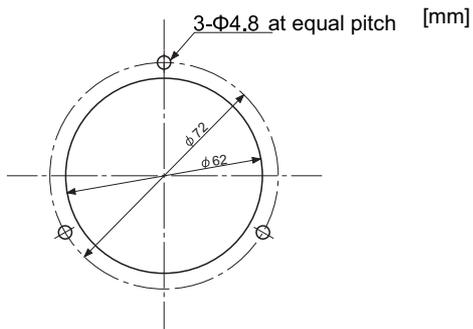


Produced by NIDEC NEMICON CORPORATION

### 4.12.2 12 V Manual Pulse Generator (HD60C)

■ 25 pulse/rev


#### Outline dimensions

[mm]

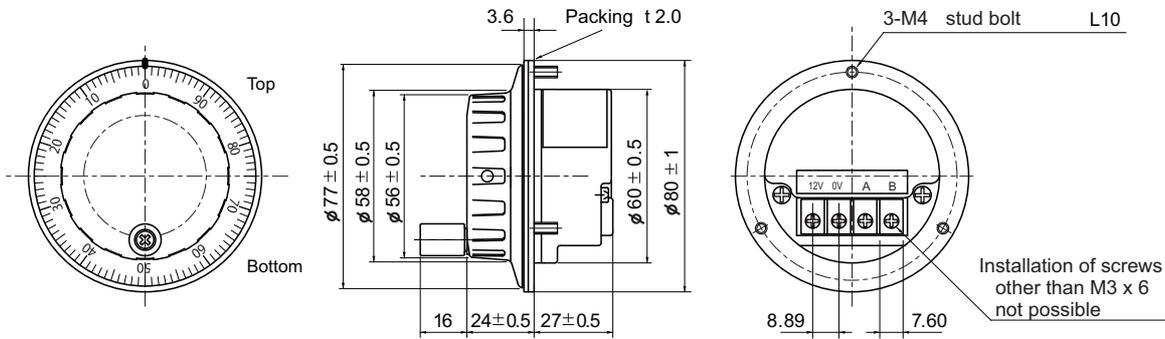

#### Panel cut dimensions

[mm]



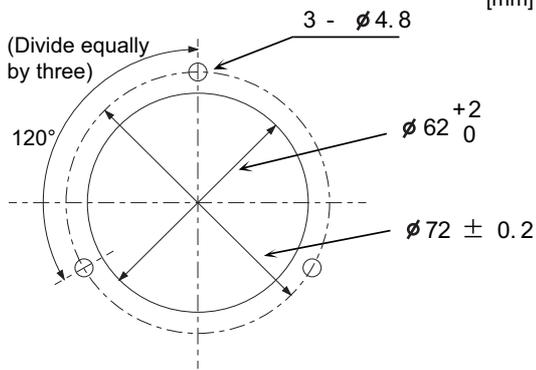


## 4.13 Synchronous Feed Encoder


### 4.13.1 Synchronous Feed Encoder (OSE-1024-3-15-68)

#### Outline dimensions

[mm]

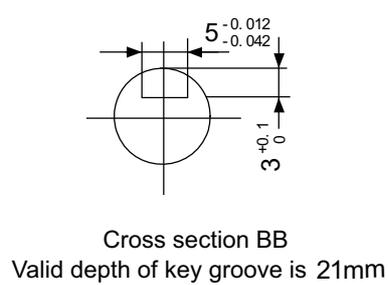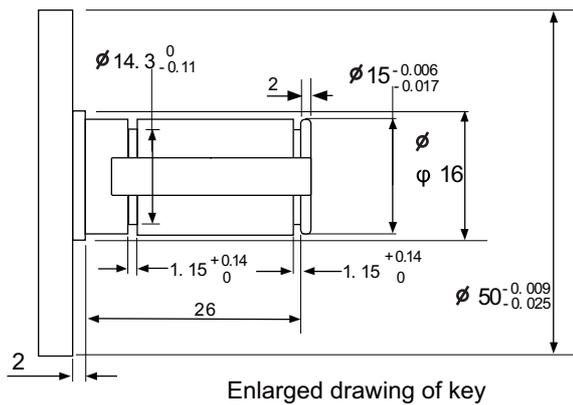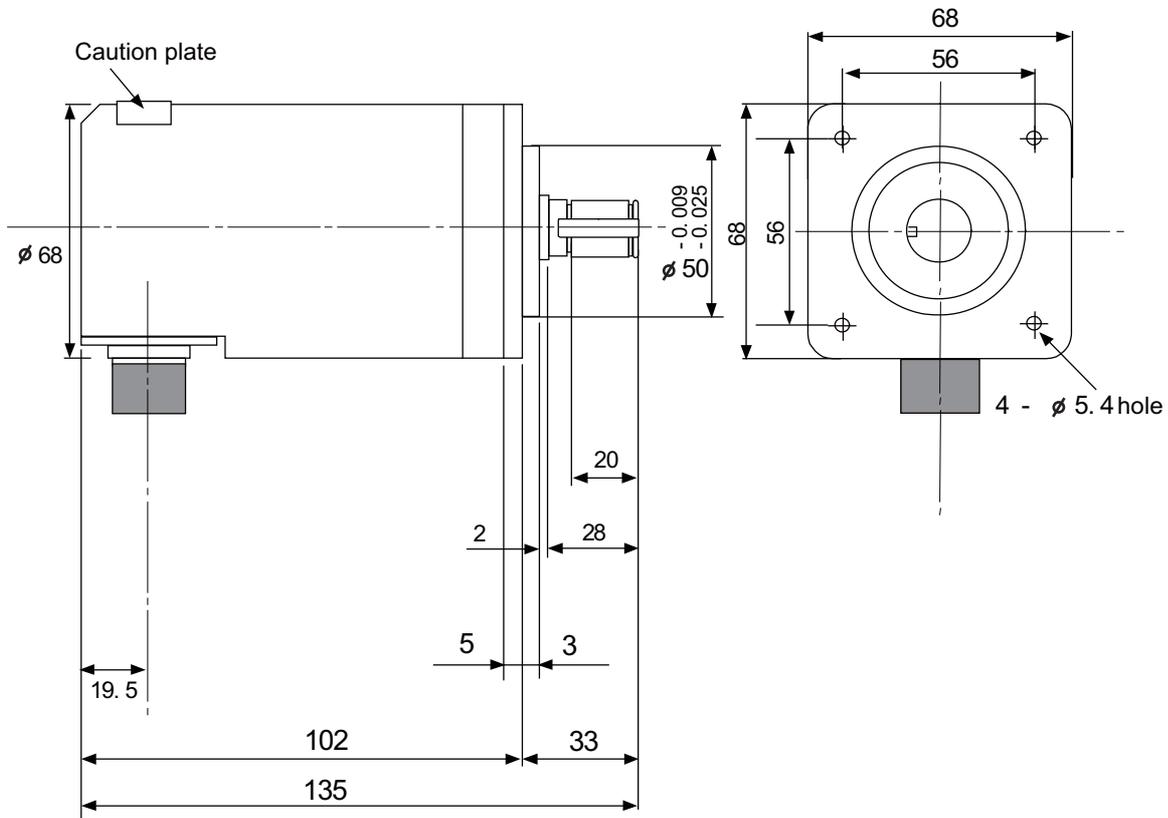

**Connector**

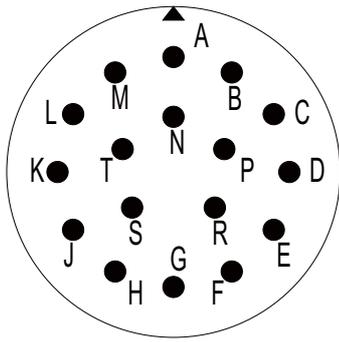

<Connector pin assignment>


Pin	Function	Pin	Function
A	A phase	K	0 V
B	Z phase	L	-
C	B phase	M	-
D	-	N	A phase reverse
E	Case grounding	P	Z phase reverse
F	-	R	B phase reverse
G	-	S	-
H	+5 V	T	-
J	-		

## 4.14 Machine Operation Panel


### 4.14.1 Main Panels A/B

(FCU8-KB921/FCU8-KB922/FCU8-KB925, FCU8-KB923/FCU8-KB924/FCU8-KB926)


#### Outline dimensions: FCU8-KB921

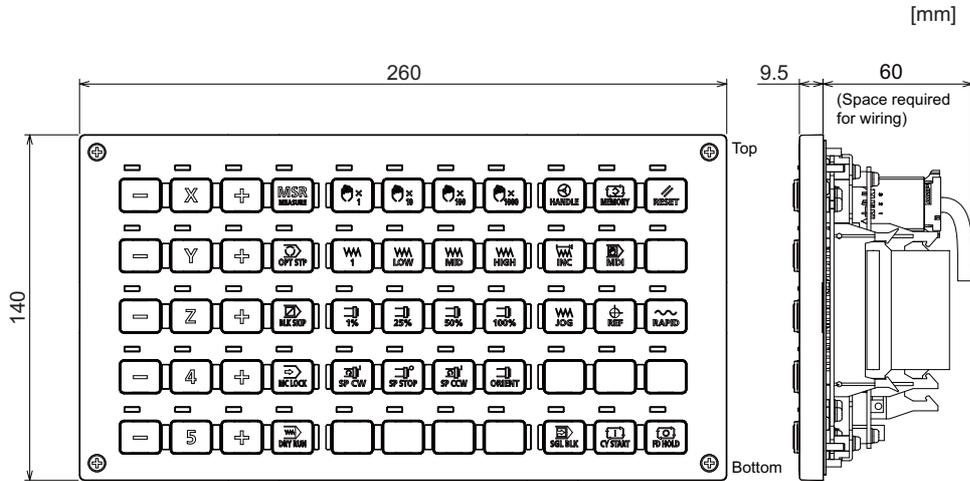


#### Outline dimensions: FCU8-KB922

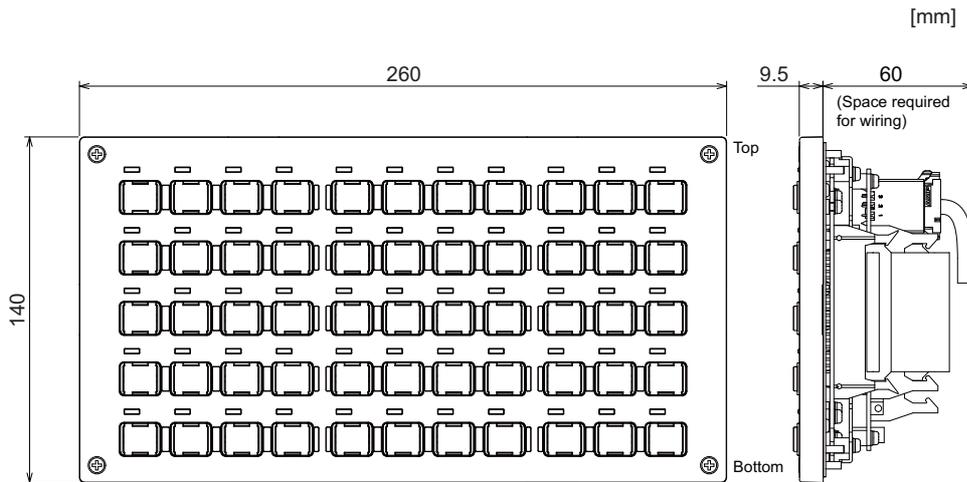


Outline dimensions: FCU8-KB925

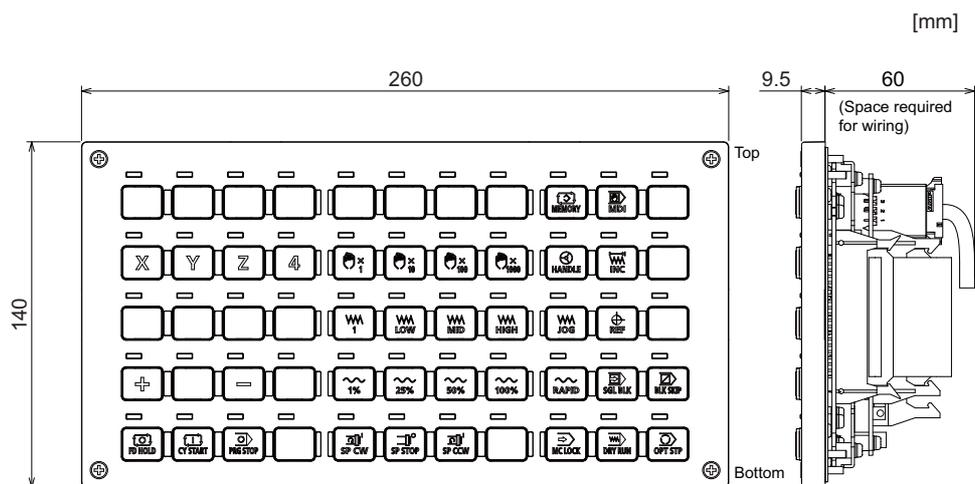


Outline dimensions: FCU8-KB923

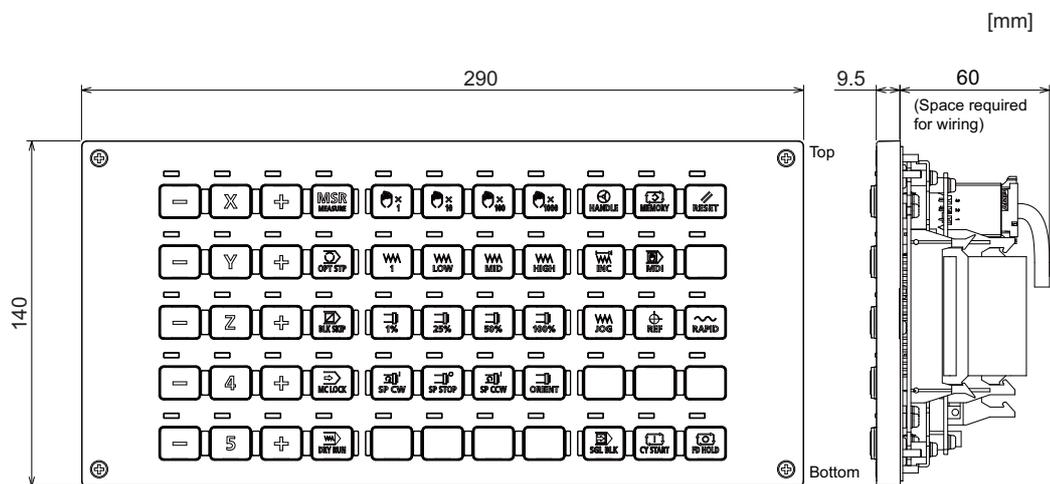

**Outline dimensions: FCU8-KB924**

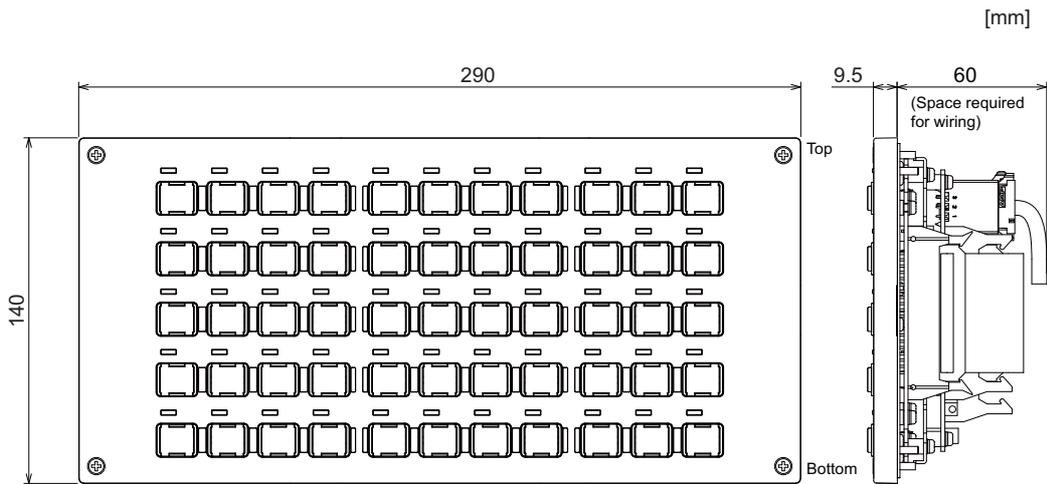


**Outline dimensions: FCU8-KB926**

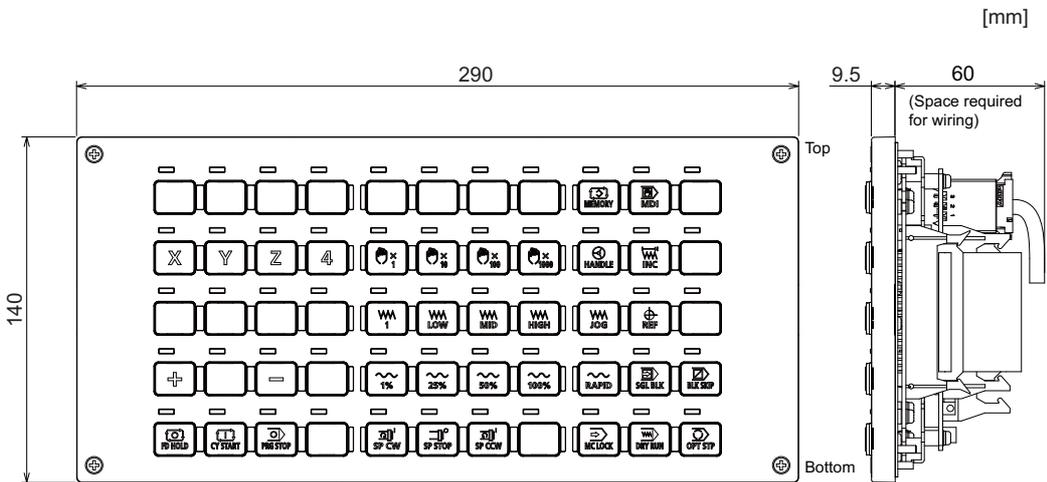


Panel cut dimensions: FCU8-KB921/FCU8-KB922/FCU8-KB925

[mm]

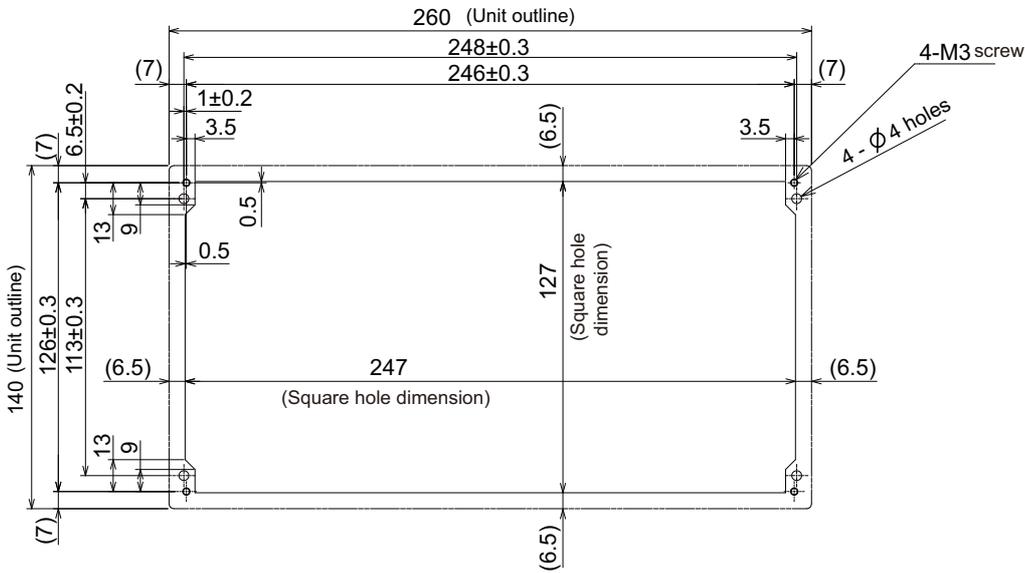


Panel cut dimensions: FCU8-KB923/FCU8-KB924/FCU8-KB926

[mm]

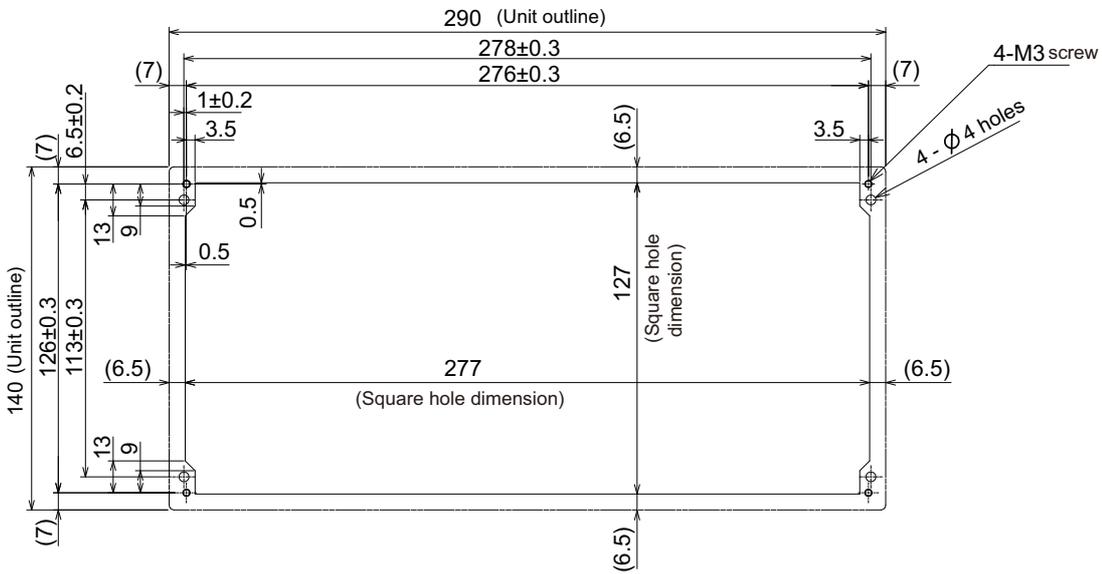


### 4.14.2 Sub Panel A (FCU8-KB931/FCU8-KB941)


#### Outline dimensions: FCU8-KB931

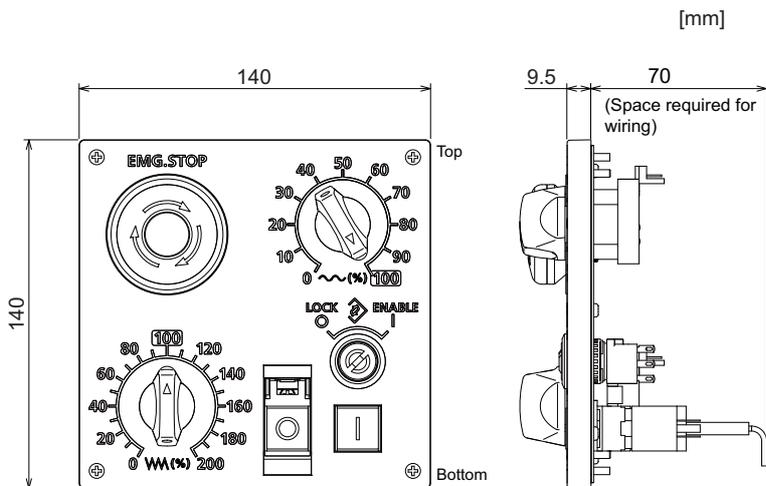

#### Outline dimensions: FCU8-KB941

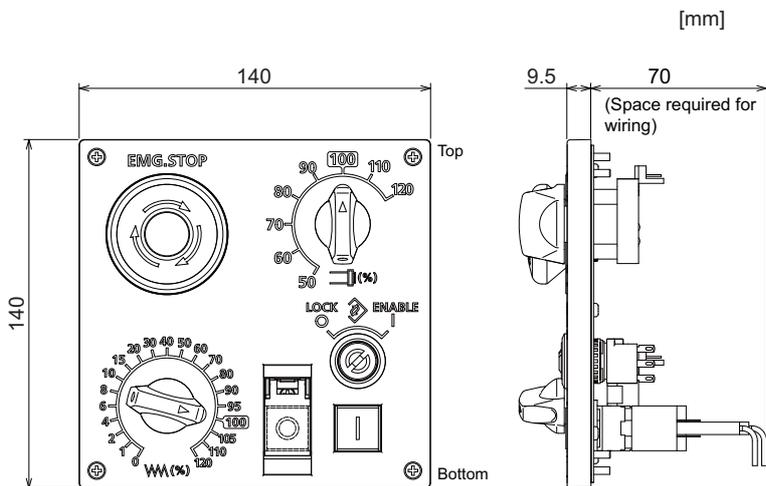

#### Panel cut dimensions: FCU8-KB931/FCU8-KB941

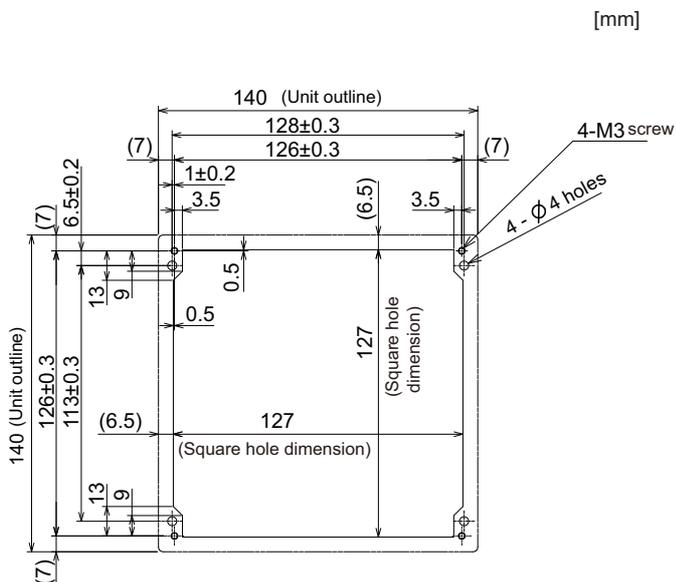

## 4.15 Handy Terminal


Item	Unit name		Handy terminal
	Type		HG1T-SB12UH-MK1346-L5
General specifications	Ambient temperature	During operation	0 to 40 °C
		During storage	-20 °C to 60 °C
	Ambient humidity		Long term: 10 to 75% RH (with no dew condensation)
			Short term: 10 to 95% RH (with no dew condensation) (*1)
	Vibration resistance	During operation	9.8 m/s <sup>2</sup> [1.0 G] or less, 10 to 55 Hz
	Shock resistance	During storage	98 m/s <sup>2</sup> [10.0 G] or less
Working atmosphere		No corrosive gases, dust or oil mist	
Power specifications	Power supply voltage		24 VDC ±5% Ripple noise 240 mV (P-P)
	Current consumption	(max.)	0.2A
	Instantaneous stop tolerance time		24 VDC : 4 ms or less
Others	Heating value		4 W (max.)
	Mass		0.6 kg

(\*1) "Short term" means within one month.

### Note

(1) The unit is an IP65F equivalent.

Dimension and names of parts

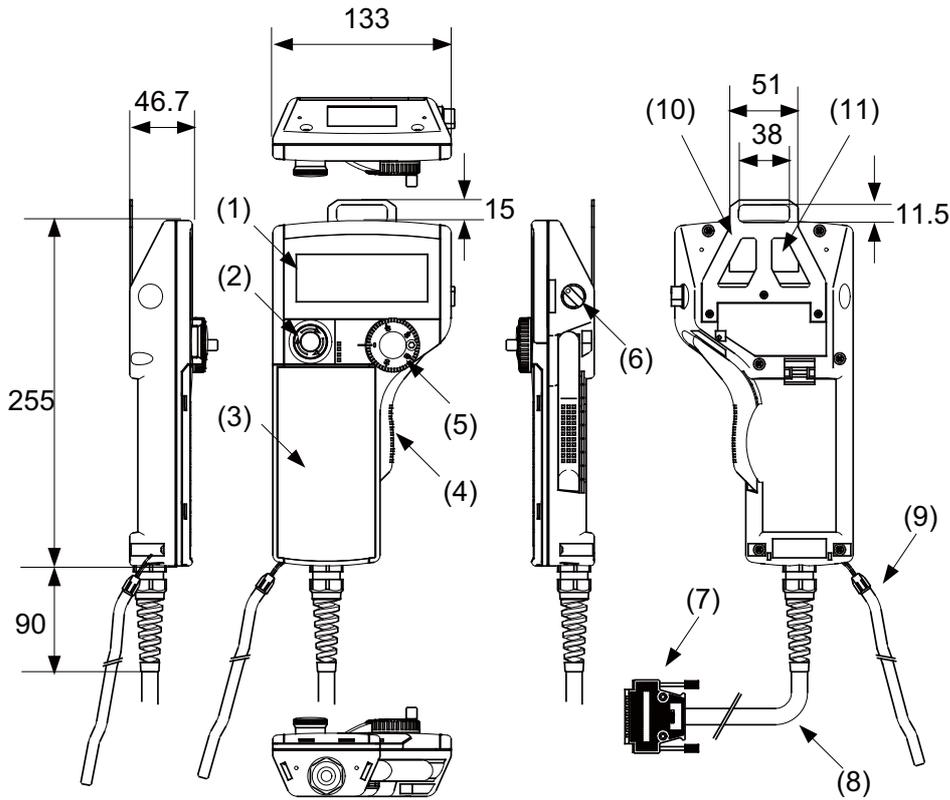


No.	Name	Function/Specification	No.	Name	Function/Specification
(1)	LCD	Monochrome display with backlight 192 (W) × 64 (H) dots	(7)	HOST	Host interface connector (DDK: 17JE-23250-02(D8A6))
(2)	SW1	Emergency stop switch Contact rating/Contact: 24 VDC, 1A Contact configuration: 2b contacts (IDEC Corporation: HA1E-V2S2VR)	(8)	-	Host interface cable (5 m)
(3)	-	Membrane switch (*1)	(9)	-	Simplified hand strap (IDEC Corporation: HG9Z-PS1)
(4)	SW2	Enable switch Contact rating/Contact: 24 VDC , 50 mA Contact configuration: 3-position contact × 2 (OFF-ON-OFF) (IDEC Corporation: HE3B-M2)	(10)	-	Panel mounting bracket (IDEC Corporation: HG9Z-TK1)
(5)	SW4	Manual Pulse Generator Output: Open collector 4.7 kΩ pull-up resistor is connected. (TOKYO SOKUTEIKIZAI CO., LTD: RE19PH50C16RR)	(11)	-	Serial number plate
(6)	SW6	Selector switch			

(\*1) Do not press multiple switches simultaneously: When three or more switches are pressed simultaneously, unpressed switches are also detected as pressed ones.

## 4.16 Thermistor

### 4.16.1 Thermistor(PT3C-51F-M2)

#### Outline dimensions

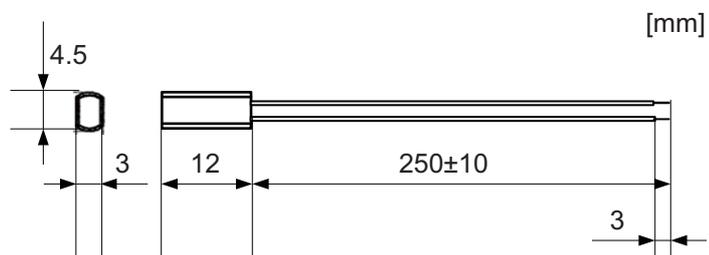

Made by SHIBAURA ELECTRONICS Co., Ltd.

Ambient temperature	-10 to + 190 °C
Insulation resistance	100 MΩ or more at 500 VDC [between case and lead wire]

## 4.17 Exclusive SD Cards

Item		FCU8-SD001G	FCU8-SD004G
Capacity		1 GB	4 GB
NAND Flash		SLC (*1)	
Ambient temperature	During operation	-25 °C to +85 °C	
	During storage	-40 °C to +85 °C	
Ambient humidity	During operation	5% to 95%RH (with no dew condensation)	
	During storage	5% to 95%RH (with no dew condensation)	

(\*1) SLC stands for Single Level Cell, and it stores one bit data in each memory cell.

This provides longer life span and high product reliability in comparison with MLC (Multi Level Cell) and TLC (Triple Level Cell), which are commonly applied to SD cards.

### Note

- (1) Do not touch the terminal part with fingers, etc. when handling the SD cards.  
The contamination of the terminal part of SD card causes a contact failure or a trouble.

## 4.18 Specifications and Precautions of USB/SD/LAN Interface

### 4.18.1 USB Interface (Memory I/F card)

<b>Standards</b>	USB2.0
<b>Data transfer speed (*1)</b>	High Speed (480 Mbps) Full Speed (12 Mbps) Low Speed (1.5 Mbps)
<b>Power supply to USB device</b>	Supply voltage: 5 V $\pm$ 5% Supply current: Max. 500 mA/port
<b>Number of free ports</b>	Front $\times$ 1
<b>Maximum cable length</b>	5 m

(\*1) Data transfer speed is the theoretical value on the standard, and the actual speed will be inferior to the value listed above. The transfer speed may be restrained depending on the specification of the connected device.

#### Note

(1) Do not connect the devices other than the USB memory.

#### ■ Precautions for insertion/removal of USB memory

When inserting/removing a USB memory, turn the Mitsubishi Electric device's power OFF. Do not pull out the USB memory or turn OFF the power during access to the USB memory. Failure to observe this could cause the memory contents to be erased.

When inserting/removing a USB memory, be sure to have enough interval to perform that (about 10 seconds or more).

In case of emergency, always perform backups by having your important data duplicate, etc. as Mitsubishi Electric will not guarantee the broken or lost data.

#### ■ Precaution for operation with front-side USB memory

A USB memory to be used has to be supported USB2.0 Hi-Speed (480 Mbps).

When connecting the USB memory, connect it directly without using the extension cable or USB hub.

Machine vibration may cause the USB memory to fall out depending on environment. Therefore, the operation with the front-side USB memory is required to be performed on your own responsibility.

### 4.18.2 SD Interface (Memory I/F card)

<b>Standards</b>	SD/SDHC (*1)
<b>Transfer speed</b>	According to the connecting SD card
<b>Maximum capacity</b>	32 GB
<b>Number of free ports</b>	Front × 1, Rear × 1

(\*1) SDXC is not supported.

#### ■ Precautions for use of commercially available SD card

Mitsubishi Electric will not provide performance guarantee and maintenance for commercially available SD card, mini SD card or micro SD card (requires converting adapter). When any of them is to be used, careful performance check must be required by the machine tool builder.

Commercially available devices may not be compatible with Mitsubishi Electric units or suitable FA environment for temperature- or noise-wise.

#### ■ Precautions for insertion/removal of SD card

When inserting/removing an SD card, turn the Mitsubishi Electric device's power OFF. Do not pull out the card or turn OFF the power during access to the SD card. Failure to observe this could cause the memory contents to be erased.

In case of emergency, always perform backups by having your important data duplicate, etc. as MITSUBISHI will not guarantee the broken or lost data.

### 4.18.3 LAN Interface (Control Unit)

<b>Standards</b>	100BASE-TX/10BASE-T
<b>Data transfer speed (*1)</b>	100 Mbps/10 Mbps
<b>Number of free ports</b>	Control unit × 2

(\*1) Data transfer speed is the theoretical value on the standard, and the actual speed will be inferior to the value listed above. The transfer speed may be restrained depending on the specification of the connected device.

#### ■ Note

(1) When half-duplex communication is made, the response time may become long depending on the connected device. Use full-duplex communication to connect with the opposite device via a switching HUB.

#### ■ Precautions for selection of LAN cable

Make sure to select the LAN cables which are "category 5e or above" and "shielded". Cable wire material with double shielded, which is appropriate for FA environment., is recommended.



## Revision History

Date of revision	Manual No.	Revision details
Mar. 2021	IB(NA)1501611-A	The first edition was created.
Jul. 2021	IB(NA)1501611-B	Contents were revised to correspond to Mitsubishi Electric CNC M800VS/M80V Series. Part "M800VS/M80V Series Hardware" was added. Other mistakes were corrected.

# Global Service Network

## AMERICA

### **MITSUBISHI ELECTRIC AUTOMATION INC. (AMERICA FA CENTER)**

#### **Central Region Service Center (Chicago)**

500 CORPORATE WOODS PARKWAY, VERNON HILLS, ILLINOIS 60061, U.S.A.  
TEL: +1-847-478-2500 / FAX: +1-847-478-2650

**Minneapolis, MN Service Satellite**  
**Detroit, MI Service Satellite**  
**Grand Rapids, MI Service Satellite**  
**Lima, OH Service Satellite**  
**Cleveland, OH Service Satellite**  
**Indianapolis, IN Service Satellite**  
**St. Louis, MO Service Satellite**

#### **South/East Region Service Center (Georgia)**

1845 SATELLITE BOULEVARD STE. 450, DULUTH, GEORGIA 30097, U.S.A.  
TEL +1-678-258-4529 / FAX +1-678-258-4519

**Charleston, SC Service Satellite**  
**Charlotte, NC Service Satellite**  
**Raleigh, NC Service Satellite**  
**Dallas, TX Service Satellite**  
**Houston, TX Service Satellite**  
**Hartford, CT Service Satellite**  
**Knoxville, TN Service Satellite**  
**Nashville, TN Service Satellite**  
**Baltimore, MD Service Satellite**  
**Pittsburg, PA Service Satellite**  
**Newark, NJ Service Satellite**  
**Syracuse, NY Service Satellite**  
**Ft. Lauderdale, FL Service Satellite**  
**Lafayette, LA Service Satellite**

#### **Western Region Service Center (California)**

5900-B KATELLA AVE. - 5900-A KATELLA AVE. CYPRESS, CALIFORNIA 90630, U.S.A.  
TEL: +1-714-699-2625 / FAX: +1-847-478-2650

**San Francisco, CA Service Satellite**  
**Seattle, WA Service Satellite**  
**Denver, CO Service Satellite**

#### **Canada Region Service Center (Tronto)**

4299 14TH AVENUE MARKHAM, ONTARIO L3R 0J2, CANADA  
TEL: +1-905-754-3805 / FAX: +1-905-475-7935

**Edmonton, AB Service Satellite**  
**Montreal, QC Service Satellite**

#### **Mexico Region Service Center (Querétaro)**

Parque Tecnológico Innovación Querétaro, Lateral Carretera Estatal 431, Km 2+200, Lote 91 Modulos 1 y 2  
Hacienda la Machorra, CP 76246, El Marqués, Querétaro, México  
TEL: +52-442-153 6050

**Monterrey, NL Service Satellite**  
**Mexico City, DF Service Satellite**  
**Aguascalientes, AGS, Service Satellite**

## BRAZIL

### **MITSUBISHI ELECTRIC DO BRASIL COMÉRCIO E SERVIÇOS LTDA.**

#### **Votorantim Office**

AV. GISELE CONSTANTINO,1578, PARQUE BELA VISTA, VOTORANTIM-SP, BRAZIL CEP:18.110-650  
TEL: +55-15-3023-9000

**Blumenau Santa Catarina office**  
**MAQSERVICE – Canoas, RS Service Satellite**

## EUROPE

### **MITSUBISHI ELECTRIC EUROPE B.V.**

#### **European Service Headquarters (Dusseldorf, GERMANY)**

Mitsubishi-Electric-Platz 1 40882 RATINGEN, GERMANY  
TEL: +49-2102-486-5000 / FAX: +49-2102-486-5910

#### **South Germany Service Center (Stuttgart)**

SCHELMENWASENSTRASSE 16-20, 70567 STUTTGART, GERMANY  
TEL: + 49-711-770598-123 / FAX: +49-711-770598-141

#### **France Service Center (Paris)**

25, BOULEVARD DES BOUVETS, 92741 NANTERRE CEDEX FRANCE  
TEL: +33-1-41-02-83-13 / FAX: +33-1-49-01-07-25

#### **France Service Satellite (Lyon)**

120, ALLEE JACQUES MONOD 69800 SAINT PRIEST FRANCE  
TEL: +33-1-41-02-83-13 / FAX: +33-1-49-01-07-25

#### **Italy Service Center (Milan)**

CENTRO DIR. COLLEONI, PALAZZO SIRIO, VIALE COLLEONI 7, 20864 AGRATE BRIANZA (MB) ITALY  
TEL: +39-039-6053-342 / FAX: +39-039-6053-206

#### **Italy Service Satellite (Padova)**

VIA G. SAVELLI, 24 - 35129 PADOVA, ITALY  
TEL: +39-039-6053-342 / FAX: +39-039-6053-206

#### **U.K. Service Center**

TRAVELLERS LANE, HATFIELD, HERTFORDSHIRE, AL10 8XB, U.K.  
TEL: +49-2102-486-5000 / FAX: +49-2102-486-5910

#### **Spain Service Center**

CTRA. RUBI, 76-80 8174 SAINT CUGAT DEL VALLES, BARCELONA SPAIN  
TEL: +34-935-65-2236 / FAX: +34-935-89-1579

#### **Poland Service Center**

UL.KRAKOWSKA 50, 32-083 BALICE, POLAND  
TEL: +48-12-347-6500 / FAX: +48-12-630-4701

#### **Hungary Service Center**

MADARASZ IRODAPARK, MADARASZ VIKTOR UT 47-49, 1138 BUDAPEST, HUNGARY  
TEL: +48-12-347-6500 / FAX: +48-12-630-4701

#### **Turkey Service Center**

##### **MITSUBISHI ELECTRIC TURKEY A.Ş**

SERIFALI MAHALLESİ NUTUK SOKAK. NO.41 34775  
UMRANIYE, ISTANBUL, TURKEY  
TEL: +90-216-969-2500 / FAX: +90-216-526-3995

#### **Czech Republic Service Center**

##### **AutoCont Control Systems s.r.o (Service Partner)**

KAFKOVA 1853/3, 702 00 OSTRAVA 2, CZECH REPUBLIC  
TEL: +420-59-5691-185 / FAX: +420-59-5691-199

#### **Russia Service Center**

##### **MITSUBISHI ELECTRIC RUSSIA LLC**

LETNIKOVSKAYA STREET 2, BLD.1, 5TH 115114 MOSCOW, RUSSIA  
TEL: +7-495-721-2070 / FAX: +7-495-721-2071

#### **Sweden Service Center**

HAMMARBACKEN 14, P.O.BOX 750 SE-19127, SOLLENTUNA, SWEDEN  
TEL: +46-8-6251000 / FAX: +46-8-966877

#### **Bulgaria Service Center**

##### **AKHNATON Ltd. (Service Partner)**

4 ANDREJ LJAPCHEV BLVD. POB 21, BG-1756 SOFIA, BULGARIA  
TEL: +359-2-8176009 / FAX: +359-2-9744061

#### **Ukraine Service Center (Kiev)**

##### **CSC Automation Ltd. (Service Partner)**

4 B, YEVHENA SVERSTYUKA STR., 02002 KIEV, UKRAINE  
TEL: +380-44-494-3344 / FAX: +380-44-494-3366

#### **Belarus Service Center**

##### **TECHNIKON Ltd. (Service Partner)**

NEZAVISIMOSTI PR.177, 220125 MINSK, BELARUS  
TEL: +375-17-393-1177 / FAX: +375-17-393-0081

#### **South Africa Service Center**

##### **Adroit Technologies (Service Partner)**

20 Waterford Office Park, Waterford Drive, cnr of Witkoppen Road,  
Fourways Johannesburg South Africa  
TEL: +27-11-658-8100 / FAX: +27-11- 658-8101

**ASEAN****MITSUBISHI ELECTRIC ASIA PTE. LTD. (ASEAN FA CENTER)**

**Singapore Service Center**  
307 ALEXANDRA ROAD #05-01/02 MITSUBISHI ELECTRIC BUILDING SINGAPORE 159943  
TEL: +65-6473-2308 / FAX: +65-6476-7439

**PHILIPPINE****MELCO FACTORY AUTOMATION PHILIPPINES INC.**

**Head Office**  
128 LOPEZ RIZAL STREET, BRGY., HIGHWAY HILLS, MANDALUYONG CITY, MM PHILIPPINES 1550  
TEL: +63-2-8256-8042 / FAX: +632-8637-2294

**Philippines Service Center**  
KM.23 WEST SERVICE ROAD SSH, CUPANG ,MUNTINLUPA CITY PHILIPPINES  
TEL: +63-2-8807-0420 / FAX: +63-2-8842-5202

**VIETNAM****MITSUBISHI ELECTRIC VIETNAM CO.,LTD.**

**Vietnam Ho Chi Minh Service Center**  
11TH & 12TH FLOOR, VIETTEL TOWER B, 285 CACH MANG THANG 8 STREET, WARD 12, DISTRICT 10, HO CHI MINH CITY, VIETNAM  
TEL: +84-28-3910 5945 / FAX: +84-28-3910 5947

**Vietnam Hanoi Service Center**  
24TH FLOOR, HANDICO TOWER, PHAM HUNG ROAD, ME TRI HA, ME TRI WARD, NAM TU LIEM DISTRICT, HA NOI CITY, VIETNAM  
TEL: +84-24-3937-8075 / FAX: +84-24-3937-8076

**INDONESIA****PT. MITSUBISHI ELECTRIC INDONESIA**

**Indonesia Service Center (Cikarang)**  
JL. KENARI RAYA BLOK G2-07A, DELTA SILICON 5, LIPPO CIKARANG - BEKASI 17550, INDONESIA  
TEL: +62-21-2961-7797 / FAX: +62-21-2961-7794

**MALAYSIA****MITSUBISHI ELECTRIC SALES MALAYSIA SDN. BHD.**

**Malaysia Service Center (Kuala Lumpur Service Center)**  
LOT 11, JALAN 219, P.O BOX 1036, 46860 PETALING JAYA, SELANGOR DARUL EHSAN. MALAYSIA  
TEL: +60-3-7960-2628 / FAX: +60-3-7960-2629  
**Johor Bahru Service Satellite**

**THAILAND****MITSUBISHI ELECTRIC FACTORY AUTOMATION (THAILAND) CO.,LTD.**

**Thailand Service Center (Bangkok)**  
101, TRUE DIGITAL PARK OFFICE, 5TH FLOOR, SUKHUMVIT ROAD, BANGCHAK, PHRAKHANONG, BANGKOK, 10260 THAILAND  
TEL: +66-2-092-8600 / FAX: +66-2-043-1231-33  
**Bowin Service Center (Chonburi)**  
**Korat Service Center**

**INDIA****MITSUBISHI ELECTRIC INDIA PVT., LTD.**

**CNC Technical Center (Bangalore)**  
PLOT NO. 56, 4TH MAIN ROAD, PEENYA PHASE 3, PEENYA INDUSTRIAL AREA, BANGALORE 560058, KARNATAKA, INDIA  
TEL : +91-80-4655-2121 / FAX : +91-80-4655-2147  
**Chennai Service Satellite**  
**Coimbatore Service Satellite**  
**Hyderabad Service Satellite**

**North India Service Center (Gurgaon)**  
PLOT 517, GROUND FLOOR, UDYOG VIHAR PHASE-III, GURUGRAM 122008, HARYANA, INDIA  
TEL : +91-124-463-0300 / FAX : +91-124-463-0399

**Ludhiana Service Satellite**  
**Panth Nagar Service Satellite**  
**Delhi Service Satellite**  
**Jamshedpur Service Satellite**  
**Manesar Service Satellite**

**West India Service Center (Pune)**  
ICC-Devi GAURAV TECHNOLOGY PARK, UNIT NO.402, FOURTH FLOOR, NORTH WING, SURVEY NUMBER 191-192 (P), NEXT to INDIAN CARD CLOTHING COMPANY Ltd, OPP. VALLABH NAGAR, PIMPRI, PUNE- 411 018, MAHARASHTRA, INDIA  
TEL : +91-20-6819 2274 / FAX : +91-20-4624 2100  
**Kolhapur Service Satellite**  
**Aurangabad Service Satellite**  
**Mumbai Service Satellite**

**West India Service Center (Ahmedabad)**  
204-209, 2ND FLOOR, 31FIVE, CORPORATE ROAD PRAHLADNAGAR, AHMEDABAD -380015, GUJARAT, INDIA  
TEL : + 91-79-6777 7888  
**Rajkot Service Satellite**

**CHINA****MITSUBISHI ELECTRIC AUTOMATION (CHINA) LTD. (CHINA FA CENTER)**

**CNC Call Center**  
TEL: +86-400-921-5130

**Shanghai Service Center**

1-3,5-10,18-23/F, NO.1386 HONG QIAO ROAD, CHANG NING QU, SHANGHAI 200336, CHINA  
TEL: +86-21-2322-3030 / FAX: +86-21-2322-3000\*8422

**Qingdao Service Center****Suzhou Service Center****Wuhan Service Center****Ningbo Service Center****Hefei Service Center****Beijing Service Center****Tianjin Service Center****Xian Service Center****Dalian Service Center****Chengdu Service Center****Shenzhen Service Center**

LEVEL8, GALAXY WORLD TOWER B, 1 YABAO ROAD, LONGGANG DISTRICT, SHENZHEN 518129, CHINA  
TEL: +86-755-2399-8272 / FAX: +86-755-8229-3686

**Dongguan Service Center****Xiamen Service Center****KOREA****MITSUBISHI ELECTRIC AUTOMATION KOREA CO., LTD. (KOREA FA CENTER)**

**Korea Service Center**  
8F GANGSEO HANGANG XI-TOWER A, 401 YANGCHEON-RO, GANGSEO-GU, SEOUL 07528 KOREA  
TEL: +82-2-3660-9609 / FAX: +82-2-3664-8668  
**Korea Daegu Service Satellite**

**TAIWAN****MITSUBISHI ELECTRIC TAIWAN CO., LTD. (TAIWAN FA CENTER)**

**Taiwan Taichung Service Center**  
NO.8-1, INDUSTRIAL 16TH RD., TAICHUNG INDUSTRIAL PARK, SITUN DIST., TAICHUNG CITY 40768, TAIWAN  
TEL: +886-4-2359-0688 / FAX: +886-4-2359-0689

**Taiwan Taipei Service Center**

10F, NO.88, SEC.6, CHUNG-SHAN N. RD., SHI LIN DIST., TAIPEI CITY 11155, TAIWAN  
TEL: +886-2-2833-5430 / FAX: +886-2-2833-5433

**Taiwan Tainan Service Center**

11F-1., NO.30, ZHONGZHENG S. ROAD, YONGKANG DISTRICT, TAINAN CITY 71067, TAIWAN  
TEL: +886-6-252-5030 / FAX: +886-6-252-5031

**OCEANIA****MITSUBISHI ELECTRIC AUSTRALIA PTY. LTD.**

**Oceania Service Center**  
348 VICTORIA ROAD, RYDALMERE, N.S.W. 2116 AUSTRALIA  
TEL: +61-2-9684-7269/ FAX: +61-2-9684-7245

**Notice**

Every effort has been made to keep up with software and hardware revisions in the contents described in this manual. However, please understand that in some unavoidable cases simultaneous revision is not possible. Please contact your Mitsubishi Electric dealer with any questions or comments regarding the use of this product.

**Duplication Prohibited**

This manual may not be reproduced in any form, in part or in whole, without written permission from Mitsubishi Electric Corporation.

COPYRIGHT 2021 MITSUBISHI ELECTRIC CORPORATION ALL RIGHTS RESERVED

# MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BLDG.,2-7-3 MARUNOUCHI,CHIYODA-KU,TOKYO 100-8310,JAPAN

MODEL	M800V/M80V Series
MODEL CODE	100-742
Manual No.	IB-1501611